

ILLUSTRATION BOOKLET

PARTS PICTORIAL

A1



A2



B1




ALWAYS IDENTIFY AN I.C. BY THE
PART NUMBER OR TYPE NUMBER
NOTE: THE STYLE MAY BE SLIGHTLY
DIFFERENT THAN SHOWN.


C1




C2

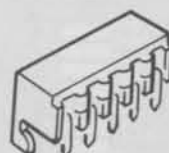


C3

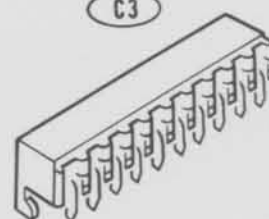

C4

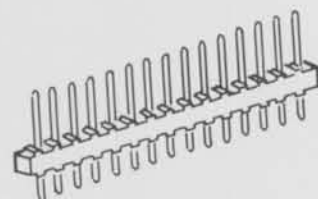


C5

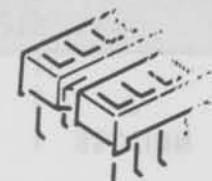


ALWAYS IDENTIFY AN I.C. SOCKET
BY COUNTING ITS PINS.
NOTE: THE STYLE MAY BE SLIGHTLY
DIFFERENT THAN SHOWN.


C6

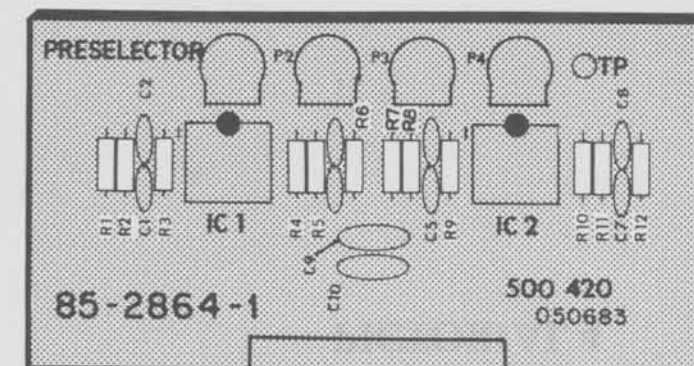


PICTORIAL 1

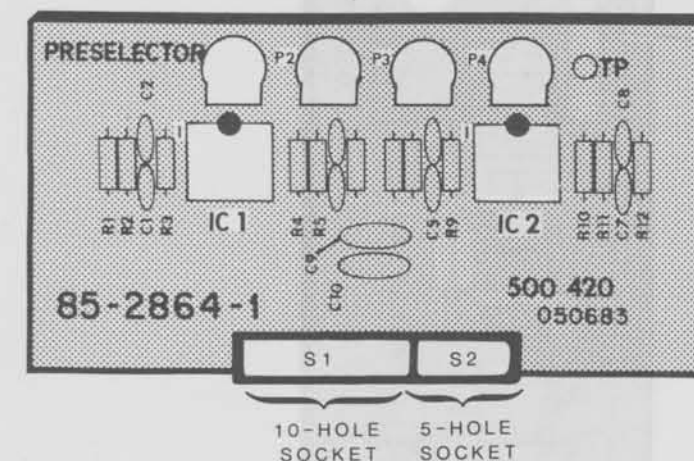


PICTORIAL 2

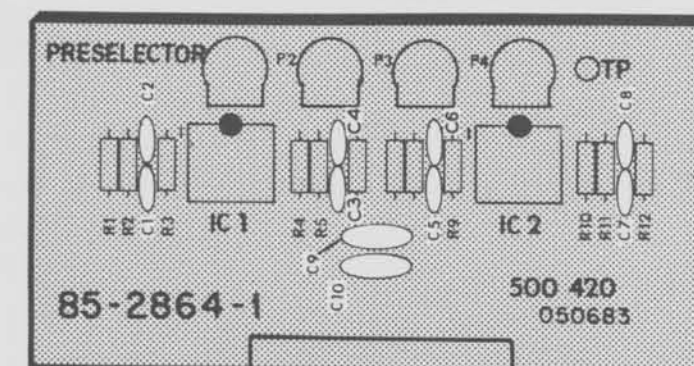


PICTORIAL 3

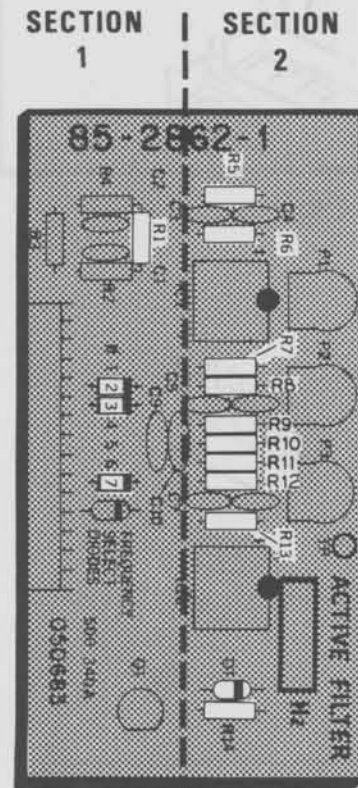

PICTORIAL 2

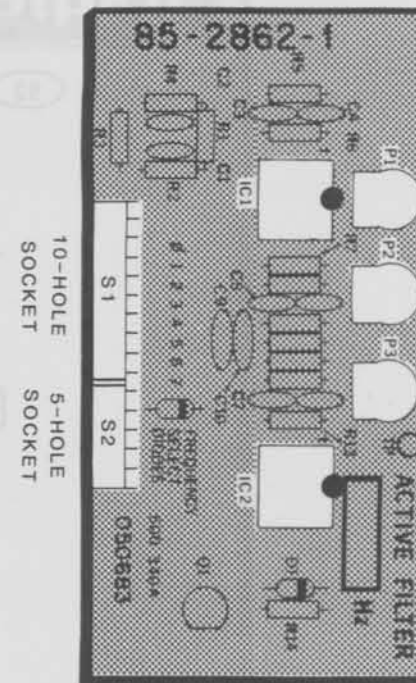


PICTORIAL 3

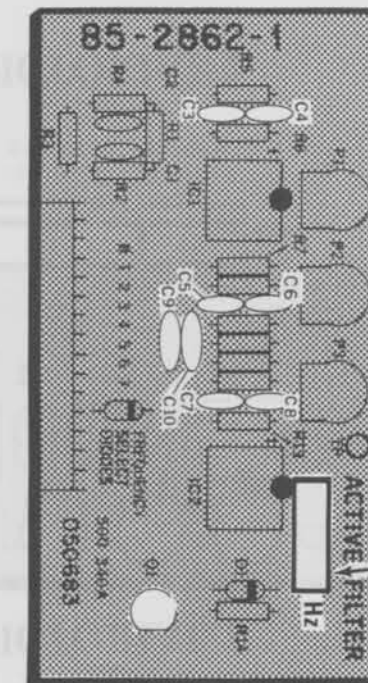


MARK
"2550"
OR
"2975"
HERE


PICTORIAL 4

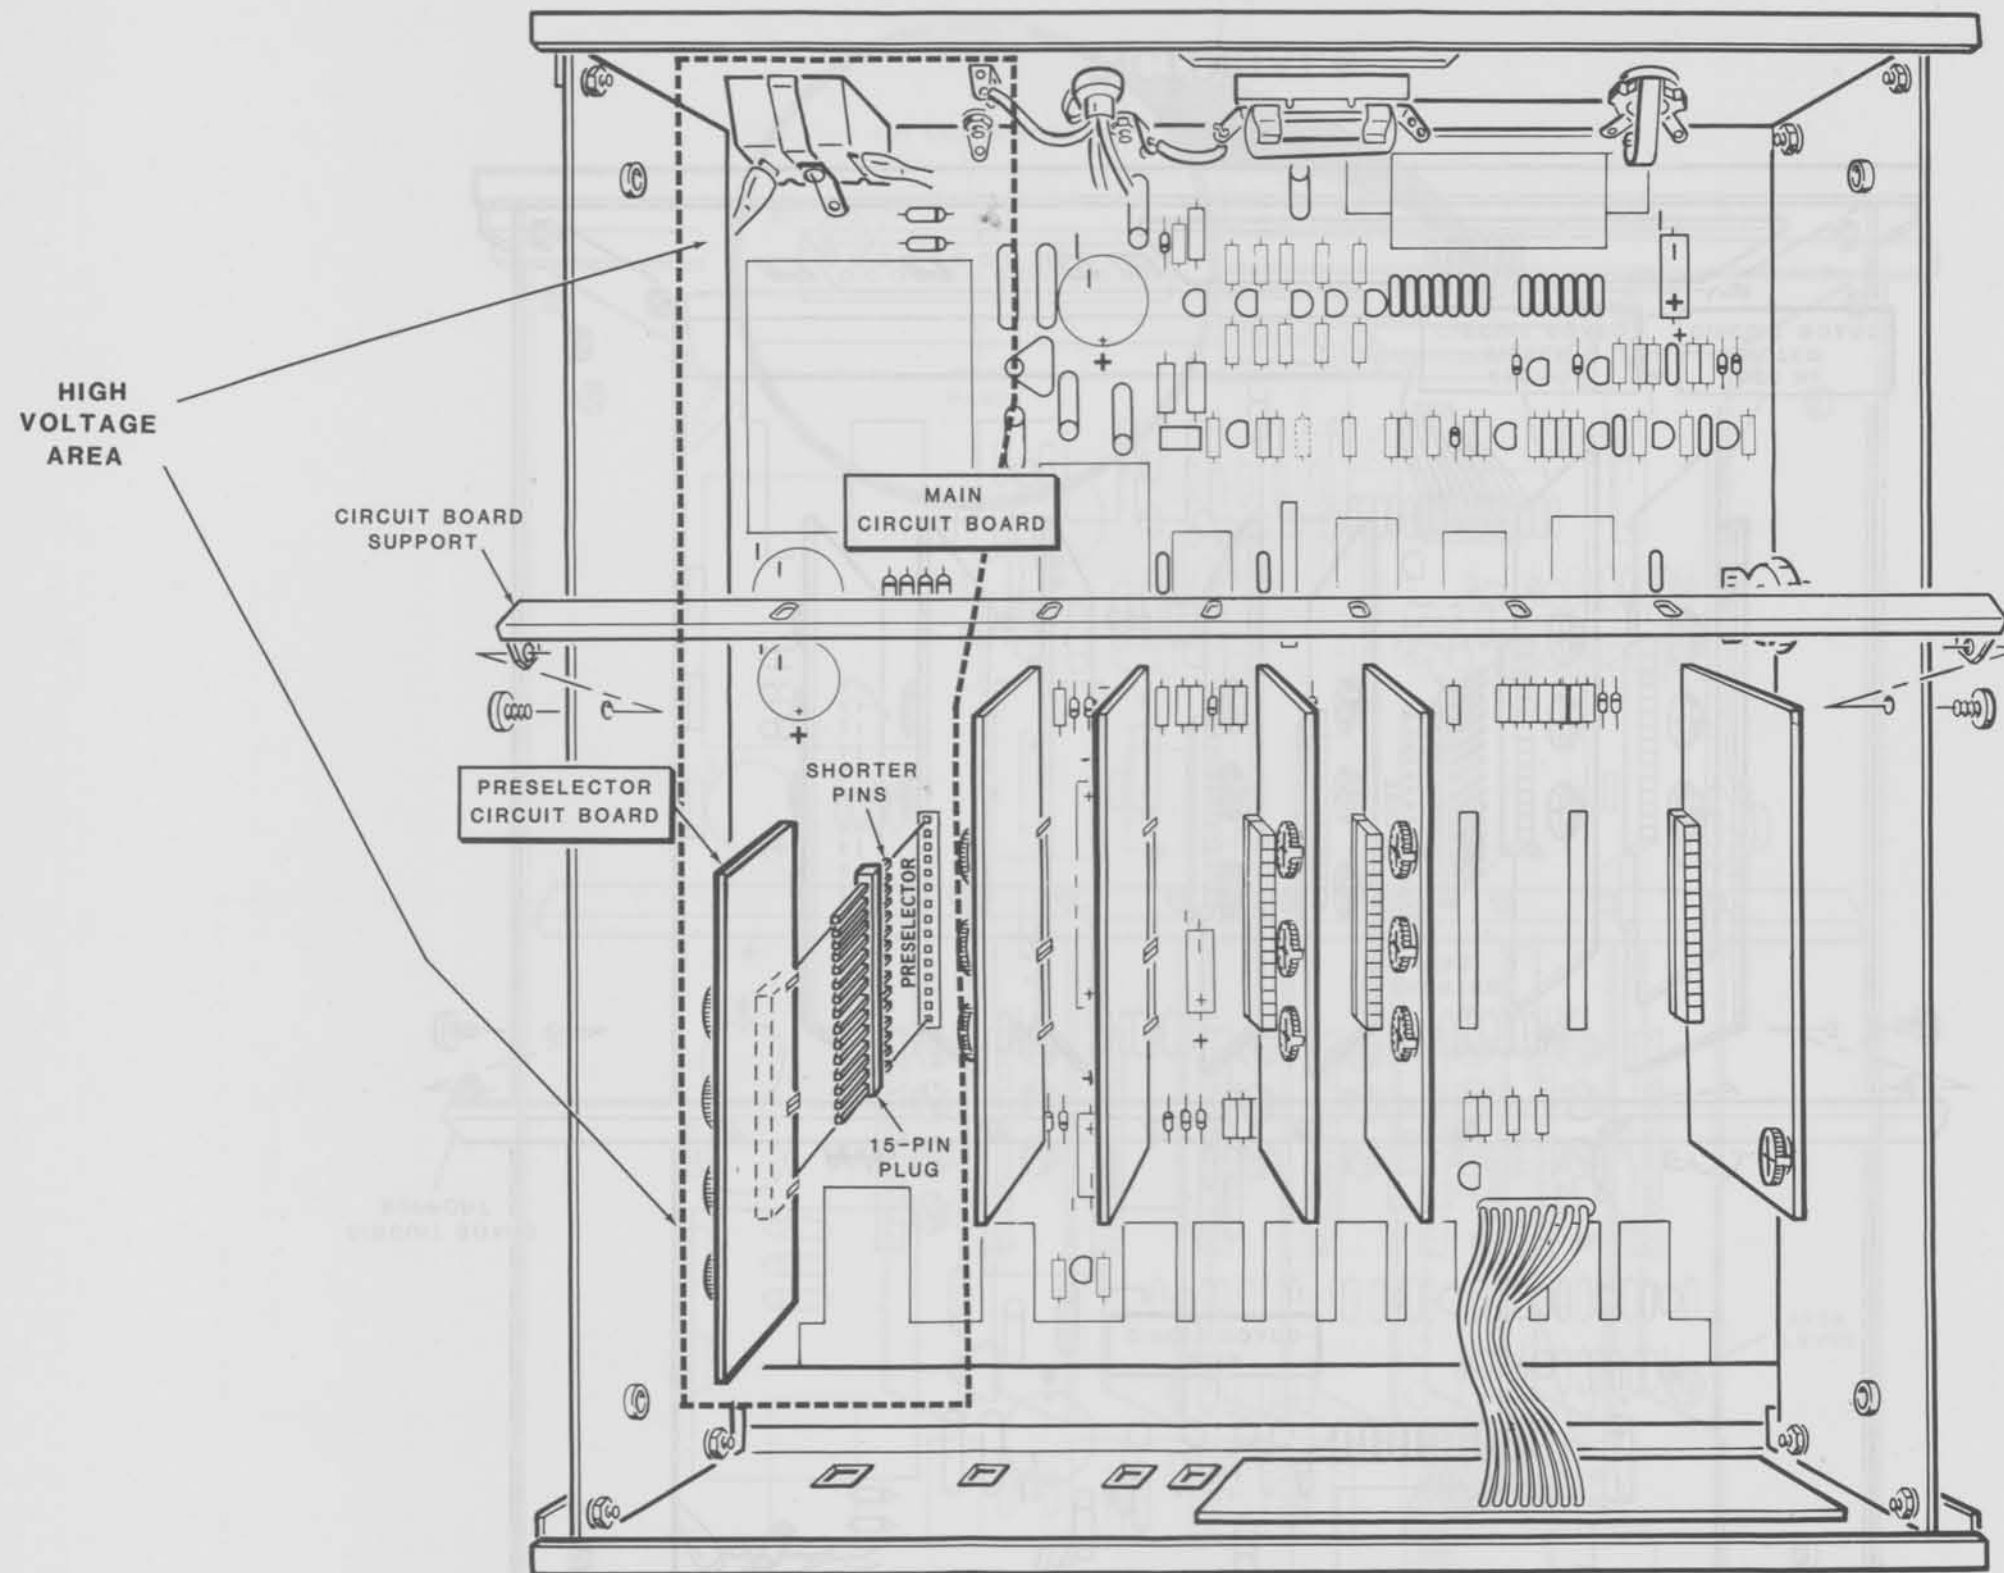


PICTORIAL 5

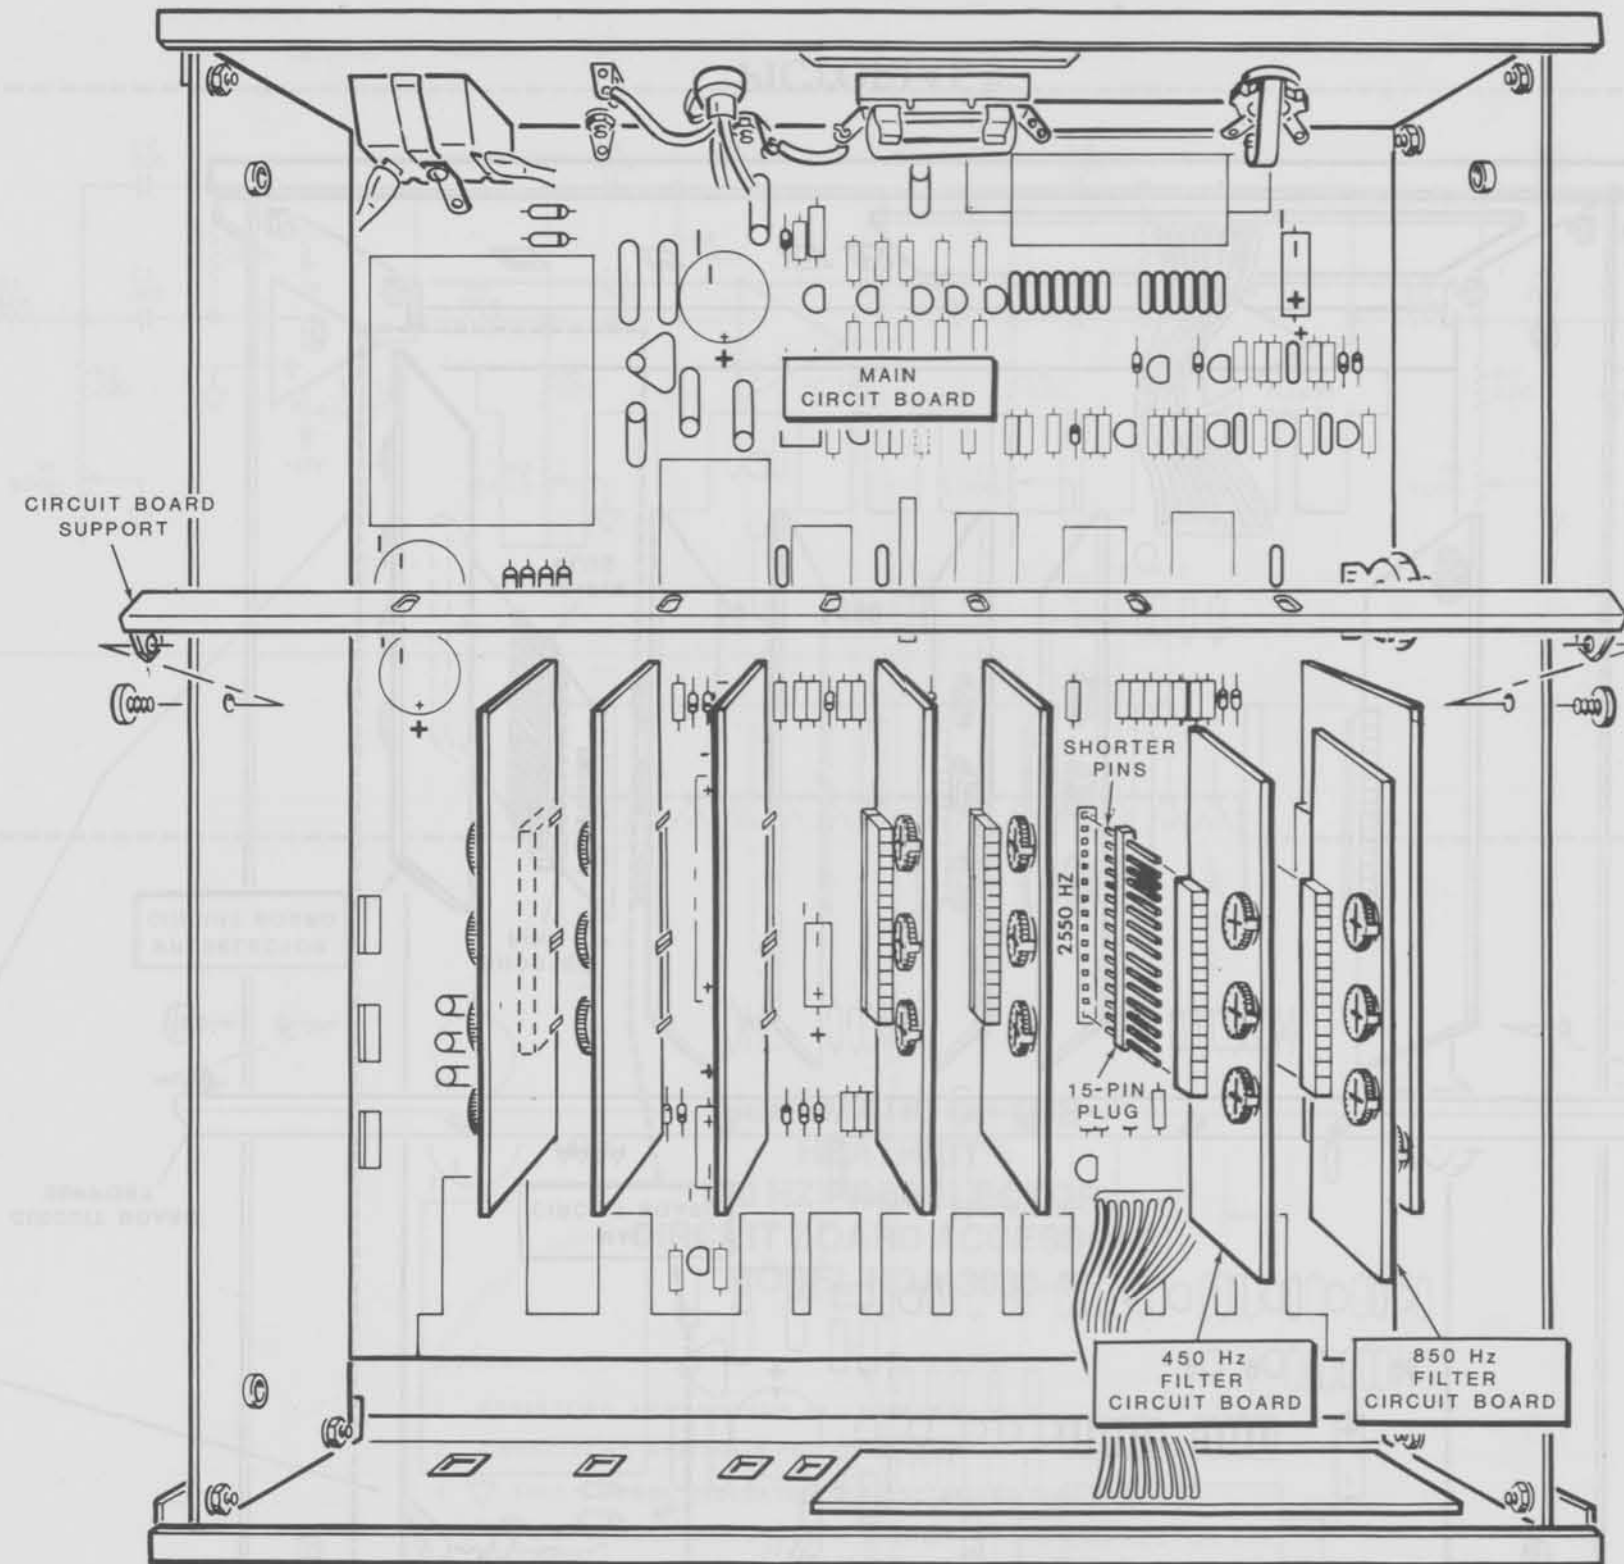

PICTORIAL 6

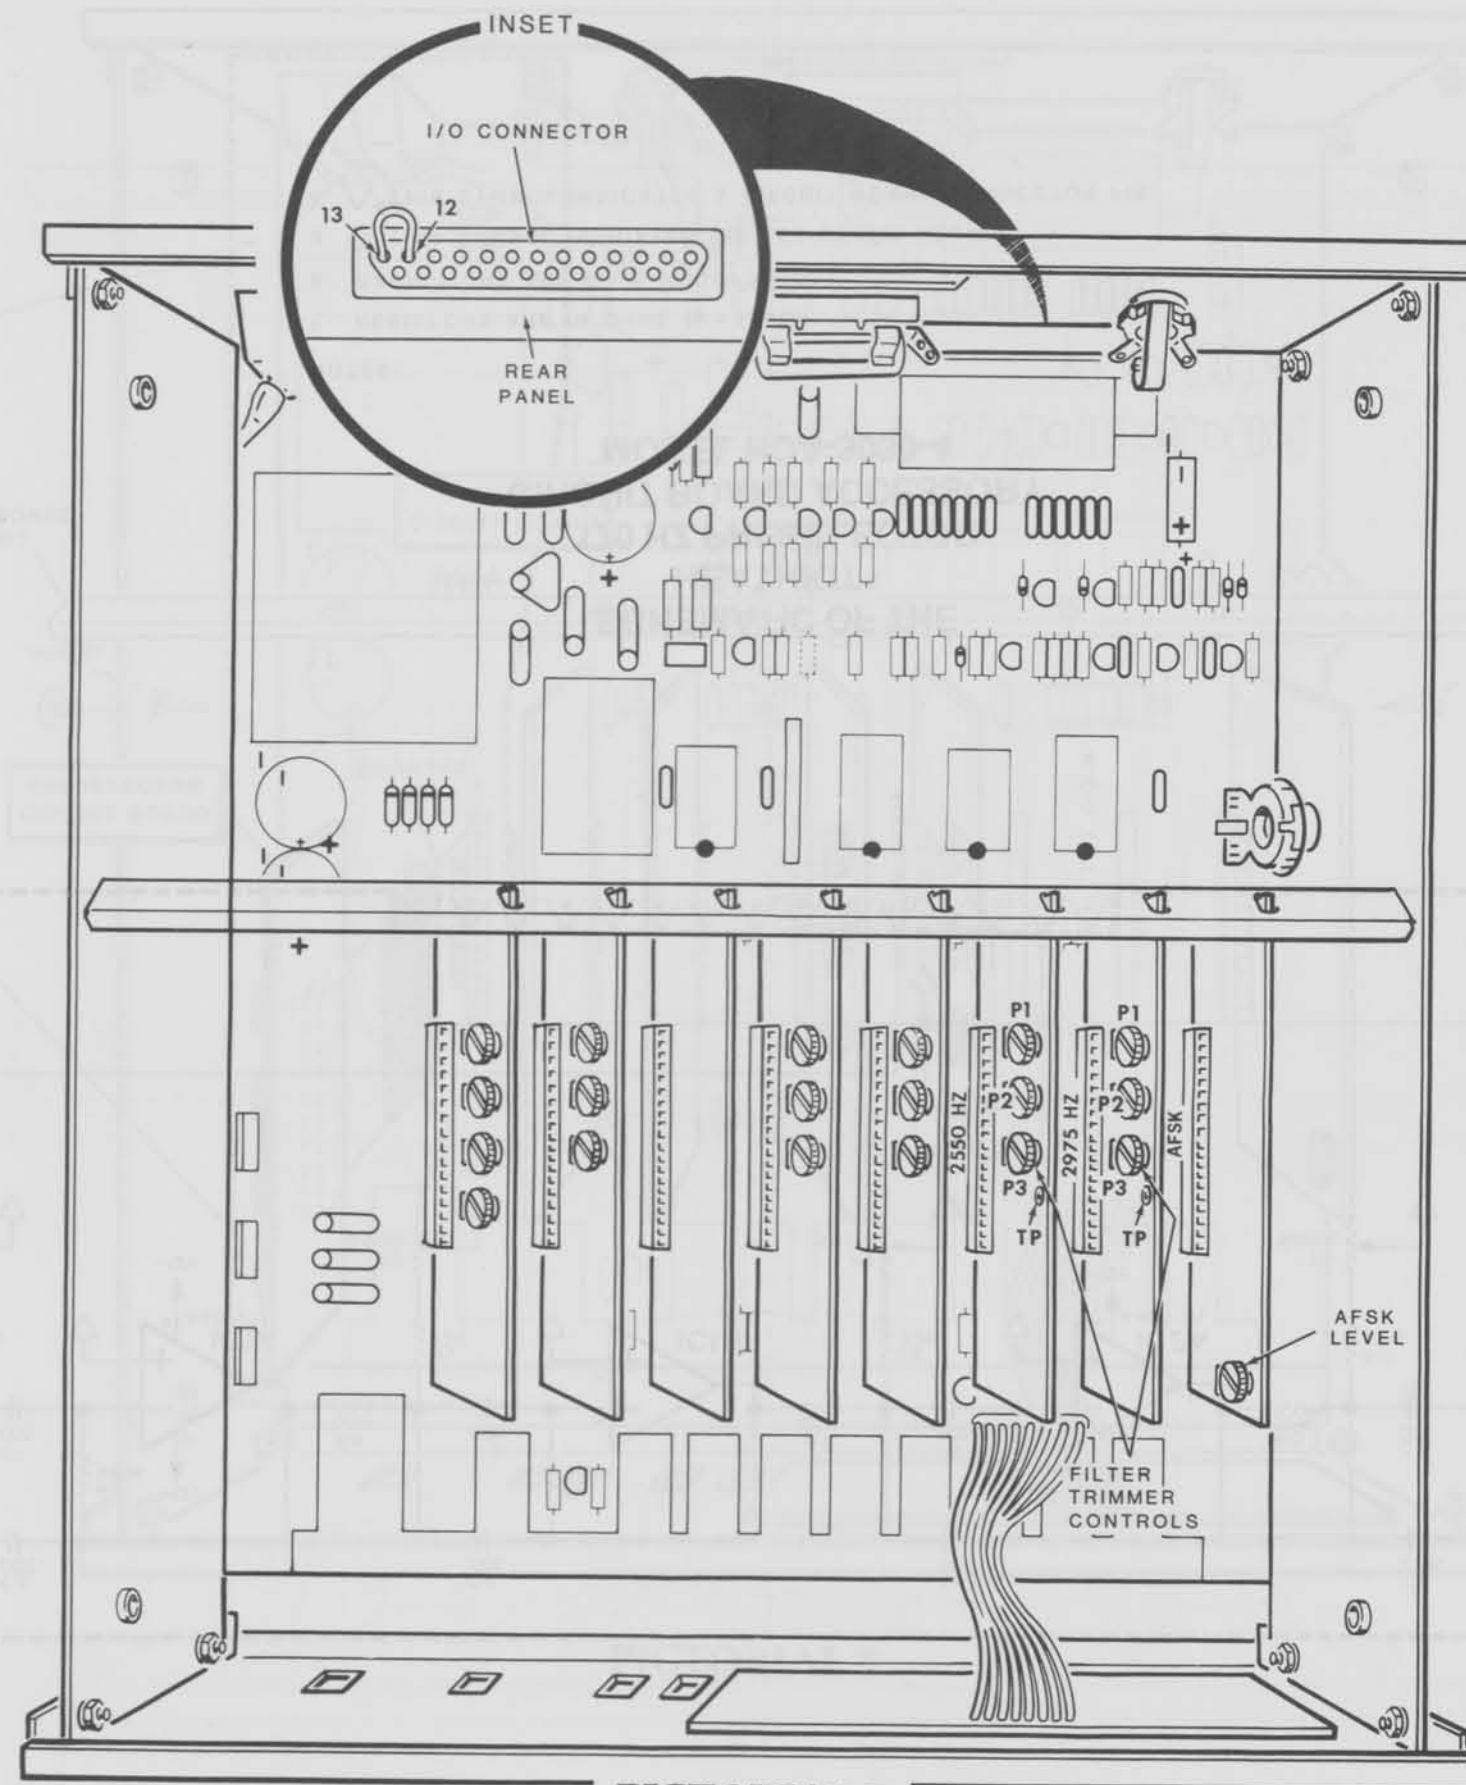

PICTORIAL 7

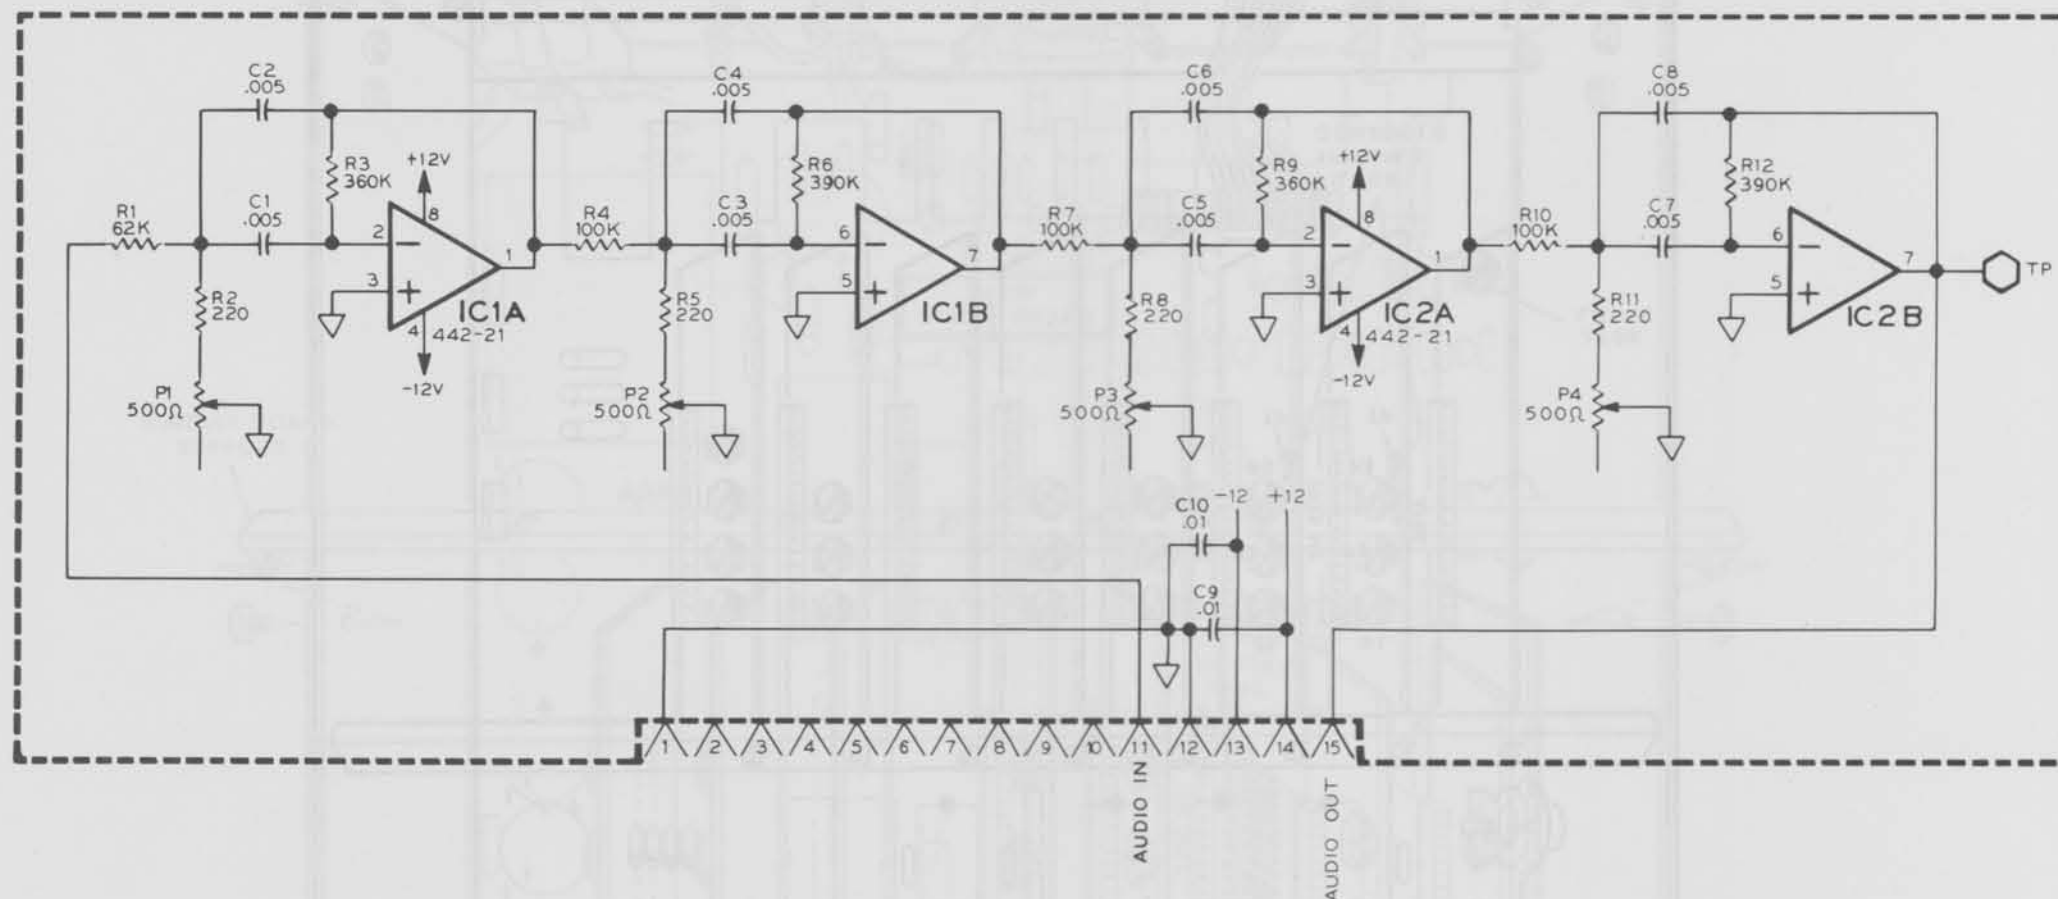

**SCHEMATIC OF THE
HEATHKIT®
170 HZ PRESELECTOR
CIRCUIT BOARD ACCESSORY
MODEL HDA-3030-4**

NOTES:

1. RESISTORS ARE IN OHMS (K = 1000).
2. CAPACITORS ARE IN μ F (MICROFARADS).
3. ∇ THIS SYMBOL INDICATES CIRCUIT BOARD GROUND.
4. $\wedge$ THIS SYMBOL INDICATES A CIRCUIT BOARD CONNECTOR PIN.