

Sales Copy

UNCLASSIFIED

TECHNICAL MANUAL  
*for*  
TECHNIMATIC LINEAR AMPLIFIER  
MODEL ATLA-2.5K




THE TECHNICAL MATERIEL CORPORATION  
MARONECK, N.Y.

OTTAWA, ONTARIO



## NOTICE

THE CONTENTS AND INFORMATION CONTAINED IN THIS INSTRUCTION MANUAL IS PROPRIETARY TO THE TECHNICAL MATERIEL CORPORATION TO BE USED AS A GUIDE TO THE OPERATION AND MAINTENANCE OF THE EQUIPMENT FOR WHICH THE MANUAL IS ISSUED AND MAY NOT BE DUPLICATED EITHER IN WHOLE OR IN PART BY ANY MEANS WHATSOEVER WITHOUT THE WRITTEN CONSENT OF THE TECHNICAL MATERIEL CORPORATION.

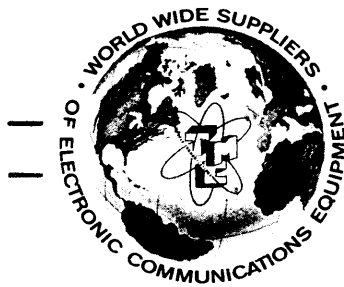

# THE TECHNICAL MATERIEL CORPORATION

C O M M U N I C A T I O N S   E N G I N E E R S

700 FENIMORE ROAD

MAMARONECK, N. Y.

## W a r r a n t y

The Technical Materiel Corporation, hereinafter referred to as TMC, warrants the equipment (except electron tubes,\*fuses, lamps, batteries and articles made of glass or other fragile or other expendable materials) purchased hereunder to be free from defect in materials and workmanship under normal use and service, when used for the purposes for which the same is designed, for a period of one year from the date of delivery F.O.B. factory. TMC further warrants that the equipment will perform in a manner equal to or better than published technical specifications as amended by any additions or corrections thereto accompanying the formal equipment offer.

TMC will replace or repair any such defective items; F.O.B. factory, which may fail within the stated warranty period, PROVIDED:

1. That any claim of defect under this warranty is made within sixty (60) days after discovery thereof and that inspection by TMC, if required, indicates the validity of such claim to TMC's satisfaction.
2. That the defect is not the result of damage incurred in shipment from or to the factory.
3. That the equipment has not been altered in any way either as to design or use whether by replacement parts not supplied or approved by TMC, or otherwise.
4. That any equipment or accessories furnished but not manufactured by TMC, or not of TMC design shall be subject only to such adjustments as TMC may obtain from the supplier thereof.

Electron tubes\*furnished by TMC, but manufactured by others, bear only the warranty given by such other manufacturers. Electron tube warranty claims should be made directly to the manufacturer of such tubes.

TMC's obligation under this warranty is limited to the repair or replacement of defective parts with the exceptions noted above.

At TMC's option any defective part or equipment which fails within the warranty period shall be returned to TMC's factory for inspection, properly packed with shipping charges prepaid. No parts or equipment shall be returned to TMC, unless a return authorization is issued by TMC.

No warranties, express or implied, other than those specifically set forth herein shall be applicable to any equipment manufactured or furnished by TMC and the foregoing warranty shall constitute the Buyers sole right and remedy. In no event does TMC assume any liability for consequential damages, or for loss, damage or expense directly or indirectly arising from the use of TMC Products, or any inability to use them either separately or in combination with other equipment or materials or from any other cause.

\*Electron tubes also include semi-conductor devices.

### *PROCEDURE FOR RETURN OF MATERIAL OR EQUIPMENT*

Should it be necessary to return equipment or material for repair or replacement, whether within warranty or otherwise, a return authorization must be obtained from TMC prior to shipment. The request for return authorization should include the following information:

1. Model Number of Equipment.
2. Serial Number of Equipment.
3. TMC Part Number.
4. Nature of defect or cause of failure.
5. The contract or purchase order under which equipment was delivered.

### *PROCEDURE FOR ORDERING REPLACEMENT PARTS*

When ordering replacement parts, the following information must be included in the order as applicable:

1. Quantity Required.
2. TMC Part Number.
3. Equipment in which used by TMC or Military Model Number.
4. Brief Description of the Item.
5. The *Crystal Frequency* if the order includes crystals.

### *PROCEDURE IN THE EVENT OF DAMAGE INCURRED IN SHIPMENT*

TMC's Warranty specifically excludes damage incurred in shipment to or from the factory. In the event equipment is received in damaged condition, the carrier should be notified immediately. Claims for such damage should be filed with the carrier involved and not with TMC.

All correspondence pertaining to Warranty Claims, return, repair, or replacement and all material or equipment returned for repair or replacement, within Warranty or otherwise, should be addressed as follows:

THE TECHNICAL MATERIEL CORPORATION  
Engineering Services Department  
700 Fenimore Road  
Mamaroneck, New York



## LOGISTICS

### 1. MATERIAL HANDLING.

Whether the equipment is crated or uncrated, various precautions must be observed in material handling.

#### CAUTION

Crates must never be rolled, crushed, dropped, or struck-- they contain delicate electronic apparatus that can be damaged.

General safety precautions should be adhered to when moving the equipment to prevent injury to personnel or damage to equipment. Weight alone is not an indication that equipment can be moved safely by personnel; size is also an important consideration. A light-weight, large, and bulky item cannot easily be handled by one man. When personnel are involved in handling, a good rule-of thumb to follow is: 50 pounds for one man, or 100 pounds for two men. These weights are considered a safe limit for carrying. When lifting an item, bend the knees, keep back straight and lift with the legs.

### 2. PACKAGING DATA.

The 2.5K transmitter is packed in 5 crates (not including running spares). Each crate is assigned a number from one to five and appears on the crate. Physically locate crate 1 closest to the intended point of installation; locate the other crates according to their numerical sequence, such that crate 5 is placed farthest away from crate 1. Arranging crates in this manner makes unpacking and assembling the transmitter easier.

The transmitter is cleaned, preserved, packaged, and marked in accordance with MIL-P-116, PMD-40, and MIL-STD-129.

### 3. EQUIPMENT INSPECTION AND DAMAGE.

The 2.5K transmitter has been assembled, calibrated, and tested at the factory before shipment. Inspect all packages for possible transit damage. While following the procedural installation instructions, carefully unpack each crate as indicated; inspect all packing material for parts that may have been shipped as loose items.

With respect to equipment damage for which the carrier is liable, The Technical Materiel Corporation will assist in describing methods of repair and the furnishing of replacement parts.

### 4. UNCRATING METHODS.

The following uncrating methods must be adhered to when unpacking the transmitter to prevent equipment damage. Keep in mind the information previously discussed on material handling, packaging data, and equipment inspection.

- a. Remove wire straps or bands from around crates with pair of snips.
- b. Unless otherwise specified, remove nails from three sides of the crates with a nail puller. Do not use claw hammer or pinch bar.
- c. Carefully remove sides of crate, then rip off moisture-proof paper. If a knife is used, care should be exercised not to mar equipment.
- d. If equipment is not packed in cardboard carton, it may be removed from crate as prescribed in installation procedure.
- e. If after removing moisture-proof paper a cardboard carton is encountered, carefully open with case cutter.
- f. Where applicable, remove the following:
  - (1) Creased cardboard blocking pieces
  - (2) Barrier bags
  - (3) Tape
  - (4) Molded cushioning

(5) Cellulose wadding

(6) Tissue paper

g. An inventory of the equipment should be made at this time. As parts are unpacked, they should be marked off on the packing list or equipment supplied list. If anything is damaged, refer to paragraph 1-3.

# TABLE OF CONTENTS

| <u>Paragraph</u>                      |   | <u>Page</u> |
|---------------------------------------|---|-------------|
| <u>SECTION 1- GENERAL INFORMATION</u> |   |             |
| 1-1                                   | Purpose of Equipment.....                 | 1-1         |
| 1-2                                   | Equipment Make-Up.....                    | 1-1         |
| 1-3                                   | Description of Equipment.....             | 1-2         |
|                                       | a. General.....                           | 1-2         |
|                                       | b. RF Control and Indicator, SWCA-3K....  | 1-2         |
|                                       | c. Linear Amplifier, TLAA-2.5K.....       | 1-2         |
|                                       | d. Low Voltage Power Supply, AP-128/50..  | 1-2         |
|                                       | e. High Voltage Power Supply, AP-129/50.  | 1-3         |
|                                       | f. Linear Amplifier Control Panel, TCP-1. | 1-3         |
|                                       | g. Alarm Panel, AX633.....                | 1-3         |
|                                       | h. Servo Amplifier Assembly, TCSA-1....   | 1-3         |
|                                       | i. Preposition Panel, AX631.....          | 1-4         |
| 1-4                                   | Technical Characteristics.....            | 1-5         |
| <u>SECTION 2 - INSTALLATION</u>       |   |             |
| 2-1                                   | Initial Inspection.....                   | 2-1         |
| 2-2                                   | Assembly of Linear Amplifier.....         | 2-1         |
| 2-3                                   | Power Requirements.....                   | 2-1         |
| 2-4                                   | Installation Procedures.....              | 2-2         |
| 2-5                                   | Pre-operational Checkout.....             | 2-18        |
| <u>SECTION 3 -OPERATOR'S SECTION</u>  |   |             |
| 3-1                                   | General.....                              | 3-1         |
| 3-2                                   | Operating Procedure .....                 | 3-1         |
|                                       | a. Manual Tuning.....                     | 3-1         |
|                                       | b. Servo Tuning .....                     | 3-2         |
|                                       | c. Remote Servo Tuning .....              | 3-3         |

TABLE OF CONTENTS (CON'T)

| <u>Paragraph</u>                           |   | <u>Page</u> |
|--|---|-------------|
| <u>SECTION 4 - PRINCIPLES OF OPERATION</u> |   |             |
| 4-1  | General . . . . .   | 4-1         |
| 4-2  | Functional Analysis . . . . .                                 | 4-1         |
|  | a. General . . . . .  | 4-1         |
|  | b. Block Diagram Analysis . . . . .                           | 4-1         |
| 4-3  | Technimatic Circuit Analysis . . . . .                        | 4-6         |
|  | a. 2nd Ampl Servo Amplifiers (AZ110) . .                      | 4-8         |
|  | b. PA Tune Servo Amplifiers (AZ112) . .                       | 4-10        |
|  | c. PA Load Servo Amplifiers (AZ111) . .                       | 4-12        |
| <u>SECTION 5 - MAINTENANCE</u>             |   |             |
| 5-1  | Preventive Maintenance . . . . .                              | 5-1         |
| 5-2  | Troubleshooting . . . . .                                     | 5-2         |
|  | a. Preliminary Electrical Inspection . .                      | 5-6         |
|  | b. Circuit Fusing Checks . . . . .                            | 5-6         |
|  | c. Protective Interlock System . . . . .                      | 5-7         |
|  | d. Protective Relay Checks . . . . .                          | 5-8         |
|  | e. High Voltage Removal Protective<br>Circuit Check . . . . . | 5-8         |
|  | f. Parasitic Check . . . . .                                  | 5-9         |
|  | g. Overload Adjustments . . . . .                             | 5-9         |
| 5-3  | Repair and Replacement . . . . .                              | 5-10        |
| <u>SECTION 6 - PARTS LIST</u>              |   |             |
| 6-1  | Introduction . . . . .  | 6-1         |
| <u>SECTION 7 - SCHEMATIC DIAGRAMS</u>      |   |             |

## LIST OF TABLES


| <u>Table</u>                           |   | <u>Page</u> |
|--|---|-------------|
| <u>SECTION 1 - GENERAL INFORMATION</u> |   |             |
| 1-1                                    | Major Components.....                           | 1-6         |
| 1-2                                    | Electron Tube and Transistor Complement, ATLA.. | 1-6         |
| <u>SECTION 2 - INSTALLATION</u>        |   |             |
| 2-1                                    | Load Pre-position Adjustments, ATLA.....        | 2-23        |
| <u>SECTION 3 - OPERATOR'S SECTION</u>  |   |             |
| 3-1                                    | Controls and Indicators, ATLA.....              | 3-4         |
| 3-2                                    | Sample Tuning Chart, ATLA.....                  | 3-9         |
| <u>SECTION 5 - MAINTENANCE</u>         |   |             |
| 5-1                                    | Fuse Functions, ATLA.....                       | 5-4         |

## LIST OF ILLUSTRATIONS

| <u>Figure</u>                          |   | <u>Page</u> |
|--|---|-------------|
| <u>SECTION 1 - GENERAL INFORMATION</u> |   |             |
| 1-1                                    | Technimatic Linear Amplifier,<br>Model ATLA-2.5K.....         | 1-0         |
| <u>SECTION 2 - INSTALLATION</u>        |   |             |
| 2-1                                    | Power Input Component Locations.....                          | 2-4         |
| 2-2                                    | Three-Phase Power Input Wiring Diagram.....                   | 2-8         |
| 2-3                                    | Outline Dimensional Diagram.....                              | 2-9         |
| 2-4                                    | Interconnect Wiring Diagram, ATLA-2.5K.....                   | 2-10/2-11   |
| 2-5                                    | Interconnect Wiring Diagram, ATLA-2.5K<br>(Sheet 1 of 3)..... | 2-13/2-13   |
| 2-5                                    | Interconnect Wiring Diagram, ATLA-2.5K<br>(Sheet 2 of 3)..... | 2-14/2-15   |
| 2-5                                    | Interconnect Wiring Diagram, ATLA-2.5K<br>(Sheet 3 of 3)..... | 2-16/2-17   |
| 2-6                                    | Location of Adjustment Potentiometers, SWCA....               | 2-23        |

## LIST OF ILLUSTRATIONS (CONT)

| <u>Figure</u>                             |   | <u>Page</u> |
|---|---|-------------|
| <u>SECTION 3 - OPERATOR'S SECTION</u>     |   |             |
| 3-1                                       | Controls and Indicators, ATLA.....                | 3-10        |
| <u>SECTION 4- PRINCIPLES OF OPERATION</u> |   |             |
| 4-1                                       | Simplified Functional Block Diagram, ATLA.....    | 4-4/4-5     |
| 4-2                                       | Second Servo Amplifier AZ110, Circuit Diagram..   | 4-15/4-16   |
| 4-3                                       | PA Tune Servo Amplifier AZ112, Circuit Diagram.   | 4-17/4-18   |
| 4-4                                       | PA Load Servo Amplifier AZ111, Circuit Diagram.   | 4-19/4-20   |
| <u>SECTION 5 - MAINTENANCE</u>            |   |             |
| 5-1                                       | Fuse Functions, ATLA.....                         | 5-5         |
| <u>SECTION 7- SCHEMATIC DIAGRAMS</u>      |   |             |
| 7-1                                       | Schematic Diagram, AX631.....                     | 7-2         |
| 7-2                                       | Schematic Diagram, TCP-1.....                     | 7-3/7-4     |
| 7-3                                       | Schematic Diagram, TLAA-2.5K.....                 | 7-5/7-6     |
| 7-4                                       | Schematic Diagram, AX633.....                     | 7-7/7-8     |
| 7-5                                       | Schematic Diagram, AP-128/50.....                 | 7-9/7-10    |
| 7-6                                       | Schematic Diagram, AP-129/50.....                 | 7-11/7-12   |
| 7-7                                       | Schematic Diagram, SWCA-3K<br>(Sheet 1 of 2)..... | 7-13/7-14   |
| 7-7                                       | Schematic Diagram, SWCA-3K<br>(Sheet 2 of 2)..... | 7-15/7-16   |

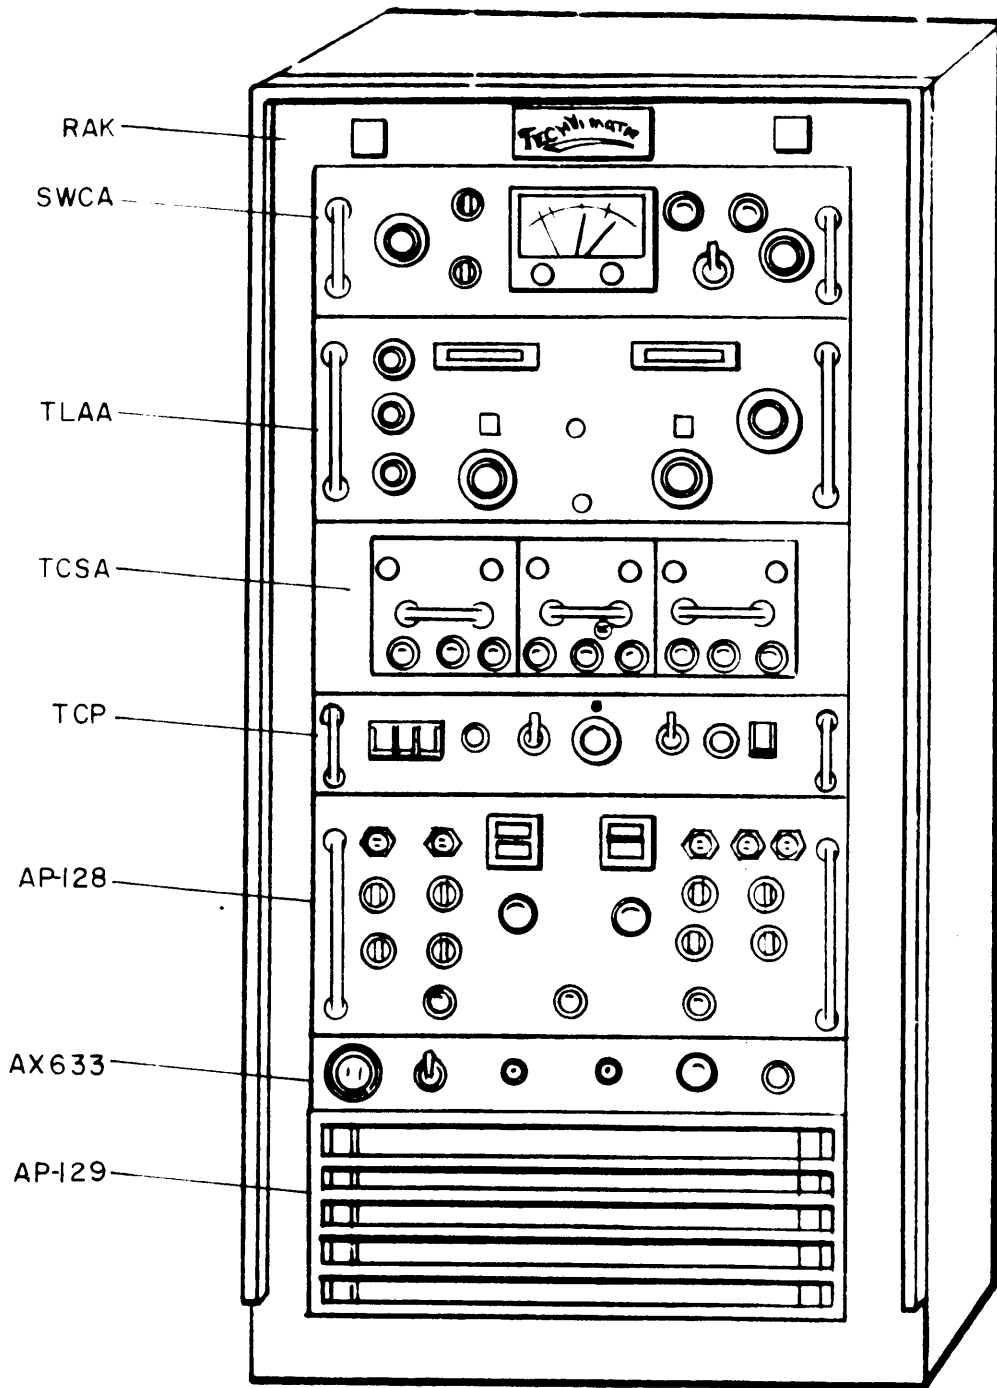

NOTE:  
AX631 IS EXTERNALLY LOCATED



359-1

Figure 1-1. Technimatic Linear Amplifier, Model ATLA-2.5K

# SECTION 1

## GENERAL INFORMATION

### 1-1. PURPOSE OF EQUIPMENT.

TechniMatiC\* Linear Amplifier, Model ATLA-2.5K (figure 1-1) is a general purpose transmitter that delivers 2,500 watts peak envelope power (PEP) for a two-tone signal, or 2,500 watts average power for a one tone signal, throughout the 2- to 30 megacycle range. The ATLA will accept either unmodulated excitation or any type of modulation occupying up to 12 kc of r-f spectrum. Operating modes of the ATLA are dependent on the capabilities of the associated exciter. These modes are as follows:

- (1) Four-channel independent sideband (ISB) (separate intelligence on each sideband) with suppressed or any degree of carrier.
- (2) Single sideband (SSB) with suppressed or any degree of carrier.
- (3) AM or AME operation.
- (4) Frequency-shift telegraphy (FSK).
- (5) CW keying (telegraphy).
- (6) Facsimile (FAX).
- (7) Twinplex Telegraphy (F6).
- (8) Multiplex Tone Telegraphy.

### 1-2. EQUIPMENT MAKE-UP.

The ATLA major components are listed in table 1-1. See figure 1-1 for physical mounting locations, and paragraph 1-3 for description of equipment.

\*Trademark applied for

### 1-3. DESCRIPTION OF EQUIPMENT

a. GENERAL. - The cabinet, RAK-111-2A, houses all the components comprising the ATLA. The r-f output from the TLAA is fed to the directional coupler mounted on the upper rear right-hand portion of the cabinet; heavy power supply components are bolted at the bottom where the primary power connections are also made.

b. RF CONTROL AND INDICATOR, SWCA-3K - The SWCA contains the d-c controlled rotary solenoids for bandswitching. The unit also contains a power output meter that is calibrated in kilowatts; this meter also contains a second scale for measuring the transmission line SWR. An SWR switch is associated with the dual purpose output meter. The transmission line SWR is continuously monitored by a sensitive d-c relay that will energize should the SWR exceed either 2:1 or 3:1 ratios, to establish the relay sensitivity, are selected by a front panel switch.

c. LINEAR AMPLIFIER, TLAA-2.5K. - The linear amplifier serves as a 40 db power amplifier between an external exciter and the antenna. The TLAA contains the tune, loading and bandswitching circuits and all r-f amplifier parts. The final tube (2.5kw amplifier) of the 3-stage amplifier is convection air-cooled by a self-contained blower in the r-f section.

d. LOW VOLTAGE POWER SUPPLY, AP-128/50. - The low voltage power supply provides operating voltages to the TLAA. This unit also contains the overload protection circuit controls to adjust the overload relay sensitivity settings. The AP-128 provides bias, screen and filament voltages to the TLAA plus voltages in the interlock and control circuits. The front panel contains filament and plate time meters and overload indicator lamps. All amplifier overload adjustments and bias controls are also front panel mounted.

e. HIGH VOLTAGE POWER SUPPLY, AP-129/50. - The 5 kv high voltage power supply, mounted at the bottom of the equipment cabinet, contains the high voltage solid state rectifier stacks, filtering and the delta-wye 23:1 step-up ratio transformer.

This unit generates 5000 volts d-c for the plate of the 2.5 kw power amplifier tube. An automatic 60-second time delay circuit is integrally mounted inside the unit to delay the application of screen voltages to the linear amplifier to prevent stripping of the PA filaments. This, in effect prevents a sudden heavy conduction of the linear amplifier.

f. LINEAR AMPLIFIER CONTROL PANEL, TCP-1. - The linear amplifier control panel controls the application of plate voltages to the 2.5 kw power amplifier and monitors all interlock circuits contained in the cabinet. The TCP also controls the primary a-c power input to the cabinet. Other front panel controls include a reset pushbutton associated with the overload and bias relays in the low voltage power supply AP-128.

g. ALARM PANEL, AX633 - The AX633 is an alarm and monitor unit, providing front panel connector receptacles for monitoring the PA output. An audio input jack, also front panel mounted, provides for insertion of a two-tone test signal for testing the Linear Amplifier exciter unit. An audio alarm device with its associated on/off toggle switch and d-c line fuse are also front panel mounted. The alarm is activated when the linear amplifier high voltage is removed. This action takes place via the high voltage power supply circuit breaker.

h. SERVO AMPLIFIER ASSEMBLY, TCSA-1 - The TCSA houses three servo amplifier units. These units, when controlled by the sense circuits of the TLAA, automatically tune and load the 2nd amplifier and PA portions of the ATLA.

i. PREPOSITION PANEL, AX631 - The AX631 is a remote control unit, having an 18-position transmitter frequency select switch, a TUNE pushbutton, a REMOTE/LOCAL toggle switch, a FAULT indicator lamp and a READY indicator lamp. The AX631 is used as a remote pre-position control unit used in conjunction with the associated ATLA linear amplifier.

#### 1-4. TECHNICAL CHARACTERISTICS.

|                         |  |
|-------------------------|--|
| Frequency range         | 2 to 30 mc, bandswitched.  |
| Output power            | 2,500 watts PEP; 2,500 watts average.  |
| Operating modes         | SSB, ISB, AM, AME, FSK*, FAX*, MCW and CW. *With appropriate external unit such as model TIS-3.  |
| Tuning Manual           | All tuning, loading and bandswitching controls on front panel. Manual override switch permits complete manual operation.   |
| Automatic               | Tuning of exciter equipment permits amplifier stages to tune automatically.  |
| Metering                | Front panel meters monitor operation of all critical circuits.   |
| ALDC                    | ALDC (automatic load and drive control) circuit provided to improve linearity, limit distortion, and deliver a relatively constant output during high modulation peaks or load changes. Front panel control allows adjustment of ALDC attack point or circuit disabling. |
| Output impedance        | 50 ohms, unbalanced.   |
| Harmonic suppression    | Second harmonics at least 50 db below full PEP when measured with standard two-tone test; all other harmonics down at least 55 db.   |
| Signal/Distortion ratio | Distortion products are at least 40 db below either tone of a standard two-tone test at full PEP output.   |
| Hum and noise level     | Hum at least 50 db below full PEP; all other noise down at least 70 db.  |
| Power requirements      | 3 Ø, 190/208/220/230/440 vac, 50 cps (delta or wye source), 20 amperes per leg. Approximately 7500 watts for full PEP output operating SSB; approximately 7000 watts for full power output operating FSK, FAX, or key-down CW.   |
| Safety features         | Mechanical/electrical interlocks; overload circuits for bias, plate current, screen current, and transmission line VSWR.   |

Cooling

Forced air.

Operating Temperature

Designed to operate in a 0°C to 50°C ambient with relative humidity of up to 90%.

Table 1-1. Major Components

| TMC DESIGNATION                                |
|--|
| Cabinet, Electrical Equipment<br>RAK-111-2A    |
| RF Control and Indicator,<br>Model SWCA-3K     |
| Linear Amplifier,<br>Model TLAA-2.5K           |
| Linear Amplifier Control Panel,<br>Model TCP-1 |
| Low Voltage Power Supply,<br>Model AP-128/50   |
| Alarm Panel, AX633                             |
| Preposition Panel, AX631                       |
| Servo Amplifier, Model TCSA-1                  |
| High Voltage Power Supply, AP-129/50           |

Table 1-2. Electron Tube and Transistor Complement, ATLA

| UNIT      | TYPE                        |
|-----------|-----------------------------|
| SWCA-3K   | Transistors: 2N697<br>2N492 |
| TLAA-2.5K | Tubes: 8121 (2)<br>PL264    |
| AP128/50  | Tubes: 0A2 (3)<br>0B2 (3)   |

## **SECTION 2**

### **INSTALLATION**

#### 2-1. INITIAL INSPECTION

Inspect the ATLA packing cases for possible damage when they arrive at the operating site. With respect to equipment damage for which the carrier is liable, The Technical Materiel Corporation will assist in describing methods of repair and the furnishing of replacement parts. Inspect the packing material for parts that may have been shipped as loose items.

#### 2-2. ASSEMBLY OF LINEAR AMPLIFIER

Install the ATLA components into the rack as shown in figure 1-1. Intracomponent cabling is shipped pre-installed in the rack in the form of cable harnesses attached to the rack structure. Connect each free plug-end of the harness to its mating receptacle on the component by matching the "J" number (marked on the cable adjacent to the plug) with the "J" number appearing on the component adjacent to the receptacle. In the same way, connect each free end containing a fanning strip to its mating terminal block by matching "E" numbers. Refer to paragraph 2-4 for installation instructions.

#### 2-3. POWER REQUIREMENTS

The linear amplifier requires a 3-phase, 195/205/225/380/410/450 vac, 50 cps delta or wye source line. Referring to figure 2-1, make appropriate connections at taps of T8000 transformer at the bottom of the rack for the particular power source available. Then connect source at A5586 Line Filter.

It is recommended that an external 3-phase circuit breaker interface the ATLA with the main 3-phase supply voltage. The

external circuit breaker will allow complete isolation of the ATLA voltage input and therefor provide for safe maintenance and servicing.

The external circuit breaker should be rated for 30-amperes per phase and be independant from other equipment.

#### 2-4. INSTALLATION PROCEDURES

A minimum number of assemblies, subassemblies, components and hardware have been disassembled from the 2.5K linear amplifier and separately packaged, thus reducing the possibility of equipment damage in transit. The method of disassembly and separate packaging of the linear amplifier also permits realistic equipment handling.

Carefully read the instructions for each step. After reading, consider the complexity involved in performing the step; it may be advisable to simulate a complex step before actually doing it. Make sure each step has been completed before proceeding to the next.

Cables, wires, and other miscillaneous items that are disconnected during linear amplifier disassembly are tagged and taped to the equipment. The information on a given tage indicates the designated terminal on a component to which the tagged item must be connected. Make sure all cables and wires have been connected as designated on tags and that all packing material, tags and tape have been removed before sealing-up the frame or section of the frame with a front panel drawer, or piece of exterior trim. If any confusion arises regarding cable or wire connections that must be made, refer to the applicable interconnect wiring diagrams in section 2 of the technical manual.

Temporary removal and replacement of panels, and component mounting assemblies are specifically called-out in the procedure in order to install various items. Do not anticipate instructions;

to insure correct installation, perform each step exactly as it is written.

Non-specialized tools are not supplied with the equipment since these items should be contained in an equipped maintenance shop.

Make sure that installation personnel adhere to previously outlined techniques of uncrating and material handling (see section 1).

#### STEP 1

- a. Unpack assorted loose items from crate 1.
- b. Check each item contained against equipment supplied list.

#### STEP 2

- a. Unpack rack from crate 2.
- b. Position rack upright, remove side and rear panels, this can be accomplished by tuning the screw type fastener located at the top center of each panel.
- c. Remove all packaging material from rack and position rack in accordance with pre-installation planning.

#### STEP 3

To secure rack in its permanent position precede as follows:

- a. To gain access to the front mounting holes, loosen mounting hardware that fastens the high voltage power supply assembly to the rack frame.

#### **CAUTION**

To eliminate any possible damage, remove high voltage lead from C6000 on power supply assembly.

- b. Slide power supply assembly toward rear of rack.
- c. Secure rack in position with four mounting bolts.
- d. Replace high voltage power supply assembly and fasten in place. Be sure to replace the high voltage lead to terminal of C6000.

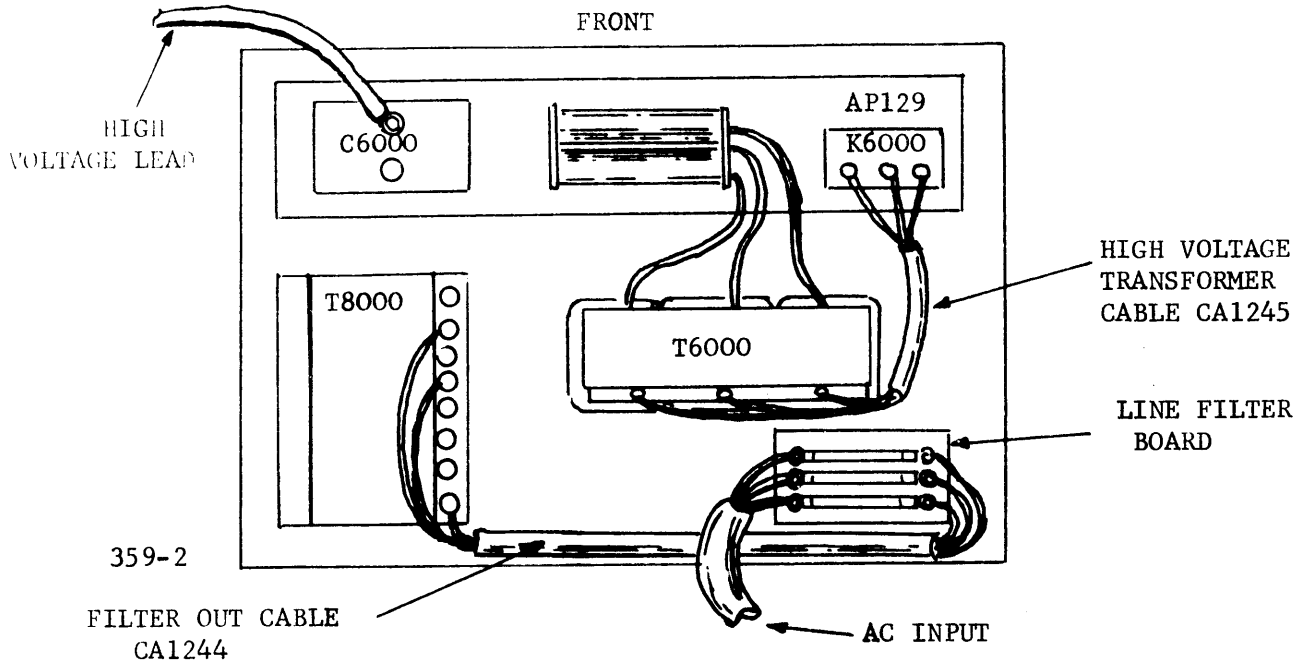


Figure 2-1. Power Input Component Locations  
STEP 4

- a. Unpack crate 3.
- b. Position transformer T8000 on base assembly
- c. Using hardware from crate 1, tightly bolt transformer to base assembly.
- d. Remove filter out cable, CA1244 from crate 1 and fasten to terminals of transformer. (Refer to figure 2-1).
- e. Using hardware from crate 1, place 4 ceramic standoffs with their associated washers on transformer.
- f. Using cover and hardware from crate 1, place transformer cover on the ceramic standoffs and secure.

STEP 5

- a. Unpack crate 4.
- b. Position transformer T6000 on base assembly.
- c. Using hardware from crate 1, tightly bolt transformer to base assembly.
- d. Connect high voltage transformer cable CA1245, which is attached to relay K6000 on power supply, to transformer as follows: white lead phase 1 terminal 1; grey lead phase 2 terminal 2; violet lead phase 3 terminal 3.

## NOTE

Phase reversal may be required to correct operation of the equipment. Should phasing problems occur, interchange any two of the three phase inputs.

- e. Connect jumper leads between rectifier and transformer as follows:

| <u>RECTIFIER</u> | <u>TRANSFORMER</u>  |
|------------------|---------------------|
| From CR6000, 1   | To T6000 terminal 6 |
| From CR6002, 3   | To T6000 terminal 5 |
| From CR6004, 5   | To T6000 terminal 4 |

### STEP 6

- a. Remove line filterboard A5586 from crate 1 and remove line filterboard cover.
- b. Using hardware from crate 1, tightly bolt line-filter-board to the base inside the bottom right-rear of the rack.
- c. Using loose end of CA1244 from T8000, connect white lead, phase 1 to L8000, grey lead, phase 2 to L8001, violet lead, phase 3, to L8002.
- d. Route a-c input cable into base assembly through access hole and secure to appropriate terminals on line filterboard.
- e. Position and secure filterboard cover to filterboard.

### STEP 7

Refer to figure 1-1 for location of equipment in the rack.

- a. Remove TCP from rack and plug-in relays K4000 and K4004 (shipped as loose items) in crate 1.
- b. Remove SWCA from rack and plug-in relay K7002 (shipped as loose item) in crate 1.
- c. Unpack AP128 from crate 5 and plug-in relays K5000 through K5050 (shipped as loose items) in crate 1.
- d. Unpack TLAA from crate 5 and plug-in tube V2002 (PL-8576) (shipped as a loose item) and tighten tube clamp ring.

## STEP 8

Now that each drawer assembly is unpacked, install it in its designated position (see figure 1-1) in the rack. To install any drawer assembly, proceed as follows:

### **NOTE**

To insure greater rack stability start with bottom units first and work up.

- a. Untape or unstrap cable assemblies, cable retractors, and all other components secured to the inside of frame for shipment.
- b. Pull out center section of drawer tracks until they lock in an extended position.
- c. Position slide mechanisms in tracks and ease modular unit into track until lock buttons engage holes in tracks.
- d. Where applicable, pull tilt handles on sides of drawer vertically.

### **NOTE**

When making cable or wire connections to drawer, secure cables or wires with cable clamps, where applicable.

- e. Make necessary cable and electrical connections as indicated by interconnect wiring diagrams in section 2.
- f. Pull tilt handles on sides of drawer and re-position drawer horizontally.
- g. Press lock buttons on tracks; slide drawer completely into compartment.
- h. Using hardware from crate 1 secure front panels of drawers to rack frame.

## STEP 9

- a. Remove antenna connector, TMC P/N PL222 from crate 1 and install on linear amplifier. Connector PL222 is to be fitted to the unbalanced coaxial transmission line and then attached to the ATLA coupler jack.
- b. Using grounding hardware supplied in crate 1 secure grounding strap to rear of unit in the threaded hole in rear center of base.

## NOTE

The ATLA requires a good ground connection for efficient operation. Problems that may occur when poor ground connections exist are as follows:

- (1) "Take-off". Unit does not tune correctly. As resonance is achieved, the transmitter output tries to mistakenly reach a peak value and is prevented by overload controls tripping and deenergizing the transmitter.
- (2) "Hot Frame". R-f energy is felt at all parts of the frame and an r-f arc may be drawn from the frame.
- (3) "Instability". The transmitter does not stabilize at the resonant frequency.

### Recommendations:

- (1) Several copper rods should be driven into the ground outside the station. Depending on soil condition, the rods should be driven down to a depth of 3-feet for moist (good conductive) soil, and deeper for poor conductive soil, i.e., sand, etc.
- (2) Copper strapping should be brazed (welded) to the circular rods and fed into the station as the permanent station ground.  
It is suggested that 3-inch wide copper straps be used. Copper braid should never be used, due to its high inductive values which may provide r-f ground isolation at certain frequencies.
- (3) The length of the ground connection should be studied to prevent wavelengths at the operating frequencies, i.e. a quarter wavelength or multiples thereof of the ground connection may cause r-f ground isolation.
- (4) For the HF range (2 to 30 mc), recommended ground connection (to true ground) should be less than 10-meters wherever practicable.
- (5) Connection of the station grounding system to the structure or water plumbing of the building should be avoided due to high resistive joints preventing a true ground connection.
- (6) The station grounding system should be checked to ensure that the lowest possible resistance is achieved to true ground. A megger type metering device is usually employed for this check.

c. Replace side and rear panels and fasten.


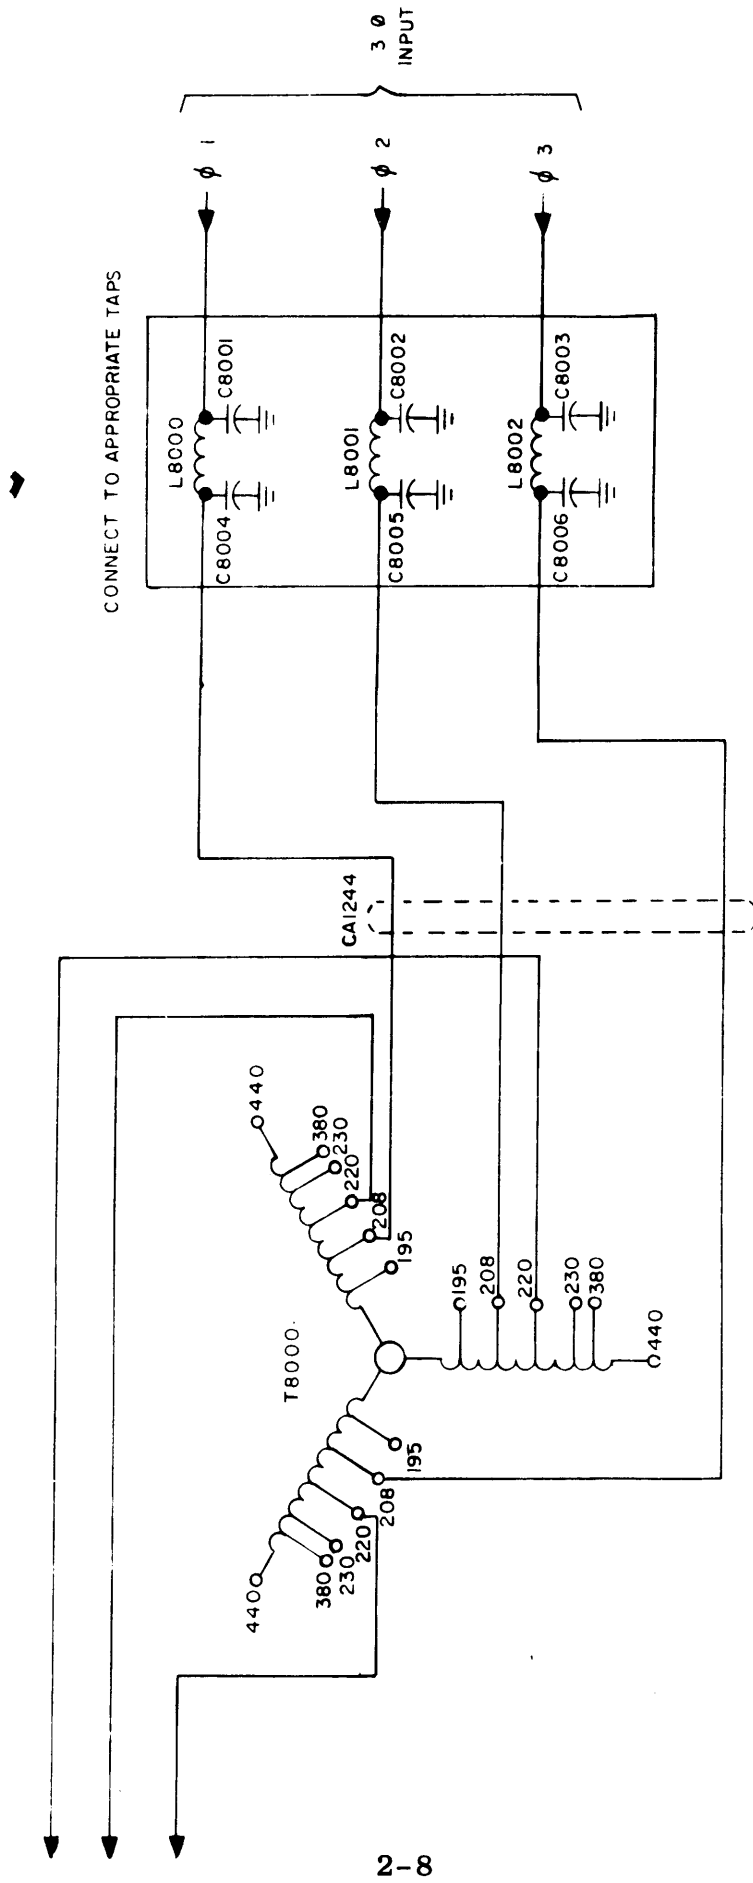


Figure 2-2. Three-Phase Power Input Wiring Diagram



359-4


Figure 2-3. Outline Dimensional Diagram  
2-9

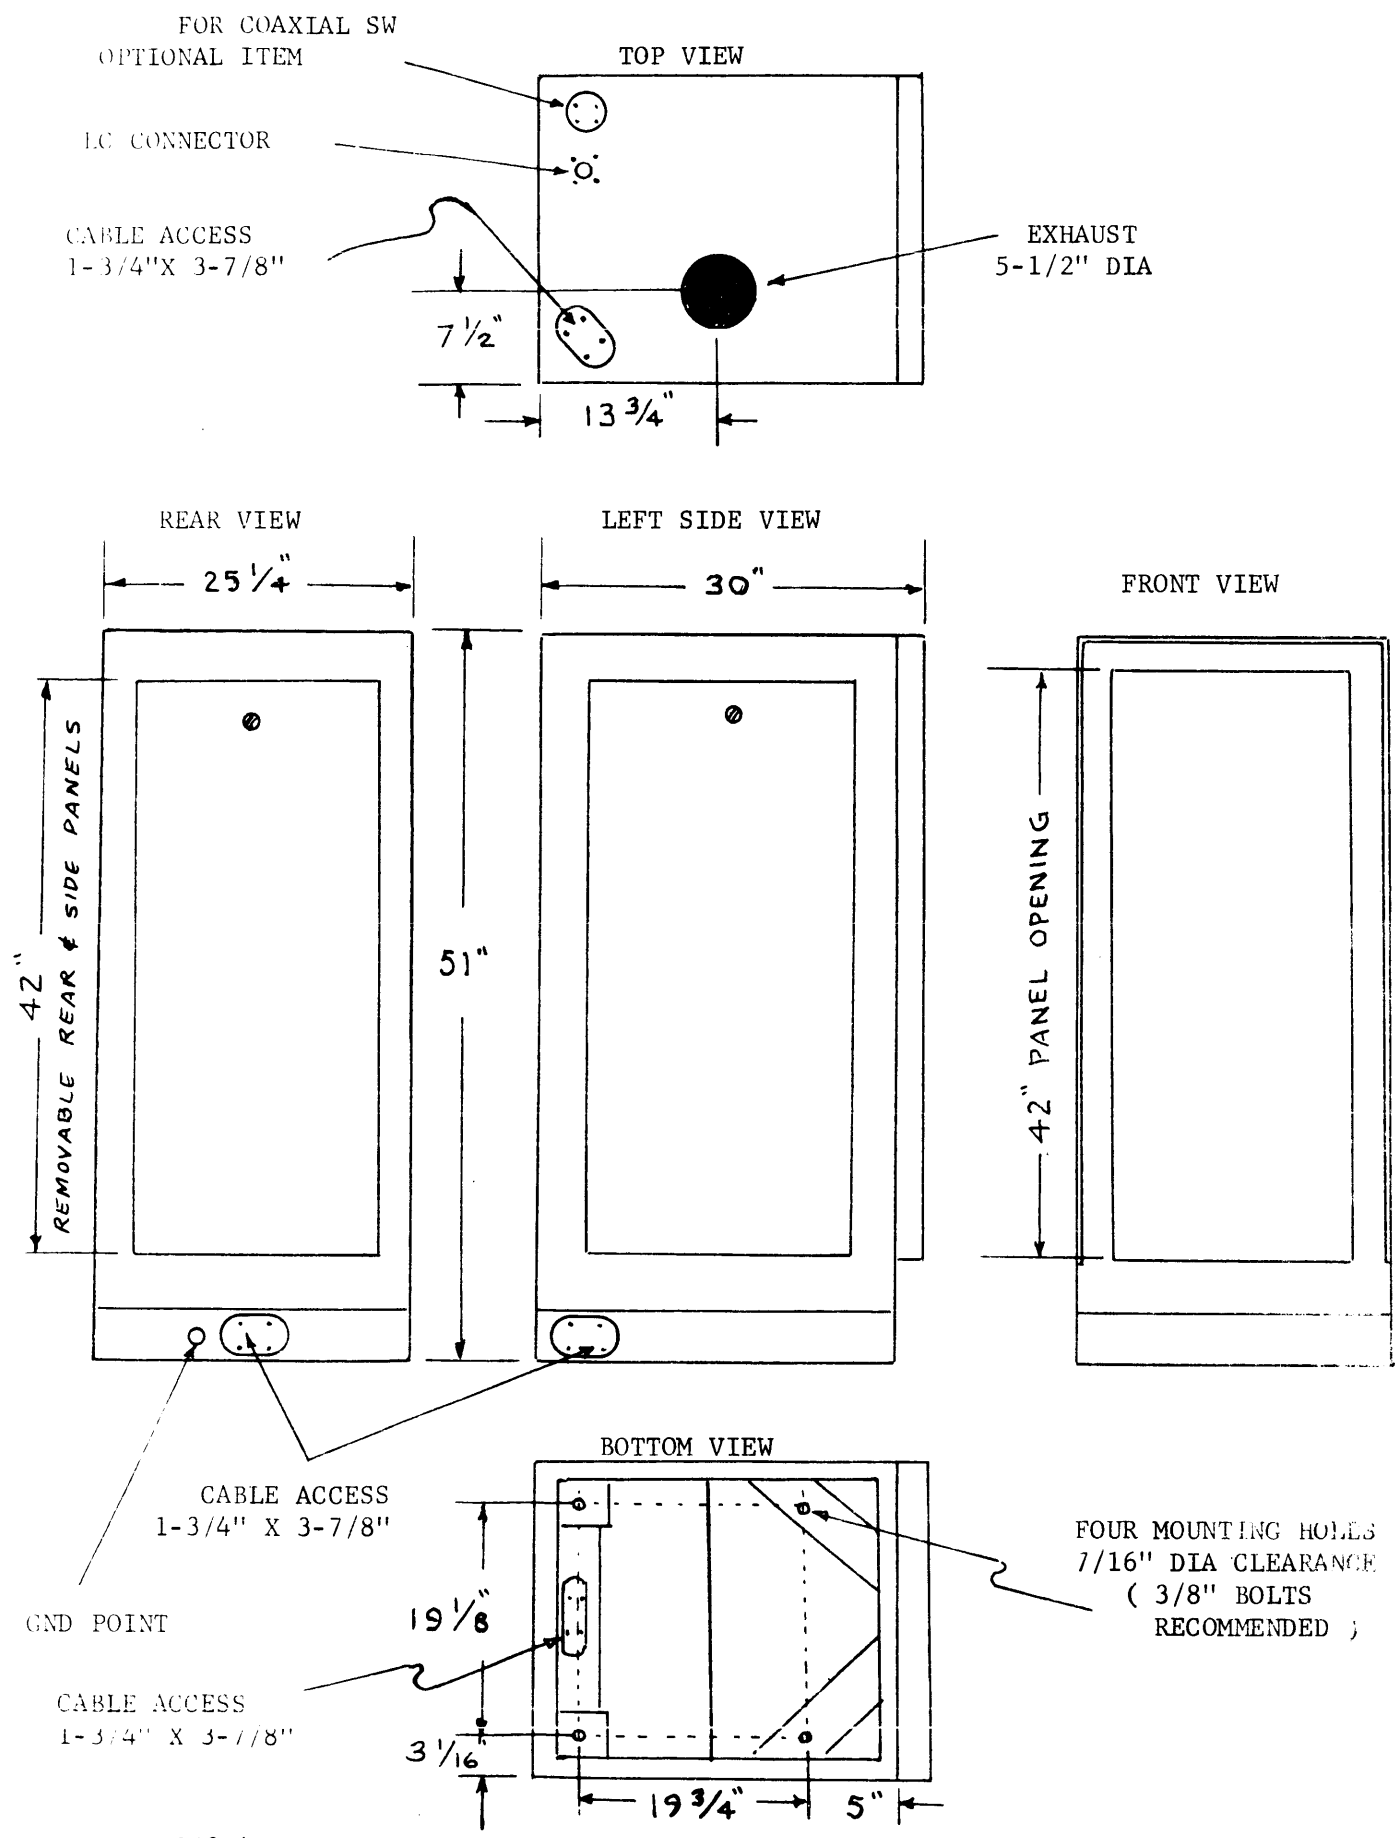



TCP-(C)

TLA(-)2.5K

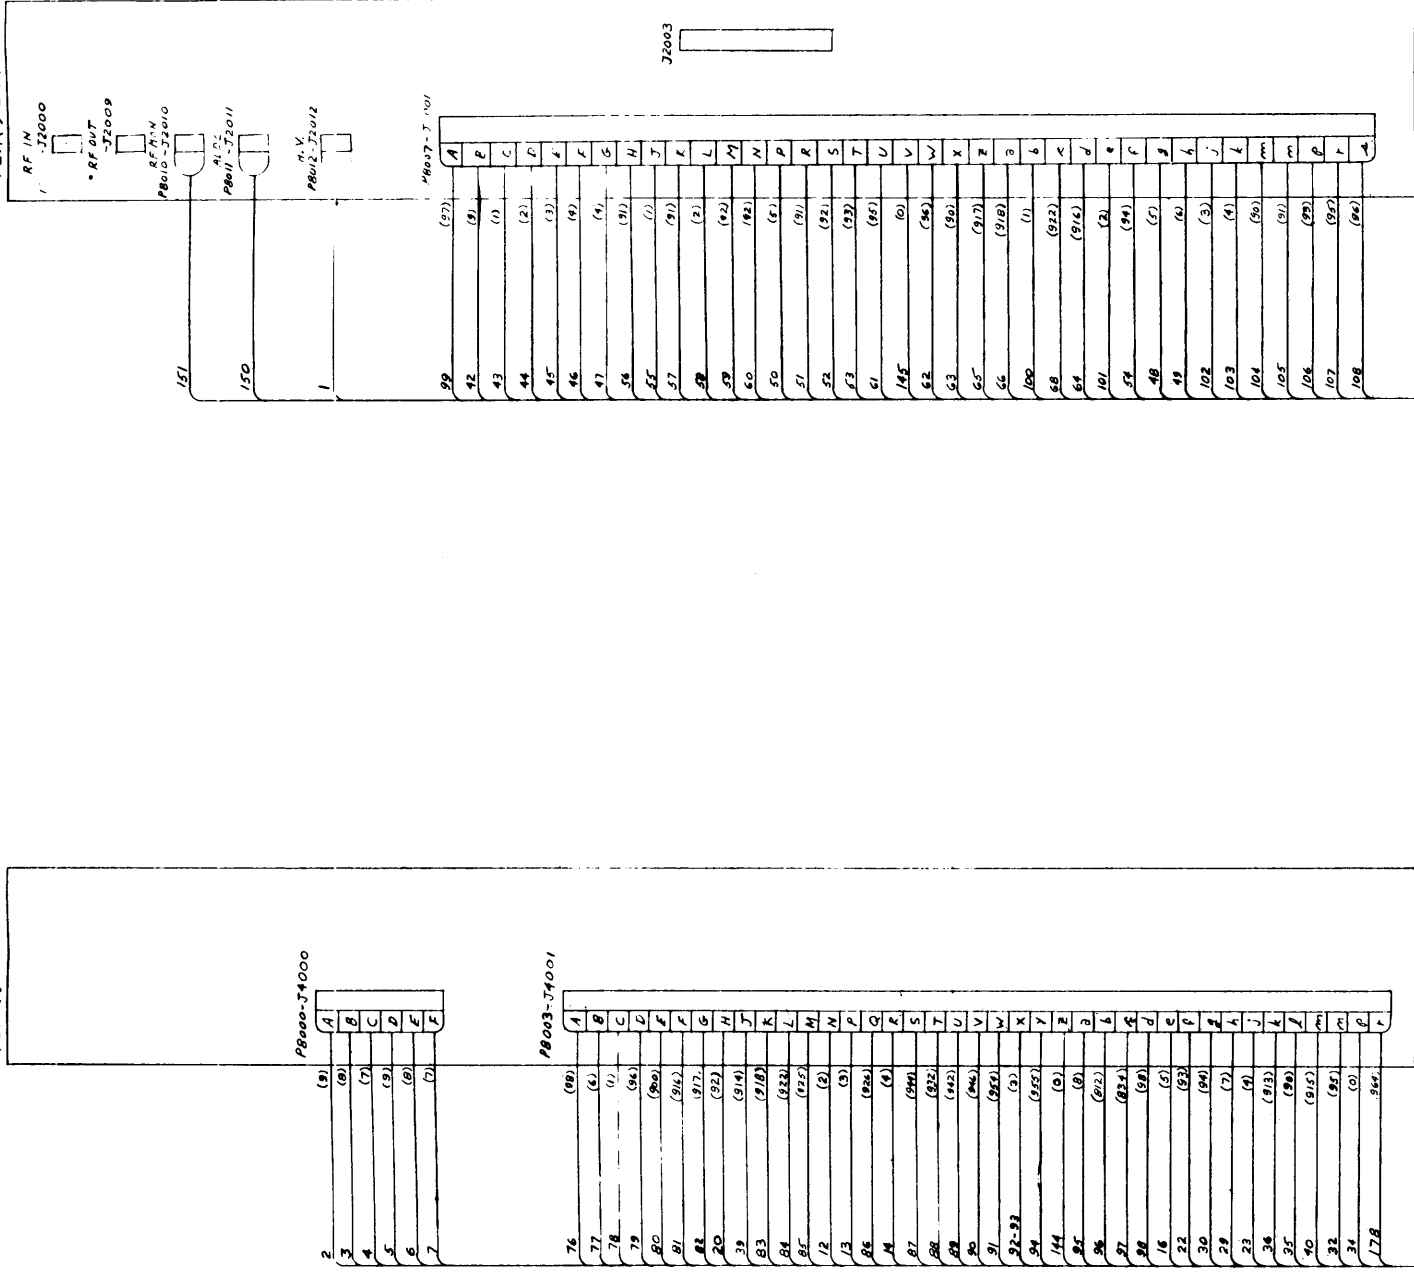

115, 38, 37, 36, 32  
 68, 67, 66, 65, 64, 63, 62, 61, 60, 59  
 77, 76, 75, 74, 73, 72, 71, 70  
 23, 22, 21, 20, 19, 18, 17, 16, 15, 14, 13  
 12, 7, 6, 5, 4, 3, 2

91, 93, 94, 95, 144  
 72, 83, 84, 85, 88, 89, 90

107, 107, 106, 105, 104, 103, 102, 101, 100, 99  
 98, 97, 96, 95, 94, 93, 92, 91, 90  
 49, 48, 47, 46, 45, 44, 43, 42, 41

99

127, 126, 125, 99, 98, 97, 96, 95, 94  
 93, 92, 91, 90, 89, 88, 87, 86, 85, 84

146, 145, 144

6

CK12450

Figure 2-5. Inter-connect Wiring Diagram, ATLA-2.5K ( sheet 1 of 3 )

2-12/2-13

APPROVE IN MEASUREMENTS ARE COMES

142-143  
144-145  
146-148

140, 141, 143, 142, 145, 146

CA1282

| QTY | USED | IN | DATE |
|-----|------|----|------|
| 1   |      |    |      |

DS8000 REPAIR-A-K (EGS, M25, 41)  
 147  
 185

POWER ON  
 P8003 DS8001 P8002  
 95  
 118

DS8003  
 N.V. UN  
 146-147  
 189

NO. 5007  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

RIGHT SIDE  
 P8006 P8013  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

LEFT SIDE  
 P8007 P8008  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8009 P8010  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8011 P8012  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8013 P8014  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8015 P8016  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8017 P8018  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8019 P8020  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8021 P8022  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8023 P8024  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8025 P8026  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8027 P8028  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8029 P8030  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8031 P8032  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8033 P8034  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8035 P8036  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8037 P8038  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8039 P8040  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8041 P8042  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8043 P8044  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8045 P8046  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8047 P8048  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8049 P8050  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8051 P8052  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8053 P8054  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8055 P8056  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8057 P8058  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8059 P8060  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8061 P8062  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8063 P8064  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108


NO. 5007  
 P8065 P8066  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8067 P8068  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8069 P8070  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108

NO. 5007  
 P8071 P8072  
 99  
 101  
 102  
 103  
 104  
 105  
 106  
 107  
 108


AX633  
AX646  
ALARM

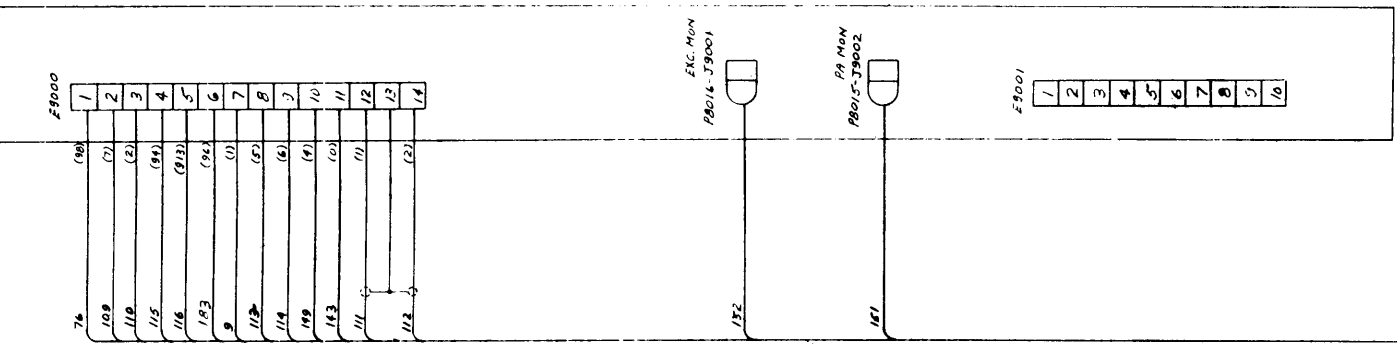

153, 149, 116, 115, 114, 113, 112, 111, 110, 109, 9  
76, 143, 151

T/O  
SHEET 2

TCP-C

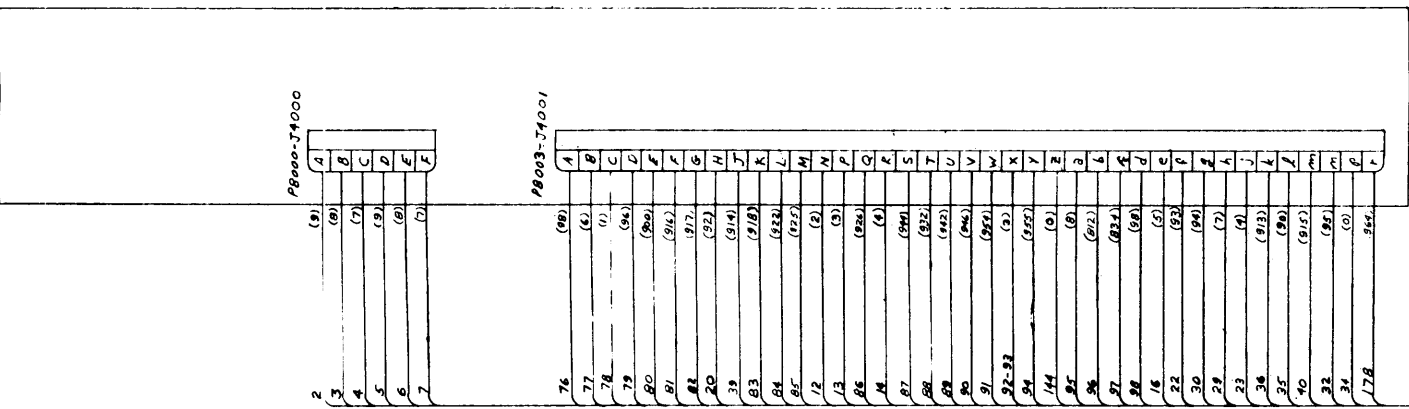


115, 96, 77, 96, 92, 88, 87, 81, 80, 78, 77, 76, 70, 39, 36, 35, 34, 32, 30, 29, 23, 22, 20, 16, 13, 12, 7, 6, 5, 4, 3, 2

91, 93, 94, 95, 144, 79, 83, 86, 87, 88, 89, 90

149, 144, 143, 142, 145, 146

142-143  
144-145  
146-148

TLA(J)-2.5K



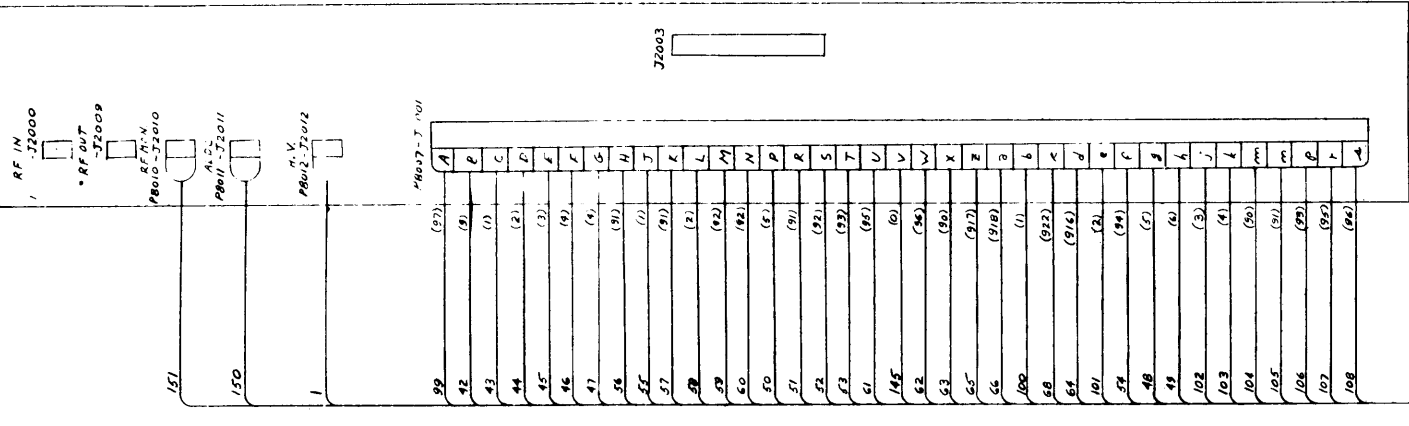


157, 150, 145, 148, 107, 106, 105, 104, 103, 102, 101, 100, 68, 66, 65, 64, 63, 62, 61, 60, 59, 58, 57, 56, 55, 54, 53, 52, 51, 50, 49, 48, 47, 46, 45, 44, 43, 42, 41

99


127, 126, 124, 98, 94, 93, 91, 90, 80, 86, 87, 86, 83, 79, 78, 41

CK12450

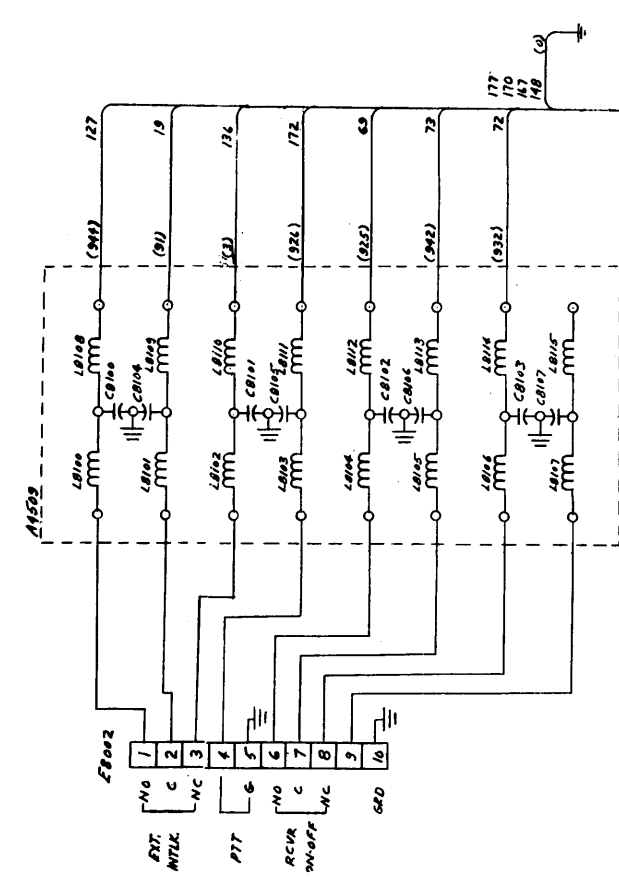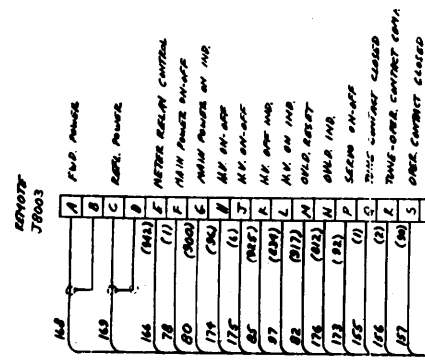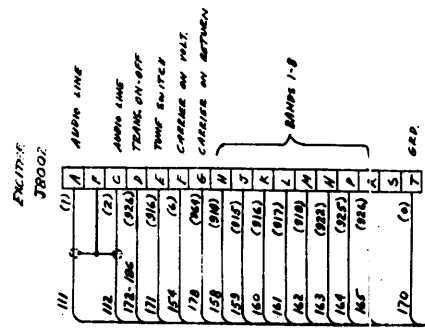

LB100 - LB107 - 10µF  
 CB100 - CB107 - 510 mm.Fd



|     |       |    |                   |
|-----|-------|----|-------------------|
| 111 | (1)   | A  | ADDN LINE         |
|     | (2)   | B  | AMMO LINE         |
| 112 | (3)   | C  | TRAMS ON-OFF      |
| 113 | (4)   | D  | TRNG SWITC        |
| 114 | (5)   | E  | CHARGE BY INST    |
| 115 | (6)   | F  | CHARGE BY BATTERY |
| 116 | (7)   | G  | BANDS 1-8         |
| 117 | (8)   | H  | BANDS 1-8         |
| 118 | (9)   | I  | BANDS 1-8         |
| 119 | (10)  | J  | BANDS 1-8         |
| 120 | (11)  | K  | BANDS 1-8         |
| 121 | (12)  | L  | BANDS 1-8         |
| 122 | (13)  | M  | BANDS 1-8         |
| 123 | (14)  | N  | BANDS 1-8         |
| 124 | (15)  | O  | BANDS 1-8         |
| 125 | (16)  | P  | BANDS 1-8         |
| 126 | (17)  | Q  | BANDS 1-8         |
| 127 | (18)  | R  | BANDS 1-8         |
| 128 | (19)  | S  | BANDS 1-8         |
| 129 | (20)  | T  | BANDS 1-8         |
| 130 | (21)  | U  | BANDS 1-8         |
| 131 | (22)  | V  | BANDS 1-8         |
| 132 | (23)  | W  | BANDS 1-8         |
| 133 | (24)  | X  | BANDS 1-8         |
| 134 | (25)  | Y  | BANDS 1-8         |
| 135 | (26)  | Z  | BANDS 1-8         |
| 136 | (27)  | AA | BANDS 1-8         |
| 137 | (28)  | AB | BANDS 1-8         |
| 138 | (29)  | AC | BANDS 1-8         |
| 139 | (30)  | AD | BANDS 1-8         |
| 140 | (31)  | AE | BANDS 1-8         |
| 141 | (32)  | AF | BANDS 1-8         |
| 142 | (33)  | AG | BANDS 1-8         |
| 143 | (34)  | AH | BANDS 1-8         |
| 144 | (35)  | AI | BANDS 1-8         |
| 145 | (36)  | AJ | BANDS 1-8         |
| 146 | (37)  | AK | BANDS 1-8         |
| 147 | (38)  | AL | BANDS 1-8         |
| 148 | (39)  | AM | BANDS 1-8         |
| 149 | (40)  | AN | BANDS 1-8         |
| 150 | (41)  | AO | BANDS 1-8         |
| 151 | (42)  | AP | BANDS 1-8         |
| 152 | (43)  | AQ | BANDS 1-8         |
| 153 | (44)  | AR | BANDS 1-8         |
| 154 | (45)  | AS | BANDS 1-8         |
| 155 | (46)  | AT | BANDS 1-8         |
| 156 | (47)  | AU | BANDS 1-8         |
| 157 | (48)  | AV | BANDS 1-8         |
| 158 | (49)  | AW | BANDS 1-8         |
| 159 | (50)  | AX | BANDS 1-8         |
| 160 | (51)  | AY | BANDS 1-8         |
| 161 | (52)  | AZ | BANDS 1-8         |
| 162 | (53)  | BA | BANDS 1-8         |
| 163 | (54)  | BB | BANDS 1-8         |
| 164 | (55)  | BC | BANDS 1-8         |
| 165 | (56)  | BD | BANDS 1-8         |
| 166 | (57)  | BE | BANDS 1-8         |
| 167 | (58)  | BF | BANDS 1-8         |
| 168 | (59)  | BG | BANDS 1-8         |
| 169 | (60)  | BH | BANDS 1-8         |
| 170 | (61)  | BI | BANDS 1-8         |
| 171 | (62)  | BJ | BANDS 1-8         |
| 172 | (63)  | BK | BANDS 1-8         |
| 173 | (64)  | BL | BANDS 1-8         |
| 174 | (65)  | BM | BANDS 1-8         |
| 175 | (66)  | BN | BANDS 1-8         |
| 176 | (67)  | BO | BANDS 1-8         |
| 177 | (68)  | BP | BANDS 1-8         |
| 178 | (69)  | BQ | BANDS 1-8         |
| 179 | (70)  | BR | BANDS 1-8         |
| 180 | (71)  | BS | BANDS 1-8         |
| 181 | (72)  | BT | BANDS 1-8         |
| 182 | (73)  | BU | BANDS 1-8         |
| 183 | (74)  | BV | BANDS 1-8         |
| 184 | (75)  | BW | BANDS 1-8         |
| 185 | (76)  | BX | BANDS 1-8         |
| 186 | (77)  | BY | BANDS 1-8         |
| 187 | (78)  | BZ | BANDS 1-8         |
| 188 | (79)  | CA | BANDS 1-8         |
| 189 | (80)  | CB | BANDS 1-8         |
| 190 | (81)  | CC | BANDS 1-8         |
| 191 | (82)  | CD | BANDS 1-8         |
| 192 | (83)  | CE | BANDS 1-8         |
| 193 | (84)  | CF | BANDS 1-8         |
| 194 | (85)  | CG | BANDS 1-8         |
| 195 | (86)  | CH | BANDS 1-8         |
| 196 | (87)  | CI | BANDS 1-8         |
| 197 | (88)  | CJ | BANDS 1-8         |
| 198 | (89)  | CK | BANDS 1-8         |
| 199 | (90)  | CL | BANDS 1-8         |
| 200 | (91)  | CM | BANDS 1-8         |
| 201 | (92)  | CN | BANDS 1-8         |
| 202 | (93)  | CO | BANDS 1-8         |
| 203 | (94)  | CP | BANDS 1-8         |
| 204 | (95)  | CQ | BANDS 1-8         |
| 205 | (96)  | CR | BANDS 1-8         |
| 206 | (97)  | CS | BANDS 1-8         |
| 207 | (98)  | CT | BANDS 1-8         |
| 208 | (99)  | CU | BANDS 1-8         |
| 209 | (100) | CV | BANDS 1-8         |
| 210 | (101) | CW | BANDS 1-8         |
| 211 | (102) | CX | BANDS 1-8         |
| 212 | (103) | CY | BANDS 1-8         |
| 213 | (104) | CZ | BANDS 1-8         |
| 214 | (105) | DA | BANDS 1-8         |
| 215 | (106) | DB | BANDS 1-8         |
| 216 | (107) | DC | BANDS 1-8         |
| 217 | (108) | DD | BANDS 1-8         |
| 218 | (109) | DE | BANDS 1-8         |
| 219 | (110) | DF | BANDS 1-8         |
| 220 | (111) | DG | BANDS 1-8         |
| 221 | (112) | DH | BANDS 1-8         |
| 222 | (113) | DI | BANDS 1-8         |
| 223 | (114) | DJ | BANDS 1-8         |
| 224 | (115) | DK | BANDS 1-8         |
| 225 | (116) | DL | BANDS 1-8         |
| 226 | (117) | DM | BANDS 1-8         |
| 227 | (118) | DN | BANDS 1-8         |
| 228 | (119) | DO | BANDS 1-8         |
| 229 | (120) | DP | BANDS 1-8         |
| 230 | (121) | DQ | BANDS 1-8         |
| 231 | (122) | DR | BANDS 1-8         |
| 232 | (123) | DS | BANDS 1-8         |
| 233 | (124) | DT | BANDS 1-8         |
| 234 | (125) | DU | BANDS 1-8         |
| 235 | (126) | DV | BANDS 1-8         |
| 236 | (127) | DW | BANDS 1-8         |
| 237 | (128) | DX | BANDS 1-8         |
| 238 | (129) | DY | BANDS 1-8         |
| 239 | (130) | DZ | BANDS 1-8         |
| 240 | (131) | EA | BANDS 1-8         |
| 241 | (132) | EB | BANDS 1-8         |
| 242 | (133) | EC | BANDS 1-8         |
| 243 | (134) | ED | BANDS 1-8         |
| 244 | (135) | EE | BANDS 1-8         |
| 245 | (136) | EF | BANDS 1-8         |
| 246 | (137) | EG | BANDS 1-8         |
| 247 | (138) | EH | BANDS 1-8         |
| 248 | (139) | EI | BANDS 1-8         |
| 249 | (140) | EJ | BANDS 1-8         |
| 250 | (141) | EK | BANDS 1-8         |
| 251 | (142) | EL | BANDS 1-8         |
| 252 | (143) | EM | BANDS 1-8         |
| 253 | (144) | EN | BANDS 1-8         |
| 254 | (145) | EO | BANDS 1-8         |
| 255 | (146) | EP | BANDS 1-8         |
| 256 | (147) | EQ | BANDS 1-8         |
| 257 | (148) | ER | BANDS 1-8         |
| 258 | (149) | ES | BANDS 1-8         |
| 259 | (150) | ET | BANDS 1-8         |
| 260 | (151) | EU | BANDS 1-8         |
| 261 | (152) | EV | BANDS 1-8         |
| 262 | (153) | EW | BANDS 1-8         |
| 263 | (154) | EX | BANDS 1-8         |
| 264 | (155) | EY | BANDS 1-8         |
| 265 | (156) | EZ | BANDS 1-8         |
| 266 | (157) | FA | BANDS 1-8         |
| 267 | (158) | FB | BANDS 1-8         |
| 268 | (159) | FC | BANDS 1-8         |
| 269 | (160) | FD | BANDS 1-8         |
| 270 | (161) | FE | BANDS 1-8         |
| 271 | (162) | FF | BANDS 1-8         |
| 272 | (163) | FG | BANDS 1-8         |
| 273 | (164) | FH | BANDS 1-8         |
| 274 | (165) | FI | BANDS 1-8         |
| 275 | (166) | FJ | BANDS 1-8         |
| 276 | (167) | FK | BANDS 1-8         |
| 277 | (168) | FL | BANDS 1-8         |
| 278 | (169) | FM | BANDS 1-8         |
| 279 | (170) | FN | BANDS 1-8         |
| 280 | (171) | FO | BANDS 1-8         |
| 281 | (172) | FP | BANDS 1-8         |
| 282 | (173) | FQ | BANDS 1-8         |
| 283 | (174) | FR | BANDS 1-8         |
| 284 | (175) | FS | BANDS 1-8         |
| 285 | (176) | FT | BANDS 1-8         |
| 286 | (177) | FU | BANDS 1-8         |
| 287 | (178) | FV | BANDS 1-8         |
| 288 | (179) | FW | BANDS 1-8         |
| 289 | (180) | FX | BANDS 1-8         |
| 290 | (181) | FY | BANDS 1-8         |
| 291 | (182) | FZ | BANDS 1-8         |
| 292 | (183) | GA | BANDS 1-8         |
| 293 | (184) | GB | BANDS 1-8         |
| 294 | (185) | GC | BANDS 1-8         |
| 295 | (186) | GD | BANDS 1-8         |
| 296 | (187) | GE | BANDS 1-8         |
| 297 | (188) | GF | BANDS 1-8         |
| 298 | (189) | GG | BANDS 1-8         |
| 299 | (190) | GH | BANDS 1-8         |
| 300 | (191) | GI | BANDS 1-8         |
| 301 | (192) | GJ | BANDS 1-8         |
| 302 | (193) | GK | BANDS 1-8         |
| 303 | (194) | GL | BANDS 1-8         |
| 304 | (195) | GM | BANDS 1-8         |
| 305 | (196) | GN | BANDS 1-8         |
| 306 | (197) | GO | BANDS 1-8         |
| 307 | (198) | GP | BANDS 1-8         |
| 308 | (199) | GQ | BANDS 1-8         |
| 309 | (200) | GR | BANDS 1-8         |
| 310 | (201) | GS | BANDS 1-8         |
| 311 | (202) | GT | BANDS 1-8         |
| 312 | (203) | GU | BANDS 1-8         |
| 313 | (204) | GV | BANDS 1-8         |
| 314 | (205) | GW | BANDS 1-8         |
| 315 | (206) | GX | BANDS 1-8         |
| 316 | (207) | GY | BANDS 1-8         |
| 317 | (208) | GZ | BANDS 1-8         |
| 318 | (209) | HA | BANDS 1-8         |
| 319 | (210) | HB | BANDS 1-8         |
| 320 | (211) | HC | BANDS 1-8         |
| 321 | (212) | HD | BANDS 1-8         |
| 322 | (213) | HE | BANDS 1-8         |
| 323 | (214) | HF | BANDS 1-8         |
| 324 | (215) | HG | BANDS 1-8         |
| 325 | (216) | HH | BANDS 1-8         |
| 326 | (217) | HI | BANDS 1-8         |
| 327 | (218) | HJ | BANDS 1-8         |
| 328 | (219) | HK | BANDS 1-8         |
| 329 | (220) | HL | BANDS 1-8         |
| 330 | (221) | HM | BANDS 1-8         |
| 331 | (222) | HN | BANDS 1-8         |
| 332 | (223) | HO | BANDS 1-8         |
| 333 | (224) | HP | BANDS 1-8         |
| 334 | (225) | HQ | BANDS 1-8         |
| 335 | (226) | HR | BANDS 1-8         |
| 336 | (227) | HS | BANDS 1-8         |
| 337 | (228) | HT | BANDS 1-8         |
| 338 | (229) | HU | BANDS 1-8         |
| 339 | (230) | HV | BANDS 1-8         |
| 340 | (231) | HW | BANDS 1-8         |
| 341 | (232) | HX | BANDS 1-8         |
| 342 | (233) | HY | BANDS 1-8         |
| 343 | (234) | HZ | BANDS 1-8         |
| 344 | (235) | IA | BANDS 1-8         |
| 345 | (236) | IB | BANDS 1-8         |
| 346 | (237) | IC | BANDS 1-8         |
| 347 | (238) | ID | BANDS 1-8         |
| 348 | (239) | IE | BANDS 1-8         |
| 349 | (240) | IF | BANDS 1-8         |
| 350 | (241) | IG | BANDS 1-8         |
| 351 | (242) | IH | BANDS 1-8         |
| 352 | (243) | II | BANDS 1-8         |
| 353 | (244) | IJ | BANDS 1-8         |
| 354 | (245) | IK | BANDS 1-8         |
| 355 | (246) | IL | BANDS 1-8         |
| 356 | (247) | IM | BANDS 1-8         |
| 357 | (248) | IN | BANDS 1-8         |
| 358 | (249) | IO | BANDS 1-8         |
| 359 | (250) | IP | BANDS 1-8         |
| 360 | (251) | IQ | BANDS 1-8         |
| 361 | (252) | IR | BANDS 1-8         |
| 362 | (253) | IS | BANDS 1-8         |
| 363 | (254) | IT | BANDS 1-8         |
| 364 | (255) | IU | BANDS 1-8         |
| 365 | (256) | IV | BANDS 1-8         |
| 366 | (257) | IW | BANDS 1-8         |
| 367 | (258) | IX | BANDS 1-8         |
| 368 | (259) | IY | BANDS 1-8         |
| 369 | (260) | IZ | BANDS 1-8         |
| 370 | (261) | JA | BANDS 1-8         |
| 371 | (262) | JB | BANDS 1-8         |
| 372 | (263) | JC | BANDS 1-8         |
| 373 | (264) | JD | BANDS 1-8         |
| 374 | (265) | JE | BANDS 1-8         |
| 375 | (266) | JF | BANDS 1-8         |
| 376 | (267) | JG | BANDS 1-8         |
| 377 | (268) | JH | BANDS 1-8         |
| 378 | (269) | JI | BANDS 1-8         |
| 379 | (270) | JJ | BANDS 1-8         |
| 380 | (271) | JK | BANDS 1-8         |
| 381 | (272) | JL | BANDS 1-8         |
| 382 | (273) | JM | BANDS 1-8         |
| 383 | (274) | JN | BANDS 1-8         |
| 384 | (275) | JO | BANDS 1-8         |
| 385 | (276) | JP | BANDS 1-8         |
| 386 | (277) | JQ | BANDS 1-8         |
| 387 | (278) | JR | BANDS 1-8         |
| 388 | (279) | JS | BANDS 1-8         |
| 389 | (280) | JT | BANDS 1-8         |
| 390 | (281) | JU | BANDS 1-8         |
| 391 | (282) | JV | BANDS 1-8         |
| 392 | (283) | JW | BANDS 1-8         |
| 393 | (284) | JX | BANDS 1-8         |
| 394 | (285) | JY | BANDS 1-8         |
| 395 | (286) | JZ | BANDS 1-8         |
| 396 | (287) | KA | BANDS 1-8         |
| 397 | (288) | KB | BANDS 1-8         |
| 398 | (289) | KC | BANDS 1-8         |
| 399 | (290) | KD | BANDS 1-8         |
| 400 | (291) | KE | BANDS 1-8         |
| 401 | (292) | KF | BANDS 1-8         |
| 402 | (293) | KG | BANDS 1-8         |
| 403 | (294) | KH | BANDS 1-8         |
| 404 | (295) | KI | BANDS 1-8         |
| 405 | (296) | KJ | BANDS 1-8         |
| 406 | (297) | KK | BANDS 1-8         |
| 407 | (298) | KL | BANDS 1-8         |
| 408 | (299) | KM | BANDS 1-8         |
| 409 | (300) | KN | BANDS 1-8         |
| 410 | (301) | KO | BANDS 1-8         |
| 411 | (302) | KP | BANDS 1-8         |
| 412 | (303) | KQ | BANDS 1-8         |
| 413 | (304) | KR | BANDS 1-8         |
| 414 | (305) | KS | BANDS 1-8         |
| 415 | (306) | KT | BANDS 1-8         |
| 416 | (307) | KU | BANDS 1-8         |
| 417 | (308) | KV | BANDS 1-8         |
| 418 | (309) | KW | BANDS 1-8         |
| 419 | (310) | KX | BANDS 1-8         |
| 420 | (311) | KY | BANDS 1-8         |
| 421 | (312) | KZ | BANDS 1-8         |
| 422 | (313) | LA | BANDS 1-8         |
| 423 | (314) | LB | BANDS 1-8         |
| 424 | (315) | LC | BANDS 1-8         |
| 425 | (316) | LD | BANDS 1-8         |
| 426 | (317) | LE | BANDS 1-8         |
| 427 | (318) | LF | BANDS 1-8         |
| 428 | (319) | LG | BANDS 1-8         |

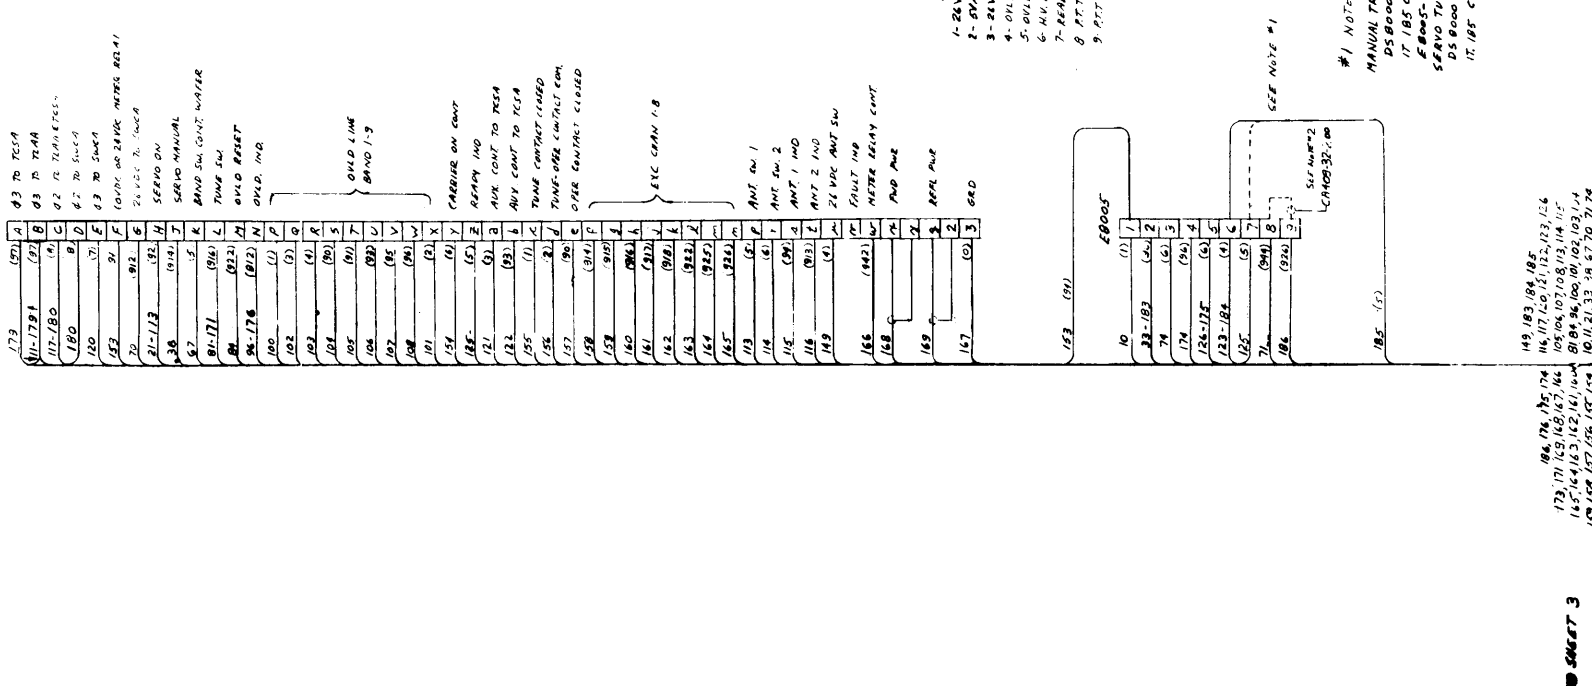

**SHEET 3**

149 183 184 185  
146 147 148 149  
150 151 152 153 154 155  
156 157 158 159 160 161 162 163 164 165  
166 167 168 169 170 171 172 173 174 175  
176 177 178 179 180 181 182 183 184 185  
186 187 188 189 190 191 192 193 194 195  
196 197 198 199 200 201 202 203 204 205  
206 207 208 209 210 211 212 213 214 215  
216 217 218 219 220 221 222 223 224 225  
226 227 228 229 230 231 232 233 234 235  
236 237 238 239 240 241 242 243 244 245  
246 247 248 249 250 251 252 253 254 255  
256 257 258 259 260 261 262 263 264 265  
266 267 268 269 270 271 272 273 274 275  
276 277 278 279 280 281 282 283 284 285  
286 287 288 289 290 291 292 293 294 295  
296 297 298 299 300 301 302 303 304 305  
306 307 308 309 310 311 312 313 314 315  
316 317 318 319 320 321 322 323 324 325  
326 327 328 329 330 331 332 333 334 335  
336 337 338 339 340 341 342 343 344 345  
346 347 348 349 350 351 352 353 354 355  
356 357 358 359 360 361 362 363 364 365  
366 367 368 369 370 371 372 373 374 375  
376 377 378 379 380 381 382 383 384 385  
386 387 388 389 390 391 392 393 394 395  
396 397 398 399 400 401 402 403 404 405  
406 407 408 409 410 411 412 413 414 415  
416 417 418 419 420 421 422 423 424 425  
426 427 428 429 430 431 432 433 434 435  
436 437 438 439 440 441 442 443 444 445  
446 447 448 449 450 451 452 453 454 455  
456 457 458 459 460 461 462 463 464 465  
466 467 468 469 470 471 472 473 474 475  
476 477 478 479 480 481 482 483 484 485  
486 487 488 489 490 491 492 493 494 495  
496 497 498 499 500 501 502 503 504 505  
506 507 508 509 510 511 512 513 514 515  
516 517 518 519 520 521 522 523 524 525  
526 527 528 529 530 531 532 533 534 535  
536 537 538 539 540 541 542 543 544 545  
546 547 548 549 550 551 552 553 554 555  
556 557 558 559 560 561 562 563 564 565  
566 567 568 569 570 571 572 573 574 575  
576 577 578 579 580 581 582 583 584 585  
586 587 588 589 590 591 592 593 594 595  
596 597 598 599 600 601 602 603 604 605  
606 607 608 609 610 611 612 613 614 615  
616 617 618 619 620 621 622 623 624 625  
626 627 628 629 630 631 632 633 634 635  
636 637 638 639 640 641 642 643 644 645  
646 647 648 649 650 651 652 653 654 655  
656 657 658 659 660 661 662 663 664 665  
666 667 668 669 670 671 672 673 674 675  
676 677 678 679 680 681 682 683 684 685  
686 687 688 689 690 691 692 693 694 695  
696 697 698 699 700 701 702 703 704 705  
706 707 708 709 710 711 712 713 714 715  
716 717 718 719 720 721 722 723 724 725  
726 727 728 729 730 731 732 733 734 735  
736 737 738 739 740 741 742 743 744 745  
746 747 748 749 750 751 752 753 754 755  
756 757 758 759 760 761 762 763 764 765  
766 767 768 769 770 771 772 773 774 775  
776 777 778 779 780 781 782 783 784 785  
786 787 788 789 790 791 792 793 794 795  
796 797 798 799 800 801 802 803 804 805  
806 807 808 809 810 811 812 813 814 815  
816 817 818 819 820 821 822 823 824 825  
826 827 828 829 830 831 832 833 834 835  
836 837 838 839 840 841 842 843 844 845  
846 847 848 849 850 851 852 853 854 855  
856 857 858 859 860 861 862 863 864 865  
866 867 868 869 870 871 872 873 874 875  
876 877 878 879 880 881 882 883 884 885  
886 887 888 889 890 891 892 893 894 895  
896 897 898 899 900 901 902 903 904 905  
906 907 908 909 910 911 912 913 914 915  
916 917 918 919 920 921 922 923 924 925  
926 927 928 929 930 931 932 933 934 935  
936 937 938 939 940 941 942 943 944 945  
946 947 948 949 950 951 952 953 954 955  
956 957 958 959 960 961 962 963 964 965  
966 967 968 969 970 971 972 973 974 975  
976 977 978 979 980 981 982 983 984 985  
986 987 988 989 990 991 992 993 994 995  
996 997 998 999 1000

**NOTE #2**  
ADD JUMPER FOR MANUAL  
TRANSMITTER ONLY.

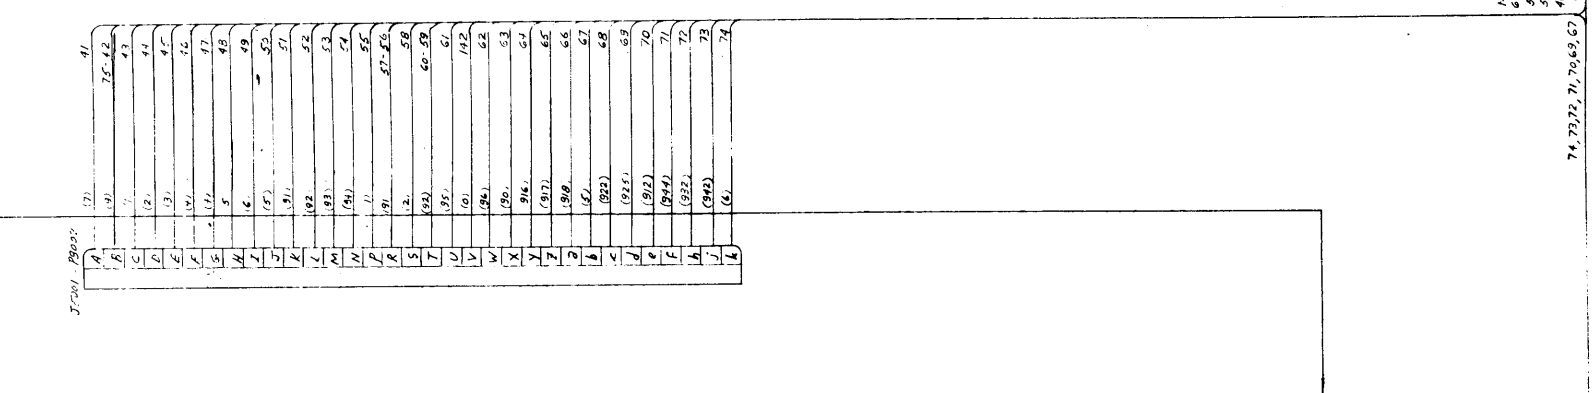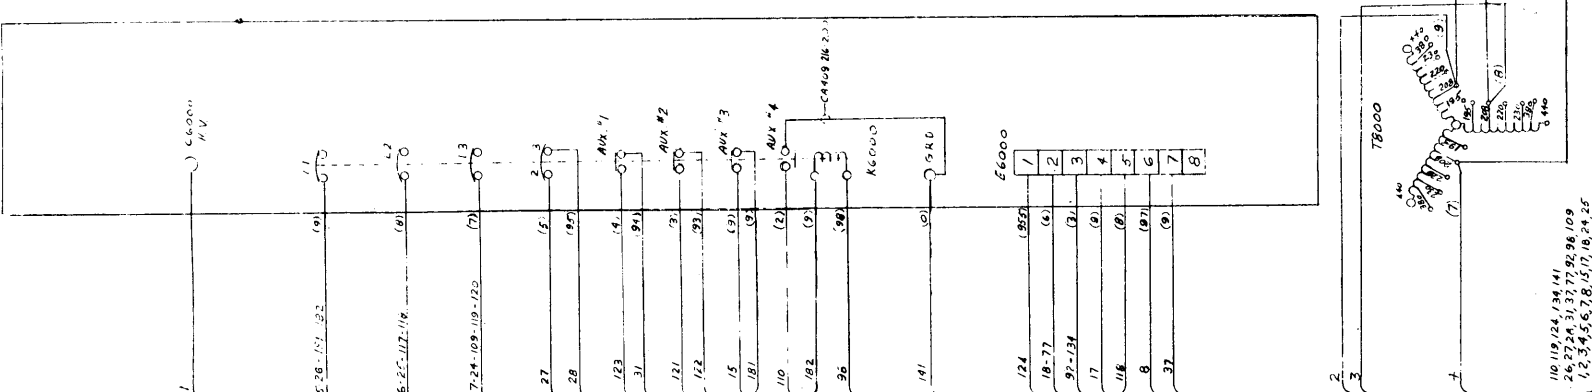

**SHEET 1**

142  
63,64,65,66,68,75  
73,78,79,80,81,82  
83,84,85,86,87  
88,89,90,91,92  
93,94,95,96,97  
98,99,100,101,102,103,104  
105,106,107,108,109,110,111,112,113,114  
115,116,117,118,119,120,121,122,123,124  
125,126,127,128,129,130,131,132,133,134,135  
136,137,138,139,140,141,142,143,144,145  
146,147,148,149,150,151,152,153,154,155  
156,157,158,159,160,161,162,163,164,165  
166,167,168,169,170,171,172,173,174,175  
176,177,178,179,180,181,182,183,184,185  
186,187,188,189,190,191,192,193,194,195  
196,197,198,199,200,201,202,203,204,205  
206,207,208,209,210,211,212,213,214,215  
216,217,218,219,220,221,222,223,224,225  
226,227,228,229,230,231,232,233,234,235  
236,237,238,239,240,241,242,243,244,245  
246,247,248,249,250,251,252,253,254,255  
256,257,258,259,260,261,262,263,264,265  
266,267,268,269,270,271,272,273,274,275  
276,277,278,279,280,281,282,283,284,285  
286,287,288,289,290,291,292,293,294,295  
296,297,298,299,300,301,302,303,304,305  
306,307,308,309,310,311,312,313,314,315  
316,317,318,319,320,321,322,323,324,325  
326,327,328,329,330,331,332,333,334,335  
336,337,338,339,340,341,342,343,344,345  
346,347,348,349,350,351,352,353,354,355  
356,357,358,359,360,361,362,363,364,365  
366,367,368,369,370,371,372,373,374,375  
376,377,378,379,380,381,382,383,384,385  
386,387,388,389,390,391,392,393,394,395  
396,397,398,399,400,401,402,403,404,405  
406,407,408,409,410,411,412,413,414,415  
416,417,418,419,420,421,422,423,424,425  
426,427,428,429,430,431,432,433,434,435  
436,437,438,439,440,441,442,443,444,445  
446,447,448,449,450,451,452,453,454,455  
456,457,458,459,460,461,462,463,464,465  
466,467,468,469,470,471,472,473,474,475  
476,477,478,479,480,481,482,483,484,485  
486,487,488,489,490,491,492,493,494,495  
496,497,498,499,500,501,502,503,504,505  
506,507,508,509,510,511,512,513,514,515  
516,517,518,519,520,521,522,523,524,525  
526,527,528,529,530,531,532,533,534,535  
536,537,538,539,540,541,542,543,544,545  
546,547,548,549,550,551,552,553,554,555  
556,557,558,559,560,561,562,563,564,565  
566,567,568,569,570,571,572,573,574,575  
576,577,578,579,580,581,582,583,584,585  
586,587,588,589,590,591,592,593,594,595  
596,597,598,599,600,601,602,603,604,605  
606,607,608,609,610,611,612,613,614,615  
616,617,618,619,620,621,622,623,624,625  
626,627,628,629,630,631,632,633,634,635  
636,637,638,639,640,641,642,643,644,645  
646,647,648,649,650,651,652,653,654,655  
656,657,658,659,660,661,662,663,664,665  
666,667,668,669,670,671,672,673,674,675  
676,677,678,679,680,681,682,683,684,685  
686,687,688,689,690,691,692,693,694,695  
696,697,698,699,700,701,702,703,704,705  
706,707,708,709,710,711,712,713,714,715  
716,717,718,719,720,721,722,723,724,725  
726,727,728,729,730,731,732,733,734,735  
736,737,738,739,740,741,742,743,744,745  
746,747,748,749,750,751,752,753,754,755  
756,757,758,759,760,761,762,763,764,765  
766,767,768,769,770,771,772,773,774,775  
776,777,778,779,780,781,782,783,784,785  
786,787,788,789,790,791,792,793,794,795  
796,797,798,799,800,801,802,803,804,805  
806,807,808,809,810,811,812,813,814,815  
816,817,818,819,820,821,822,823,824,825  
826,827,828,829,830,831,832,833,834,835  
836,837,838,839,840,841,842,843,844,845  
846,847,848,849,850,851,852,853,854,855  
856,857,858,859,860,861,862,863,864,865  
866,867,868,869,870,871,872,873,874,875  
876,877,878,879,880,881,882,883,884,885  
886,887,888,889,890,891,892,893,894,895  
896,897,898,899,900,901,902,903,904,905  
906,907,908,909,910,911,912,913,914,915  
916,917,918,919,920,921,922,923,924,925  
926,927,928,929,930,931,932,933,934,935  
936,937,938,939,940,941,942,943,944,945  
946,947,948,949,950,951,952,953,954,955  
956,957,958,959,960,961,962,963,964,965  
966,967,968,969,970,971,972,973,974,975  
976,977,978,979,980,981,982,983,984,985  
986,987,988,989,990,991,992,993,994,995  
996,997,998,999,1000

CK12450

Figure 2-5. Inter-connect Wiring Diagram, ATLA-2.5K ( sheet 3 of 3 )

## 2-5. PRE-OPERATIONAL CHECKOUT.

### NOTE

Refer to figure 3-1 for control and indicator designations called out in the following procedures.

a. PRELIMINARY. - With the MAIN POWER circuit breakers (42) set at OFF position, check for short circuits to ground:

(1) The 3-power input phases should read not less than 1 megohm.

(2) The positive side of the high voltage circuit should read not less than 100K ohms, with the shorting relays open; with the shorting relays closed, the reading should be zero.

b. LEVEL ADJUSTMENTS.

(1) BIAS LEVEL ADJUSTMENTS.

(a) Set MULTIMETER switch (24) at 1ST AMPL IP position, and adjust 1ST AMPL BIAS ADJ (60) for an indication of 10 on MULTIMETER (20).

(b) Set MULTIMETER switch (24) at 2ND AMPL IP position and adjust 2ND AMPL BIAS ADJ (59) for an indication of 5 on MULTIMETER (20).

(c) Set HIGH VOLTAGE switch (45) at ON, wait 80 seconds for Time Delay Relay to cycle, adjust PA BIAS ADJ (58) for an indication of 350 ma on IPA PLATE CURRENT meter (14). Turn off HIGH VOLTAGE switch (45).

(2) AUTOMATIC TUNING ADJUSTMENTS

(a) 100-Milliwatt Trigger Adjustment:

1. Set the signal generator, or exciter, to a frequency between 20 and 30 MHz.

2. Set SERVO switch (47) at ON position; the HIGH

VOLTAGE switch (45) should be at OFF position.

3. Advance the gain of the signal generator, or the exciter, to a 100-millivolt output.

4. Set the SENSE switch (75) at 100 MW position and monitor the output (at jack 76) with a VTVM on the +1 volt scale. Adjust the 100 MW potentiometer (located on top side of SWCA chassis) so the VTVM reads .5 volts.

(b) RF Plate Trigger Adjustment:

1. Set the frequency at 2 MHz, and tune the transmitter to full power. Reduce the plate current to read 250 ma.

2. Set the SENSE switch (75) at PA PLATE position and monitor the output (at jack 76) with a VTVM; the VTVM should be set at zero (center) indication on the -1 volt scale.

3. Adjust the RF Trigger control (19) so that VTVM reads .3 volts above zero center.

NOTE

In order to perform load sense adjustments and load pre-position adjustments that follow, leave the transmitter set up as above.

(c) Load Sense Adjustments:

1. With the RF Plate trigger adjustments set as in (b) above, set the SENSE switch (75) at the PA LOAD position, then adjust the load sense potentiometer #1 to read zero volts (zero center).

NOTE

Adjustment potentiometers are mounted on bottom underside of SWCA chassis, accessible when SWCA is pulled out of rack. Refer to figure 2-6.

2. Repeat the above step 1 with the frequency set

at 5 MHz and adjust potentiometer #2, and with frequency set at 19 MHz adjust potentiometer #3.

NOTE

Do not change the RF Trigger control (19).

(d) Load Pre-Position Adjustments:

1. With the adjustments set as in (b) and (c) above, set the frequency at 2 MHz.
2. With the XMTR TUNING switch (44) set at AUTO position and the SERVO switch (47) at OFF, reduce the power output level until the IPA PLATE CURRENT indicator reads 250 ma.
3. Unload the transmitter by turning the LOAD capacitor control (18) and re-dip the TUNE capacitor control (25) until the VTVM reads  $-.15$  volts (above zero center).
4. Using the low frequency end of each band, repeat the above procedures on all bands, and record the respective counter readings in related column in table 2-1.
5. Reduce the drive to a minimum; set HIGH VOLTAGE switch (45) at OFF position.
6. Set the frequency of the signal generator or the exciter to the first band (refer to table 2-1). Set the XMTR TUNING switch (44) at AUTO position and the SERVO switch (47) at ON position.
7. Press the TUNE switch (46). The TUNE and LOAD capacitors (25 and 18, respectively) will pre-position to settings (indicated at indicators 23 and 17, respectively).
8. Adjust the LOAD PRE-POSITION potentiometer for the selected frequency to the highest counter reading for the respective potentiometer, as indicated in table 2-1. (Refer to figure 2-6).

9. Repeat the potentiometer adjustments for remaining frequencies, as indicated in table 2-1.

10. Set the HIGH VOLTAGE switch (45) at ON position, and press the TUNE switch (46). The transmitter should tune automatically to all frequencies.

c. GENERAL TUNING.

(1) Refer to table 3-2, and set the ATLA tuning controls for desired output frequency.

(2) Using a signal generator, set output for a minimum (to prevent PA screen overload from tripping).

(3) With HIGH VOLTAGE control (45) at OFF position, turn ATLA on, and set the signal generator to 5 MHz.

(4) Set the MULTIMETER switch (24) to the 2ND AMPL EP position, and, with exciter output slightly advanced, adjust 2ND AMPL TUNING control (22) to resonance peak indication on MULTIMETER (20).

(5) Set the signal generator to minimum output, and HIGH VOLTAGE switch (45) at ON position.

(6) Advance the output of the exciter to obtain an increase on the IPA PLATE CURRENT indicator (14), then adjust power amplifier TUNE control (25) for a dip in plate current indication.

(7) Adjust the LOAD control (18) for proper power amplifier loading (depending on frequency).

NOTE

After each change of loading, return power amplifier tuning to resonance; proper loading usually will occur at a power output of 2.5 kw, and a plate current of approximately 750 ma, depending on frequency.

d. OVERLOAD ADJUSTMENTS. - Connect a signal generator to the TLAA modular unit, and perform the following adjustments:

(1) PA Plate Overload

(a) Tune the transmitter to full output on any frequency.

(b) Overload the output by increasing the power amplifier output loading (decrease output load capacity).

(c) Retune the power amplifier and increase the output of the signal generator.


(d) Adjust the PA PLATE OVLD ADJ potentiometer (49) to trip at 1.3 amperes.

(2) PA Screen Overload

(a) With the transmitter tuned to full output on a selected frequency, underload the output by decreasing the power amplifier output loading (increase output load capacity).

(b) Connect a Simpson ohmmeter (Model 260, or equivalent) in series with the screen overload relay K4003, or terminal 1 of E4001. Retune the power amplifier and increase the output of the signal generator (in order to increase the screen current).

(c) Adjust the PA SCREEN OVLD ADJ potentiometer (50) with the power amplifier screen to trip at 45 ma.

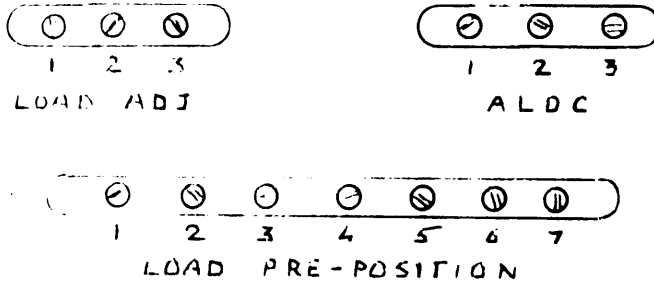

359-5

Figure 2-6. Location of Adjustment Potentiometers, SWCA

TABLE 2-1. LOAD PRE-POSITION ADJUSTMENTS, ATLA

| POTENTIOMETERS | PREPOSITION BANDS | COUNTER READING |
|----------------|-------------------|-----------------|
| 1              | 2 - 2.5           |                 |
| 2              | 2.5 - 3           |                 |
|                | 3 - 4             |                 |
| 3              | 4 - 5             |                 |
|                | 5 - 6             |                 |
| 4              | 6 - 7             |                 |
|                | 19 - 22           |                 |
|                | 22 - 24           |                 |
| 5              | 24 - 26           |                 |
|                | 7 - 9             |                 |
|                | 11 - 13           |                 |
| 6              | 15 - 17           |                 |
|                | 9 - 11            |                 |
|                | 17 - 19           |                 |
| 7              | 28 - 30           |                 |
|                | 13 - 15           |                 |
|                | 26 - 28           |                 |

## SECTION 3

### OPERATOR'S SECTION

#### 3-1. GENERAL.

Before operating the ATLA, the operator should familiarize himself with the controls and indicators illustrated in figure 3-1 and described in table 3-1. Refer to Section 1 of this manual for detailed technical information regarding the ATLA modular units. Table 3-2 provides typical tuning information.

#### 3-2. OPERATING PROCEDURE.

The ATLA control settings for (a) manual tuning, (b) servo tuning, and (c) remote servo tuning are as follows:

##### a. MANUAL TUNING

- (1) Tune the associated exciter to the carrier frequency, at a signal level of at least 100 mw and not to exceed 500 mw.
- (2) Set the LOCAL/REMOTE switch (77) at LOCAL position.
- (3) Set MAIN POWER circuit breakers (42) at ON position, and allow approximately 1 minute for the filament timer to activate.
- (4) Set XMTR TUNING switch (44) at MANUAL position, and the SERVO switch (47) at ON position.
- (5) Set the RF GAIN control (11) completely counter-clockwise.
- (6) Set the Frequency Selector switch (6) to the desired frequency band.
- (7) Set the Power Limit controls (8,13) for desired power output (controls 8 and 13 are for minimum and maximum power output settings, respectively).
- (8) Set the LOAD and TUNE controls (18 and 25 respectively) to obtain capacitor counter (approximate) readings as given in table 3-2 on indicators (17 and 23, respectively).
- (9) Set MULTIMETER switch (24) at extreme clockwise position.

- (10) Advance RF GAIN control (11) and adjust 2ND AMPL TUNING control (22) for a peak indication on MULTIMETER (20); adjust RF GAIN control (11) for MULTIMETER (20) indication not to exceed 20.
- (11) Set RF GAIN control (11) counter-clockwise to decrease gain.
- (12) Set the HIGH VOLTAGE switch (45) at ON position.
- (13) Advance the RF GAIN control (11) for an increase in IPA PLATE CURRENT indicator (14) and adjust TUNE control (25) for a dip in plate current indication. Advance the LOAD control (18) until a desired output is obtained. Proper loading usually will occur at a power output of 2.5kw and a plate current of approximately 750 ma, depending on frequency.

NOTE

Retune plate resonance  
after adjusting the LOAD  
control (18).

- (14) After the READY lamp (2) lights, indicating the ATLA is ready for operation, insert the intelligence (not to exceed a power amplifier output of 2.5kw P-P, or average).

b. SERVO TUNING

- (1) The associated exciter should be tuned to the carrier frequency, and set at a signal level of at least 100 mw and not to exceed 500 mw.
- (2) Set the LOCAL/REMOTE switch (77) at LOCAL position.
- (3) Set MAIN POWER circuit breakers (42) at ON position, and allow approximately 1 minute for the filament timer to activate.
- (4) Set XMTR TUNING switch (44) at AUTO position, and the SERVO switch (47) at ON position.

NOTE

If manual tuning is desired  
(over-riding the SERVO), set  
the XMTR TUNING switch (44) at  
MANUAL position.

If manual setting of the band  
switches is desired, the SERVO  
switch (47) must be set at OFF  
position

- (5) Set the RF GAIN control (11) completely counter-clockwise.
- (6) Set the Frequency Selector switch (6) to the desired frequency band.
- (7) Set the Power Limit controls (8, 13) for desired power output (controls 8 13 are for minimum and maximum power output settings, respectively).
- (8) Set the HIGH VOLTAGE switch (45) at ON position.
- (9) Press the TUNE switch (46). Allow several seconds for the tuning to take place; the READY lamp (2) will light, indicating the ATLA is ready for operation. Insert the intelligence (not to exceed a power amplifier output (2.5kw P-P, or average.)

(c) REMOTE SERVO TUNING

- (1) Set the MAIN POWER circuit breakers (42) at ON position, and allow approximately 1 minute for the filament timer to activate.
- (2) Set XMTR TUNING switch (44) at AUTO position and the SERVO switch (47) at ON position.
- (3) Set the Power Limit controls (8,13) for desired power output (controls 8 and 13 are for minimum and maximum power output settings, respectively).
- (4) Set the RF GAIN control (11) completely counter-clockwise.
- (5) Set the HIGH VOLTAGE switch (45) at ON position.
- (6) Set the LOCAL/REMOTE switch (77) at REMOTE position.
- (7) Set the TRANSMITTER FREQUENCY switch (81) at desired band (switch 81 now controls the Frequency Selector switch 6).
- (8) Set the associated exciter to the carrier frequency, and at a level of at least 100 mw and not to exceed 500 mw.
- (9) Press the TUNE switch (80). Allow several seconds for tuning to take place; the READY lamp (78) will light, indicating the ATLA is ready for operation. Insert the intelligence (not to exceed a power amplifier output of 2.5kw P-P, or average).

NOTE

To change frequency, repeat steps 7,8, and 9.

TABLE 3-1. CONTROLS AND INDICATORS, ATLA

| MODULAR Unit                                       | ITEM No. (Fig. 3-1) | DESIGNATION                                      | FUNCTION  |
|--|---------------------|--|---|
| RAK  | 1                   | TECHNIMATIC lamp                                 | Indicates when primary circuit breaker (42) is set at ON position.                  |
|  | 2                   | READY lamp                                       | Indicates ATLA is ready for operation.  |
|  | 3                   | HIGH VOLTAGE lamp                                | Indicates when high voltage circuit breaker (45) is set at ON position.             |
| Stand-<br>ing Wave<br>Ratio In-<br>dicator<br>SWCA | 4                   | Power Meter (no panel designation)               | Indicates forward and reflected power (KW).   |
|  | 5                   | 24V DC fuse                                      | Protective fuse for control circuits; lights to indicate fuse has blown.            |
|  | 6                   | Frequency Selector Switch (no panel designation) | Selects frequencies in the 2- to 30-mc range.                                       |
|  | 7                   | 230V AC fuse                                     | Protective fuse for power output meter circuits; lights to indicate fuse has blown. |
|  | 8                   | Power Limit control (no panel designation)       | Used for setting minimum r-f power output of ATLA.                                  |
|  | 9                   | SWR OVLD lamp                                    | Lights when standby wave ratio is excessive.  |
|  | 10                  | FAULT lamp                                       | Lights to indicate ATLA failed to tune in specified time.                           |
|  | 11                  | RF GAIN control                                  | Adjusts excitation level to the TLAA (higher level in INCR arrow direction).        |
|  | 12                  | KW/REFL switch                                   | Activates meter (4) for forward or reflected power indication.                      |
|  | 13                  | Power Limit control (no panel designation)       | Used for setting maximum r-f power output of ATLA.                                  |
| Linear Amplifier TLAA                              | 14                  | IPA PLATE CURRENT indicator                      | Indicates intermediate power amplifier plate current.                               |

TABLE 3-1. CONTROLS AND INDICATORS, ATLA (CONT.)

| MODULAR UNIT                 | ITEM No.<br>(FIG.3-1) | DESIGNATION                            | FUNCTION  |
|------------------------------|-----------------------|--|---|
| Linear Amplifier TLAA (cont) | 15                    | ALDC ADJ control                       | Adjusts level of negative feedback applied to the exciter.  |
|                              | 16                    | PA BANDSWITCH switch                   | Selects 2- to 30-mc range in 9 increments.  |
|                              | 17                    | Indicator (no panel designation)       | Veeder indicator for LOAD control (18).   |
|                              | 18                    | LOAD control                           | Adjusts the loading of the final PA.  |
|                              | 19                    | RF trig control (no panel designation) | PA plate trigger adjustment for sensing circuit (factory adjusted).   |
|                              | 20                    | MULTIMETER indicator                   | Indicates 1st amplifier plate current, 2nd amplifier plate current, 2nd amplifier r-f plate voltage, and power amplifier r-f plate voltage. |
|                              | 21                    | 2ND AMPL BANDSWITCH switch             | Selects 2- to 30-mc range in 9 increments.  |
|                              | 22                    | 2ND AMPL TUNING control                | Adjusts resonance of the 2nd amplifier.   |
|                              | 23                    | Indicator (no panel designation)       | Veeder indicator for TUNE control (25).   |
|                              | 24                    | MULTIMETER switch                      | Selects circuit for MULTIMETER (20).  |
| 25                           | TUNE control          | Adjusts resonance of the final PA.     |   |
| Servo Amplifier TCSA         | 26                    | AC fuse                                | Protects input circuit of power supply.   |
|                              | 27                    | DC fuse                                | Protects output circuit of power supply.  |
|                              | 28                    | AC fuse                                | Same as item 26.  |
|                              | 29                    | DC fuse                                | Same as item 27.  |
|                              | 30                    | DC fuse                                | Same as item 27.  |
|                              | 31                    | AC fuse                                | Same as item 26.  |

TABLE 3-1. CONTROLS AND INDICATORS, ATLA (CONT.)

| MODULAR UNIT                 | ITEM No. (Fig 3-1)                 | DESIGNATION                             | FUNCTION  |
|------------------------------|------------------------------------|---|---|
| Servo Amplifier TCSA (con't) | 32                                 | R.F.P.O.                                | R-F Power On adjustment (factory adjusted).   |
|                              | 33                                 | OPERATE lamp                            | Lights when PA stage has completed loading  |
|                              | 34                                 | SEARCH lamp                             | Lights when PA stage is being loaded.   |
|                              | 35                                 | AC ON lamp                              | Lights when servo amplifiers are tuning.  |
|                              | 36                                 | OPERATE lamp                            | Lights when PA has completed tuning.  |
|                              | 37                                 | SEARCH lamp                             | Lights when final amplifier is tuning.  |
|                              | 38                                 | AC ON lamp                              | Same as item 35.  |
|                              | 39                                 | AC ON lamp                              | Same as item 35.  |
|                              | 40                                 | SEARCH lamp                             | Lights when 2nd amplifier is tuning.  |
|                              | 41                                 | OPERATE lamp                            | Lights when 2nd amplifier completes tuning.   |
|                              | Linear Amplifier Control Panel TCP | 42                                      | MAIN POWER circuit breakers   |
| 43                           |                                    | OVLD RESET switch                       | Resets the overload relays.   |
| 44                           |                                    | XMTR TUNING AUTO/MANUAL switch          | When set at AUTO, allows automatic operation of ATLA; when set at MANUAL, allows the ATLA to be tuned manually. |
| 45                           |                                    | HIGH VOLTAGE switch                     | Controls application of power to high voltage power supply AP129.   |
| 46                           |                                    | TUNE switch                             | When depressed, initiates automatic tuning and loading.   |
| 47                           |                                    | SERVO ON/OFF switch                     | When set at ON, enables activation of automatic band switching and tuning circuits.                             |
| 48                           |                                    | Interlock switch (no panel designation) | Used to locate open interlock switches (lamp above switch lights, indicating interlock switch is closed).       |

TABLE 3-1. CONTROLS AND INDICATORS ATLA (CONT.)



| MODULAR UNIT                         | ITEM No.<br>(Fig.3-1) | DESIGNATION                      | FUNCTION                                 |
|--------------------------------------|-----------------------|----------------------------------|--|
| Low Voltage<br>Power Supply<br>AP128 | 49                    | PA PLATE OVLD ADJ potentiometer  | Used to set plate overload.              |
|                                      | 50                    | PA SCREEN OVLD ADJ potentiometer | Used to set screen overload.             |
|                                      | 51                    | FILAMENT TIME meter              | Registers filament operation time.       |
|                                      | 52                    | IPA BANDSWITCH fuse              | Protective fuse.                         |
|                                      | 53                    | PA BANDSWITCH fuse               | Protective fuse.                         |
|                                      | 54                    | INTERLOCK fuse                   | Protective fuse.                         |
|                                      | 55                    | INTERLOCK fuse                   | Protective fuse.                         |
|                                      | 56                    | IPA SCREEN fuse                  | Protective fuse.                         |
|                                      | 57                    | PA BIAS OVLD lamp                | Overload indicator light.                |
|                                      | 58                    | PA BIAS ADJ potentiometer        | Adjust PA grid bias.                     |
|                                      | 59                    | 2ND AMPL BIAS ADJ potentiometer  | Adjust 2nd amplifier grid bias.          |
|                                      | 60                    | 1ST AMPL BIAS ADJ potentiometer  | Adjust 1st amplifier grid bias.          |
|                                      | 61                    | FILAMENT fuse                    | Protective fuse.                         |
|                                      | 62                    | PLATE TIME meter                 | Registers final PA plate operation time. |
|                                      | 63                    | LOW VOLTAGE fuse                 | Protective fuse.                         |
|                                      | 64                    | BLOWER fuse                      | Protective fuse.                         |
|                                      | 65                    | BIAS fuse                        | Protective fuse.                         |
|                                      | 66                    | PA SCREEN fuse                   | Protective fuse.                         |
| 67                                   | PA SCREEN OVLD lamp   | Overload indicator light.        |  |
| 68                                   | PA PLATE OVLD lamp    | Overload indicator light.        |  |

TABLE 3-1. CONTROLS AND INDICATORS, ATLA (CONT)

| MODULAR UNIT               | ITEM NO.<br>(Fig 3-1) | DESIGNATION                         | FUNCTION  |
|----------------------------|-----------------------|-------------------------------------|---|
| Alarm Panel<br>AX633       | 69                    | DC fuse                             | Protective fuse for alarm device circuit.   |
|                            | 70                    | AUDIO IN jack                       | Provides for audio test signal to be applied (during maintenance procedures).             |
|                            | 71                    | PA MON jack                         | Provides PA monitoring outlet for test purposes.  |
|                            | 72                    | Alarm Device (no panel designation) | Alarm sounds if primary power to high voltage power supply is interrupted.                |
|                            | 73                    | ALARM ON/OFF switch                 | Acitvates alarm device circuit when set at ON position.                                   |
|                            | 74                    | EXCITER MON jack                    | Provides exciter monitoring outlet (for test purposes).                                   |
|                            | 75                    | SENSE switch                        | Provides for the selection of circuits (as marked) for test purposes.                     |
|                            | 76                    | SENSE lamp                          | Provides monitoring outlet for the sensing positions of SENSE switch 75.                  |
| Preposition Panel<br>AX631 | 77                    | LOCAL/REMOTE switch                 | Set normally at LOCAL position; when set at REMOTE position allows remote operation ATLA. |
|                            | 78                    | READY lamp                          | Same function as item 2.  |
|                            | 79                    | FAULT lamp                          | Same function as item 10.   |
|                            | 80                    | TUNE switch                         | Same function as item 46.   |
|                            | 81                    | TRANSMITTER FREQUENCY switch.       | Controls item 6.  |

TABLE 3-2 SAMPLE TUNING CHART, ATLA

| FREQ.<br>OUT<br>mc | CONTROL SETTINGS |            |            | INDICATOR READINGS |                    |             |
|--------------------|------------------|------------|------------|--------------------|--------------------|-------------|
|                    | PA<br>BAND       | PA<br>TUNE | PA<br>LOAD | PA<br>IP<br>ma     | P out<br>KW<br>PEP | DIST.<br>dB |
| 2.0                | 2-2.5            | 129        | 156        | 580                | 2.5                | 35          |
| 2.5                | 2-2.5            | 101        | 063        | 580                | 2.5                | 36          |
| 2.5                | 2.5-3.0          | 110        | 033        | 650                | 2.5                | 36          |
| 3.0                | 2.5-3.0          | 094        | 078        | 620                | 2.5                | 36          |
| 3.0                | 3.0-5.0          | 103        | 141        | 600                | 2.5                | 35          |
| 5.0                | 3.0-5.0          | 075        | 057        | 660                | 2.5                | 36          |
| 5.0                | 5.0-7.0          | 082        | 089        | 620                | 2.5                | 35          |
| 7.0                | 5.0-7.0          | 070        | 052        | 580                | 2.5                | 37          |
| 7.0                | 7.0-11.0         | 085        | 086        | 560                | 2.5                | 35          |
| 11.0               | 7.0-11.0         | 068        | 045        | 620                | 2.5                | 38          |
| 11.0               | 11.0-15.0        | 081        | 080        | 620                | 2.5                | 38          |
| 15.0               | 11.0-15.0        | 071        | 051        | 580                | 2.5                | 37          |
| 15.0               | 15.0-19.0        | 076        | 076        | 600                | 2.5                | 35          |
| 19.0               | 15.0-19.0        | 067        | 059        | 420                | 2.5                | 35          |
| 19.0               | 19.0-24.0        | 072        | 077        | 500                | 2.5                | 37          |
| 24.0               | 19.0-24.0        | 063        | 059        | 600                | 2.5                | 38          |
| 24.0               | 24.0-30-0        | 071        | 068        | 620                | 2.5                | 35          |
| 30.0               | 24.0-30.0        | 060        | 054        | 600                | 2.5                | 40          |

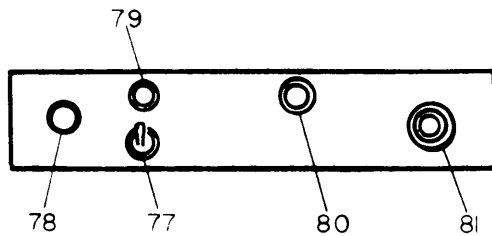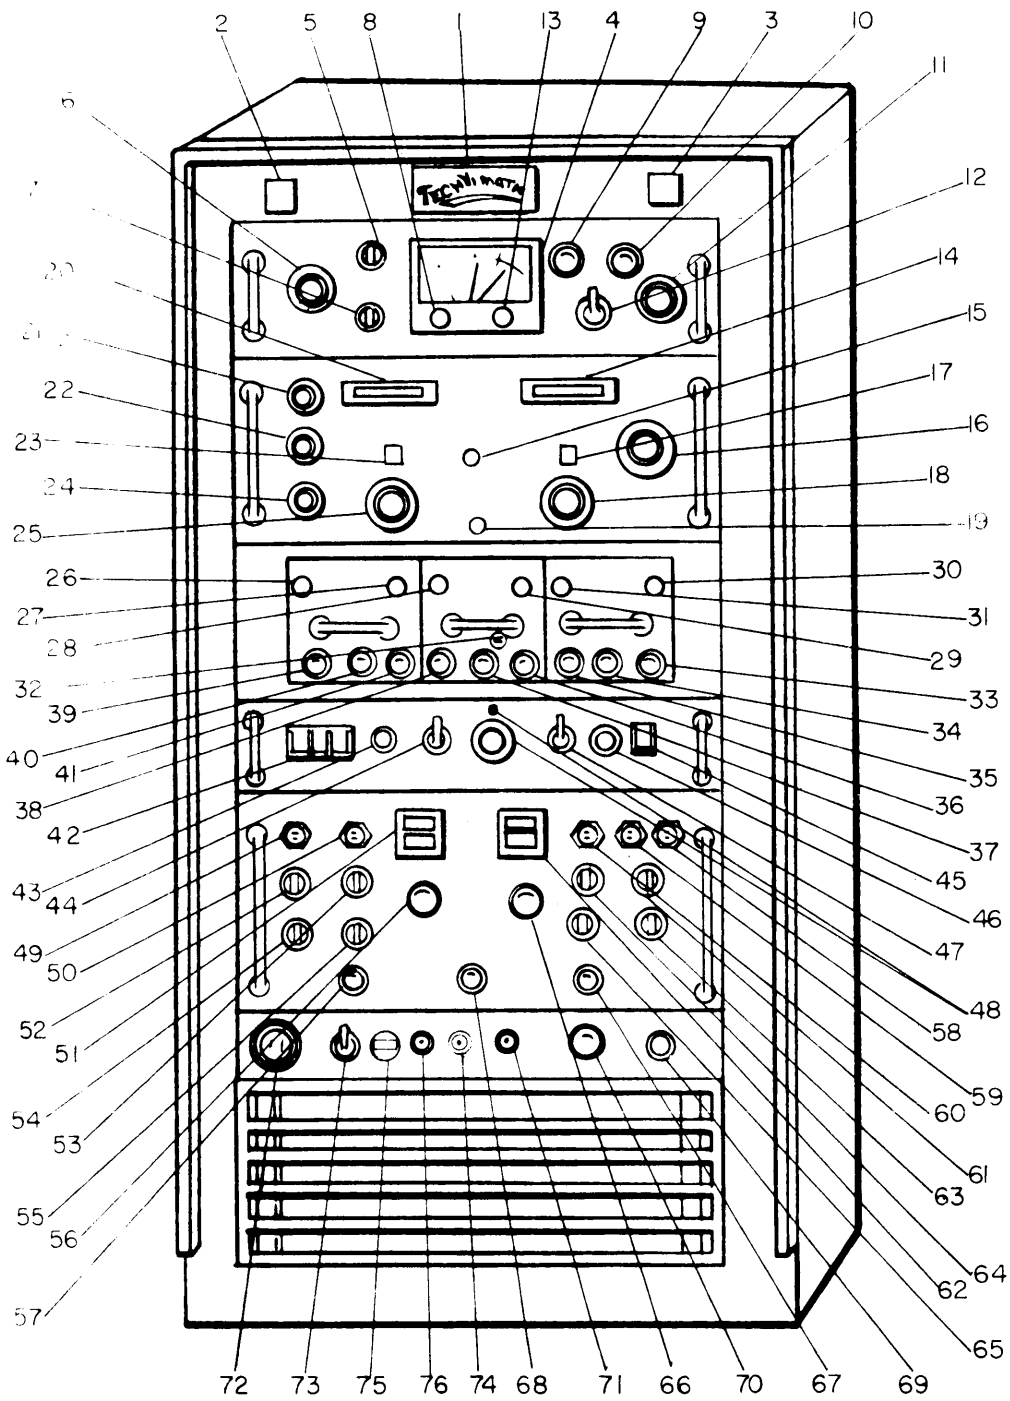

359-6

Figure 3-1. Controls and Indicators, ATLA

## SECTION 4

# PRINCIPLES OF OPERATION

### 4-1. GENERAL

The ATLA-2.5K is a general purpose linear amplifier that contains circuitry for automatically pre-positioning the band switches of the linear amplifier, TLAA-2.5K.

### 4-2. FUNCTIONAL ANALYSIS

a. General - The ATLA comprises eight major sections as follows:

- a. Servo Amplifier, TCSA-1.
- b. Linear Power Amplifier, TLAA-2.5K.
- c. RF Control and Indicator, SWCA-3K.
- d. Preposition Panel, AX631.
- e. Linear Amplifier Control Panel, TCP-1.
- f. Alarm Panel, AX633.
- g. Low Voltage Power Supply, AP-128/50.
- h. High Voltage Power Supply, AP-129/50.


b. BLOCK DIAGRAM Analysis (See Figure 4-1) - The 2 to 30 mc (MHz) output of the associated exciter is extended via the RF GAIN control of the SWCA to the linear power amplifier TLAA where the exciter output level is increased to 2.5 KW. Low level r-f signals applied to the TLAA are routed through a broadband amplifier, a tuned second amplifier and a tuned final amplifier to the r-f output jack at the rear of the TLAA. The second and final amplifier band switches are automatically pre-positioned by a switch located on the SWCA. Front panel meters provide the required indications for tuning and loading the amplifier stages. Operating power for TLAA is furnished by power supplies AP128 and AP129.

The 2.5kw output of the TLAA is coupled to the antenna via a directional coupler which provides the forward and reflected power indication to the SWCA.

The RF Control and Indicator SWCA comprises an RF GAIN control that adjusts the r-f excitation to the TLAA, a pre-position switch that sets the TLAA bandswitches to the proper band segment, and a front panel meter that provides a forward and reflected power output indication of the ATLA. The r-f output of the exciter is applied across the 50-ohm RF GAIN control and the TLAA is connected to the wiper. The pre-positioning switch receives its operating voltage from the power supply AP128. When the MANUAL/AUTO switch is set at AUTO, contacts of a relay in the AP128 supply the voltage required to activate the stepping switches attached to the second and final PA bandswitches. The power meter circuit is configured to permit selection of forward or reflected power indications depending upon the setting of the FWD/REFL switch. The reflected power is monitored in a separate circuit that trips the overload relay when the SWR reaches 2:1 or 3:1 depending on the setting of the rear panel switch.

The low voltage power supply AP-128 provides filament voltage and bias for all amplifier stages in the transmitter, plate and screen voltages for the first two amplifier stages, screen voltage for the PA stage, and 24 vac for the interlock circuits. The Low Voltage Power Supply contains overload relays that open interlocks, cutting off all voltages to the 2.5-kw PA stage when preset overload levels are exceeded. The protective circuits sample the PA plate and screen currents and bias supply voltages and activate the overload relay of the SWCA when any of these currents are excessive.

The High Voltage Power Supply AP-129 supplies the 5000 vdc for the operation of the final power amplifier of the TLAA. The AP-129 receives its operating power from a high voltage contactor that is energized by phase-two voltage supplied by the interlock relay, and phase-three voltage that is supplied by the HIGH VOLTAGE switch on TCP.

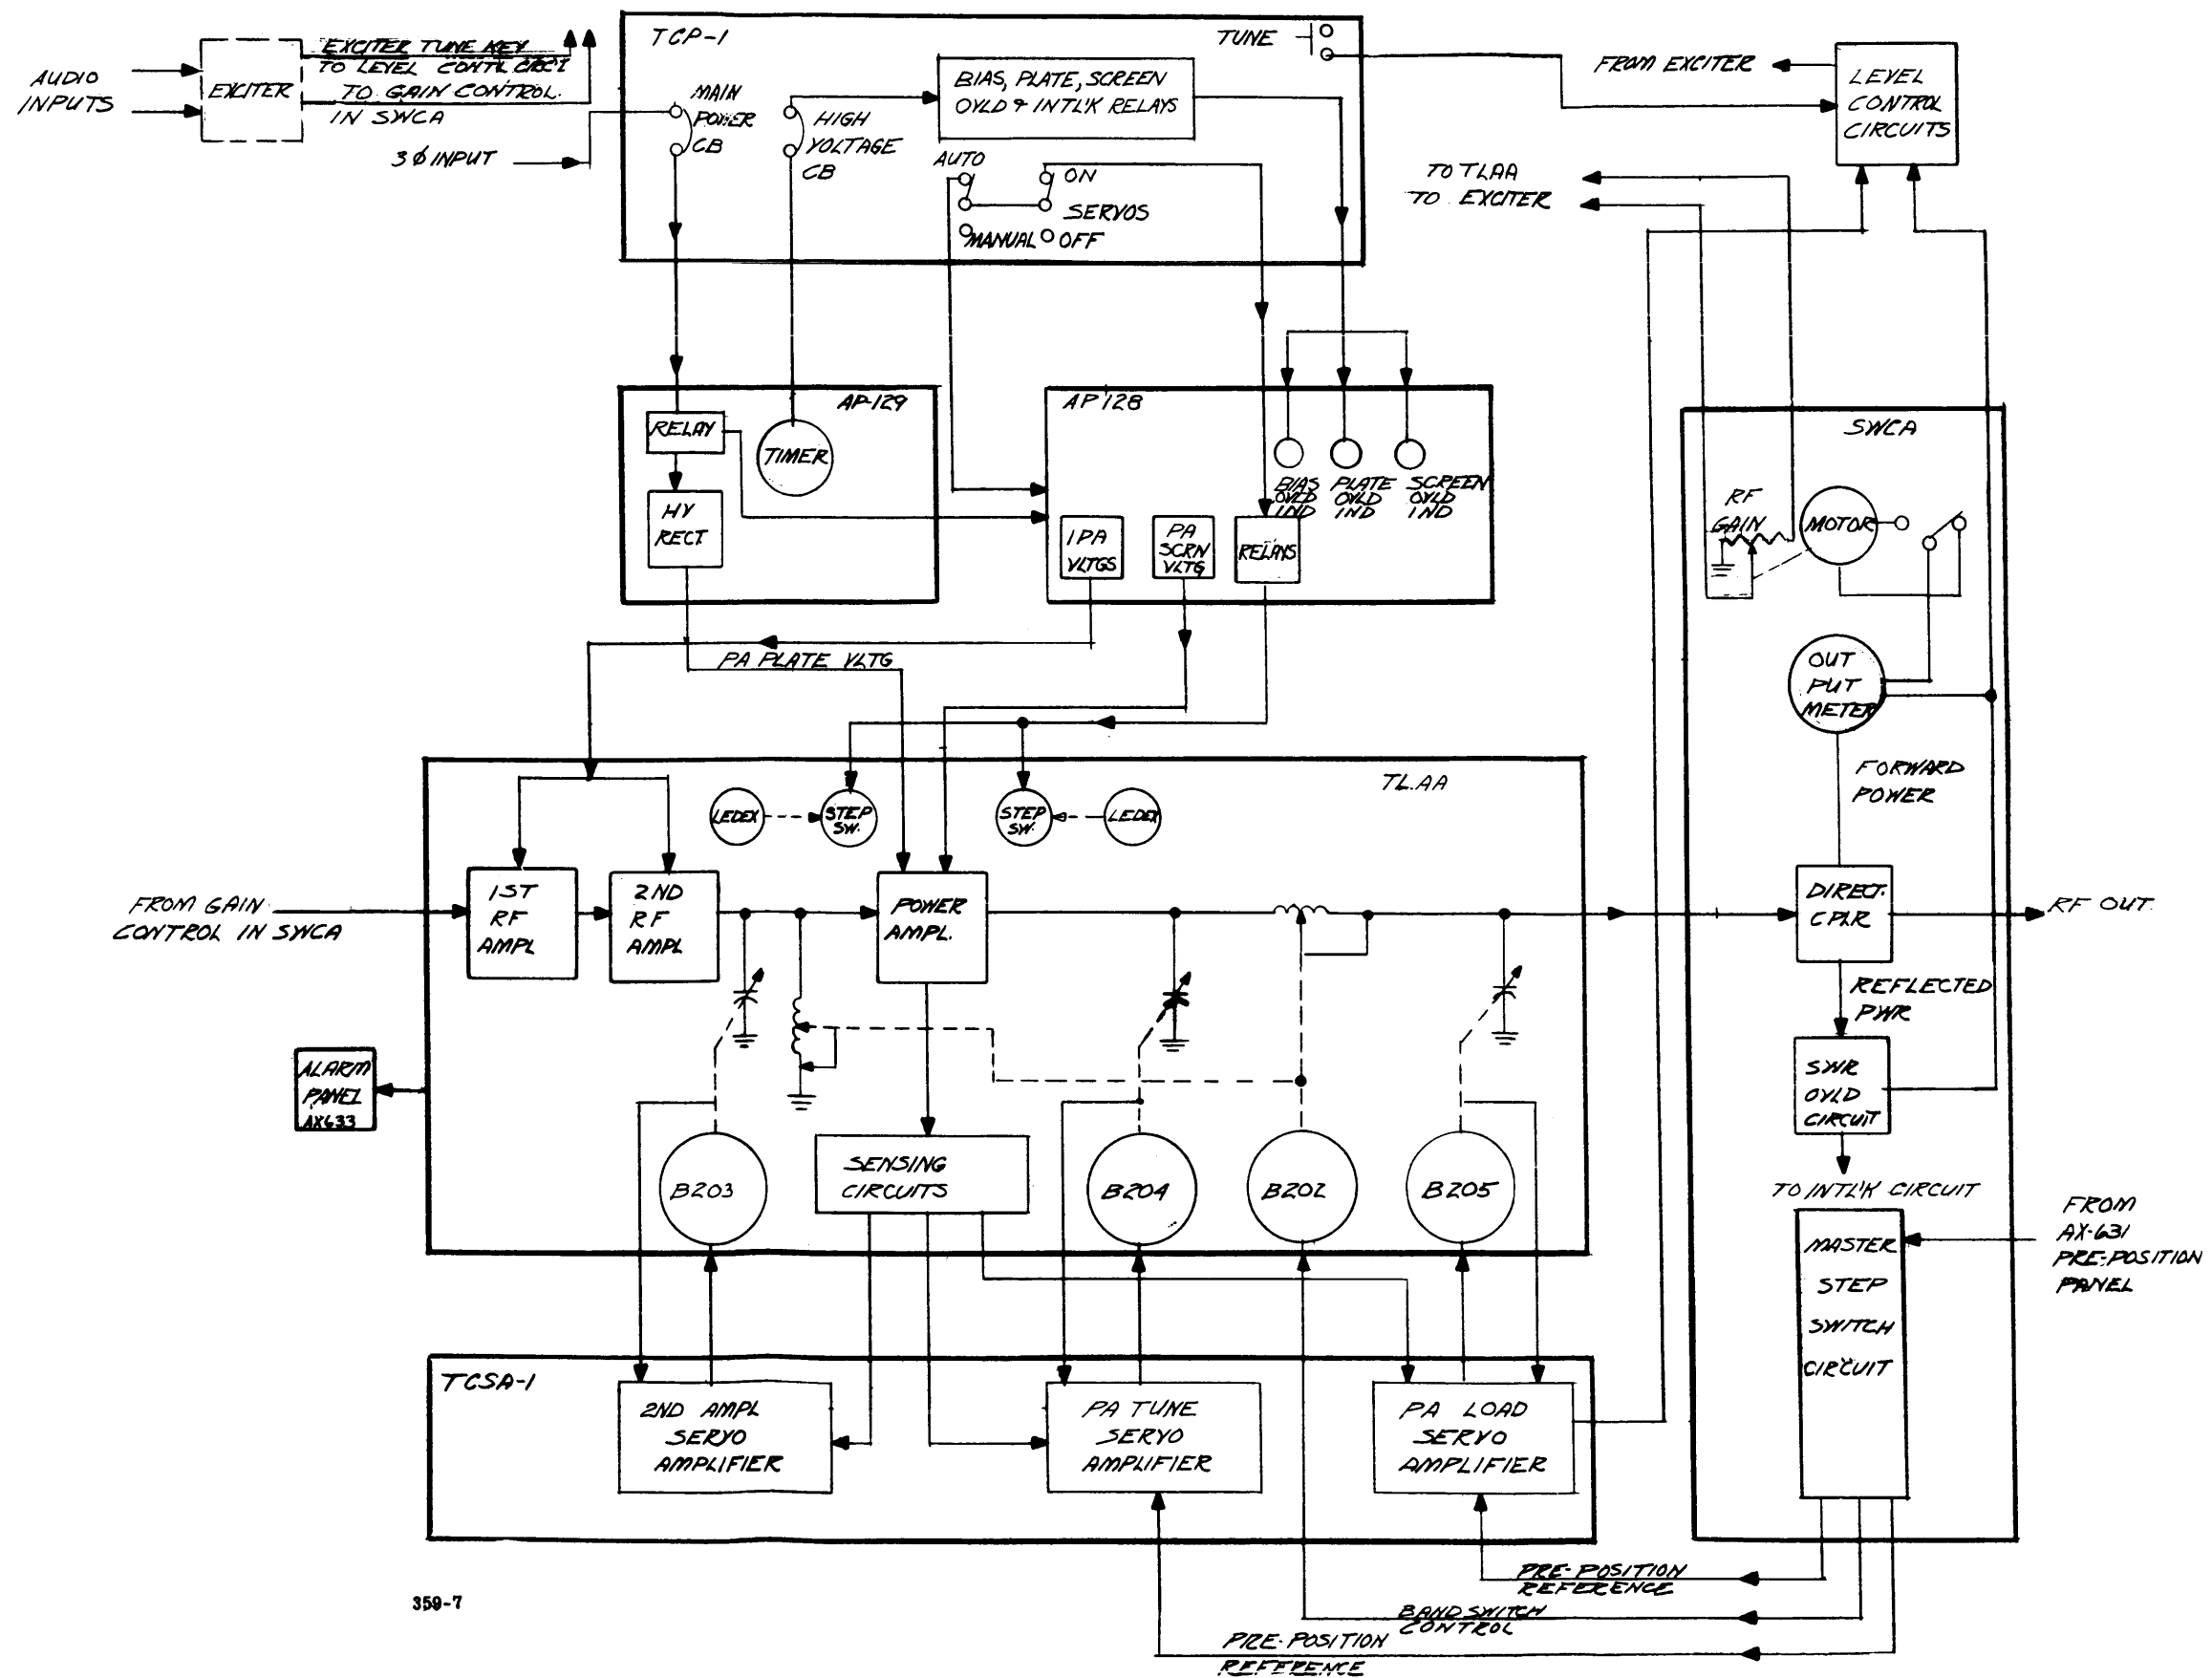

359-7

Figure 4-1. Simplified Functional Block Diagram, ATLA

### 4-3. TECHNIMATIC CIRCUIT ANALYSIS

Band switches and tuning and loading elements in the Linear Amplifier r-f circuits are automatically positioned after application of appropriate control signals from the pre-position panel AX631 and the exciter RF.

Pre-position panel AX631 controls the positioning of a master stepping switch that is located in the SWCA . The Linear Amplifier's frequency range (2- to 30-mc) is divided into 10 segments. The master stepping switch is positioned to one of its 10 positions which corresponds to that segment of the 2- to 30-mc frequency range to which an external exciter is tuned.

The band switch in the Linear Amplifier is positioned in accordance with control signals from the master stepping switch assembly. The inductive component of the Linear Amplifier tuned circuit is therefore adjusted for operation in the selected frequency range.

The three tuning and loading capacitors in the transmitter (2nd AMPL TUNE, PA TUNE, and PA LOAD) are set at pre=position settings when the associated servo amplifiers are initially turned on. The capacitors (all except 2nd AMPL TUNING) are positioned according to reference signals from the master stepping switch assembly. The capacitor settings are therefore dependent on the selected output frequency. Tuning time is thus minimized.

The sensing circuit generates input signals for the 2nd AMPL servo amplifier. The input for the 2nd AMPL servo amplifier is dependent on tube plate current. Since tube plate current increases with excitation, and excitation is dependent on the input circuit resonance, the 2nd AMPL tuning capacitor is adjusted until the required tube plate current is reached.

The PA sensing circuits generate outputs that are dependent on PA tube plate current, pi input reactance, and pi input impedance. When excitation is applied to the PA, plate current increases, and a signal from the sensing circuits trigger the PA TUNE servo amplifier into operation. The PA tuning capacitor is adjusted so as to minimize pi input impedance to a predetermined value. After tuning and loading of the PA is accomplished, a Drive-up signal is applied to the linear level control circuits from the PA LOAD servo amplifier.

Upon reception of the tuning completion signal, the relay circuits in the linear level control disable the servo amplifier and band switch control circuits. The linear level control also disconnects the level control circuits in the stepping switch assembly, and enables its own level control circuit. The linear level control assembly supplies a changing control signal to the exciter so that excitation is increased. Directional coupler generates a signal proportional to transmitter power output; when output power reaches a pre-determined point (usually 1.25 kw), the excitation level control signal is stabilized.

a. 2ND AMPL SERVO AMPLIFIER (AZ-110).

(1) GENERAL. - The AZ-110 supplies control voltage to the second r-f amplifier tuning motor. This control voltage is in turn dependent on one of two servo-amplifier input signals: a pre-position feedback signal, or a sense signal. The servo amplifier has three modes of operation: pre-position, search, and operate. Each of these modes are discussed in sequence.

(2) PRE-POSITION. - A pre-position feedback signal enters the AZ-110 at pin 6 of jack P8004, and is routed to pin 1 of plug-in module Z400. Module Z400 also receives a pre-position reference signal (-0.5 vdc) at pin 25. The pre-position feedback signal is a voltage between 0 and +20 vdc. The feedback and reference signals are algebraically added and the resultant is modulated signal is amplified, and routed to contact 3 of relay K400 via pin 11 of J400.

When the pre-position feedback signal is appreciably removed from +0.5 vdc, relay K400 is deenergized, and the a-c modulated signal from pin 11 of Z500 is routed to pin 10 of Z101. This a-c modulated signal is amplified in Z401, and routed to the second amplifier tuning motor via pins 14 and 16 of J402. When the feedback signal approaches a level of +0.5 vdc (the algebraic sum of the feedback and reference signals is small), tuning motor control voltage diminishes, and relay K400 is energized. With K400 energized, the signal path from pin 11 of Z400 to pin 10 of Z401 is broken; also, +28 vdc is applied to the coil of relay K402 and to SERCH lamp DS401.

(3) SEARCH. - A sense signal enters the AZ-110 at pin 1 of jack P8004 this sense signal is a current between 0 and +200 ua.

A voltage divider comprising resistors R412 and R413, and resistor R411 form a -200 ua current source; this is the sense reference signal. The sense input and sense reference signals are algebraically added, and the sum is applied to transformer T401 via resistor R407 and chopper G400. The a-c signal from the secondary of T401 (dependent in amplitude on the sense-input signal) is applied to plug-in module Z401 at pins 1 and 9 of Z401. The signal at pins 1 and 9 of Z401 is amplified, and routed to contact 6 of relay K401 via pin 3 of J401. When K401 is energized (pre-positioning is completed), the signal from pin 3 of J401 is routed via resistor R408 to pin 10 of Z401; this signal is amplified and routed to the tuning motor.

(4) OPERATE . - When the sense-input signal approaches +200ua (the algebraic sum of the sense-input and sense-reference signals is small), control voltage for the tuning motor diminishes; also, relay K401 is energized. Operation of K401 lights OPERATE lamp DS400, and removes supply voltage from the heater of relay K404. Relay K400, and pin 8 of Z400, however, are returned to the +28 vdc supply via diode CR405 and the external limit switch (connected between pins 30 and 31 of J402). When the sense-input signal reaches +200 ua (indicating that the second r-f amplifier is properly tuned), a 28-volt shut-off signal is applied to pin 13 of J402. This shut-off signal energized relay K403. Operation of K403 grounds out the sense-input signal, and removes supply voltage from the tuning motor (normally supplied via pin 15 of J402)

(5) LIMIT SWITCH OPERATION. - If the external limit switch (connected between pins 30 and 31 of J402) opens during the search or operate sequence of operation, relay K400 is deenergized,

28 volts is removed from pin 7 of Z400, and the servo amplifier begins operating in pre-position mode. Note that the signal from pin 11 of Z400 is again routed to pin 10 of Z401. The unit will continue to operate in pre-position mode until the pre-position feedback signal reaches +0.5 vdc, and the search sequence begins.

b. PA TUNE SERVO AMPLIFIERS (AZ112).

(1) GENERAL. - The AZ112 supplies a control voltage to the PA tuning motor. This control voltage is, in turn, dependent on various servo-amplifier input signals: pre-position feedback and reference signals, an internally generated search signal, an r-f trigger input, a coarse-tune sense signal, and a fine-tune sense signal. The servo amplifier has three modes of operation: pre-position, search, and operate. Each of these modes is discussed in sequence.

(2) PRE-POSITION. - A pre-position feedback signal enters the AZ-112 at pin 5 of jack P8005 and is routed to pin 12 of plug-in module Z300; a pre-position reference signal enters the AZ112 at pin 6 of P8005 and is routed to pin 25 of Z300. The pre-position feedback signal is a d-c analogue (between 0 and -20 vdc) of the tuning capacitor setting. The pre-position reference signal is set at a point between 0 and +20 vdc in accordance with the desired tuning capacitor setting. The feedback and reference signals are algebraically added and the resultant is modulated with 60 cps a-c (supplied at pins 21 and 22 of J300). This a-c modulated signal is amplified, and routed via pin 11 of J300, contacts 3 and 4 of relay K301, and pin 10 of J301 to module Z301. The a-c modulated signal is further amplified in Z301, and routed to the external tuning motor via pins 14 and 16 of J302.

When the associated tuning capacitor approaches the correct pre-position setting, the algebraic sum of the feedback and reference signals diminishes, and control voltage for the tuning motor diminishes. When the tuning capacitor reaches its correct setting, the algebraic sum of the feedback and reference signals is zero (the feedback and reference signals are equal and opposite in polarity), and control voltage is removed from the tuning motor.

(3) SEARCH. - Application of an RFPO trigger at pin 3 of P8005 causes relay K301 to energize. The RFPO trigger indicates that the previous amplifier stage is tuned. With K301 energized, power is applied to pin 7 of Z300, and to SEARCH lamp DS301; also the signal path between pin 11 of Z300 to pin 10 of Z301 is broken, and Z301 receives a 60 cps signal from terminal 11 of transformer T300 via contacts 12 and 11 of K303 and resistor R301. This 60 cps signal is amplified in Z301, and then routed to the associated tuning motor.

A coarse-tuning sense signal enters the AZ112 at pin 21 of P8005; this signal is routed to module Z301 via contacts 8 and 9 of K303, chopper G300, and transformer T302. Chopper G300 and transformer T302 converts the d-c input signal to a-c. This a-c signal is amplified in Z301, and routed to pin 1 of Z300 via contacts 6 and 5 of K303. When the coarse-tuning sense signal approaches 0 vdc (indicating that coarse tuning is completed), relay K303 is energized. With K303 energized, +28 vdc is applied to OPERATE lamp DS300, and to pin 14 of Z300.

(4) OPERATE. - A fine-tuning sense signal enters the AZ112 at pin 1 of P8005, and is routed to Z301 via contacts 9 and 10 of K303, chopper G300, and transformer T302. This d-c sense signal is converted to a-c in the same manner as the coarse-tuning sense signal was. The resultant a-c signal is amplified, and routed

from pin 3 of Z301 through contacts 6 and 7 of K303, contacts 12 and 11 of K302, and resistor R308 to pin 10 of Z301. This a-c signal is further amplified in Z301 and then applied to the associated tuning motor. When the fine-tuning sense signal approaches 0 vdc (indicating that fine tuning is accomplished), control voltage for the tuning motor diminishes, and relay K302 operates. Operation of K302 opens the circuit. Servo amplifier gain is therefore cut off, and system oscillation (hunting) prevented.

(5) LIMIT SWITCH OPERATION. - Activation of one of the tuning capacitor limit switches energizes a relay in the load servo amplifier. This relay removes supply voltage from pin 8 of Z300 and relay K301 with relay K301 deenergized, the AZ112 start operating in pre-position mode. The pre-position, search, and operate sequences will then be repeated.

c. PA LOAD SERVO AMPLIFIERS (AZ111).

(1) GENERAL. - The AZ-111 supplies control voltage to the IPA stage load-capacitor motor. This control voltage is, in turn, dependent on several servo amplifier inputs: pre-position feedback and reference signals, a turn-on signal (supplied by the associated TUNE servo amplifier), and a sense signal. The AZ111 has three modes of operation: pre-position, search, and operate. Each of these modes are discussed in sequence.

(2) PRE-POSITION. - A pre-position feedback signal enters the AZ-111 at pin 5 of jack P8006 and is routed to pin 12 of plug-in module Z500; a pre-position reference enters at pin 6 of P8006, and is routed to pin 25 of Z500. The pre-position feedback is a d-c analogue (between 0 and -20 vdc) of the associated load capacitor setting. The pre-position reference signal is preset at

a level between 0 and +20 vdc corresponding to the desired load capacitor pre-position setting from the master stepping switch in the SWCA. The feedback and reference signals are algebraically added in Z500; the resultant is then modulated with a 60 cps a-c signal (supplied at pins 21 and 22 of Z500). This a-c modulated signal is routed to module Z501 via contacts 5 and 6 of relay K502. The a-c modulated signal is amplified in Z501, and routed to the associated load capacitor motor via pins 14 and 16 of P8006. When the associated load capacitor approaches its correct pre-position setting, the algebraic sum of the feedback and reference signals becomes small, and the motor control voltage diminishes.

(3) SEARCH. - A sense signal enters the AZ-111 at pin 1 of P8006, and is routed to Z501 via chopper G500 and transformer T501. The chopper and transformer convert the d-c sense signal to a-c. This a-c signal is amplified in Z500, and then routed to contact 7 of relay K502. When coarse tuning of the stage is completed, 28 vdc is applied to relay K502 via pin 32 of P8006 via contacts 15 and 14 of K501 and contacts 11 and 12 of K500. Operation of K502 completes the signal path between pins 3 and 10 of Z501. The associated load capacitor now receives control voltage that is derived from the sense input signal. Relay K501 is energized when an appreciable amount of control voltage is being applied to the load capacitor motor.

(4) OPERATE. - When the sense input signal approaches 0 vdc, motor control voltage diminishes, and relay K502 energizes. With K502 energized, 28 vdc is applied to OPERATE lamp DS500, and to relay K504. Operation of K504 removes the ground from the fine-tune sense signal path for the associated tune servo amplifier (this path includes pins 23 and 24 of J502, and resistor R508).

(5) LIMIT SWITCH OPERATION. - The limit switches for the stage tune and load capacitors are connected between pins 30 and 31 of J502. If one of these switches closes, relay K500 is energized. Operation of relay K500 removes supply voltage from K502 and relay K301 in the associated tune servo amplifier. De-energizing these two relays (K502 and K301) places the respective servo amplifiers in pre-position mode.



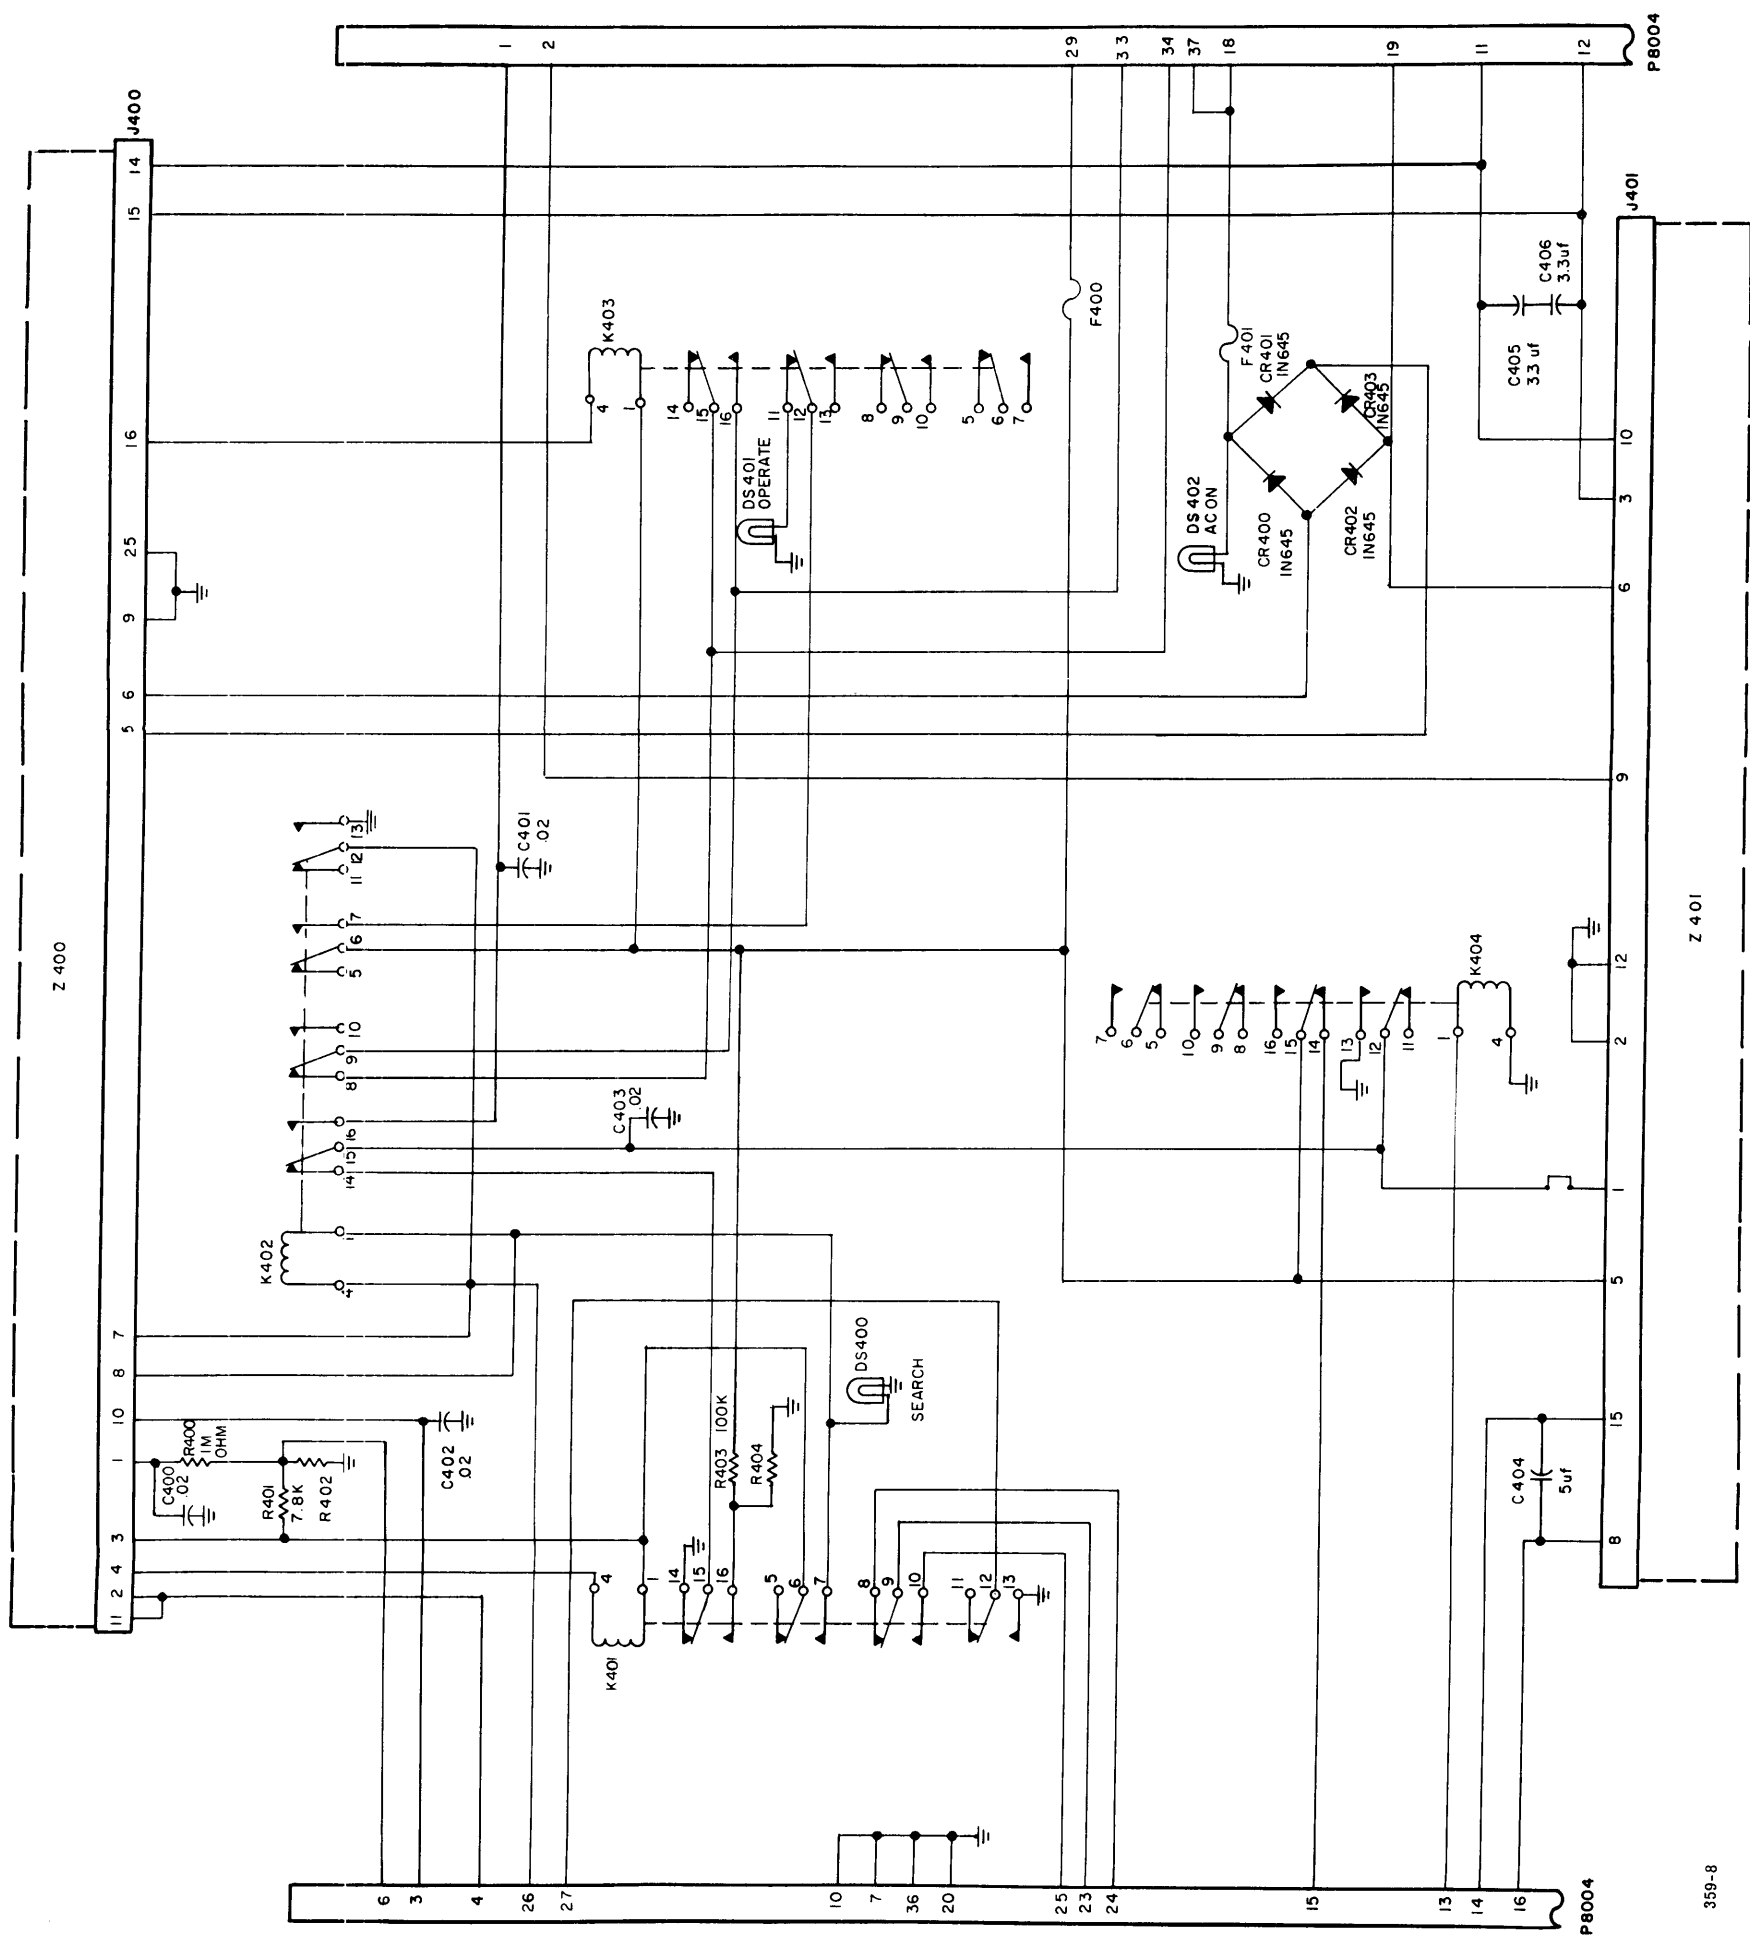


Figure 4-2. Second Servo Amplifier AZ110, Circuit Diagram

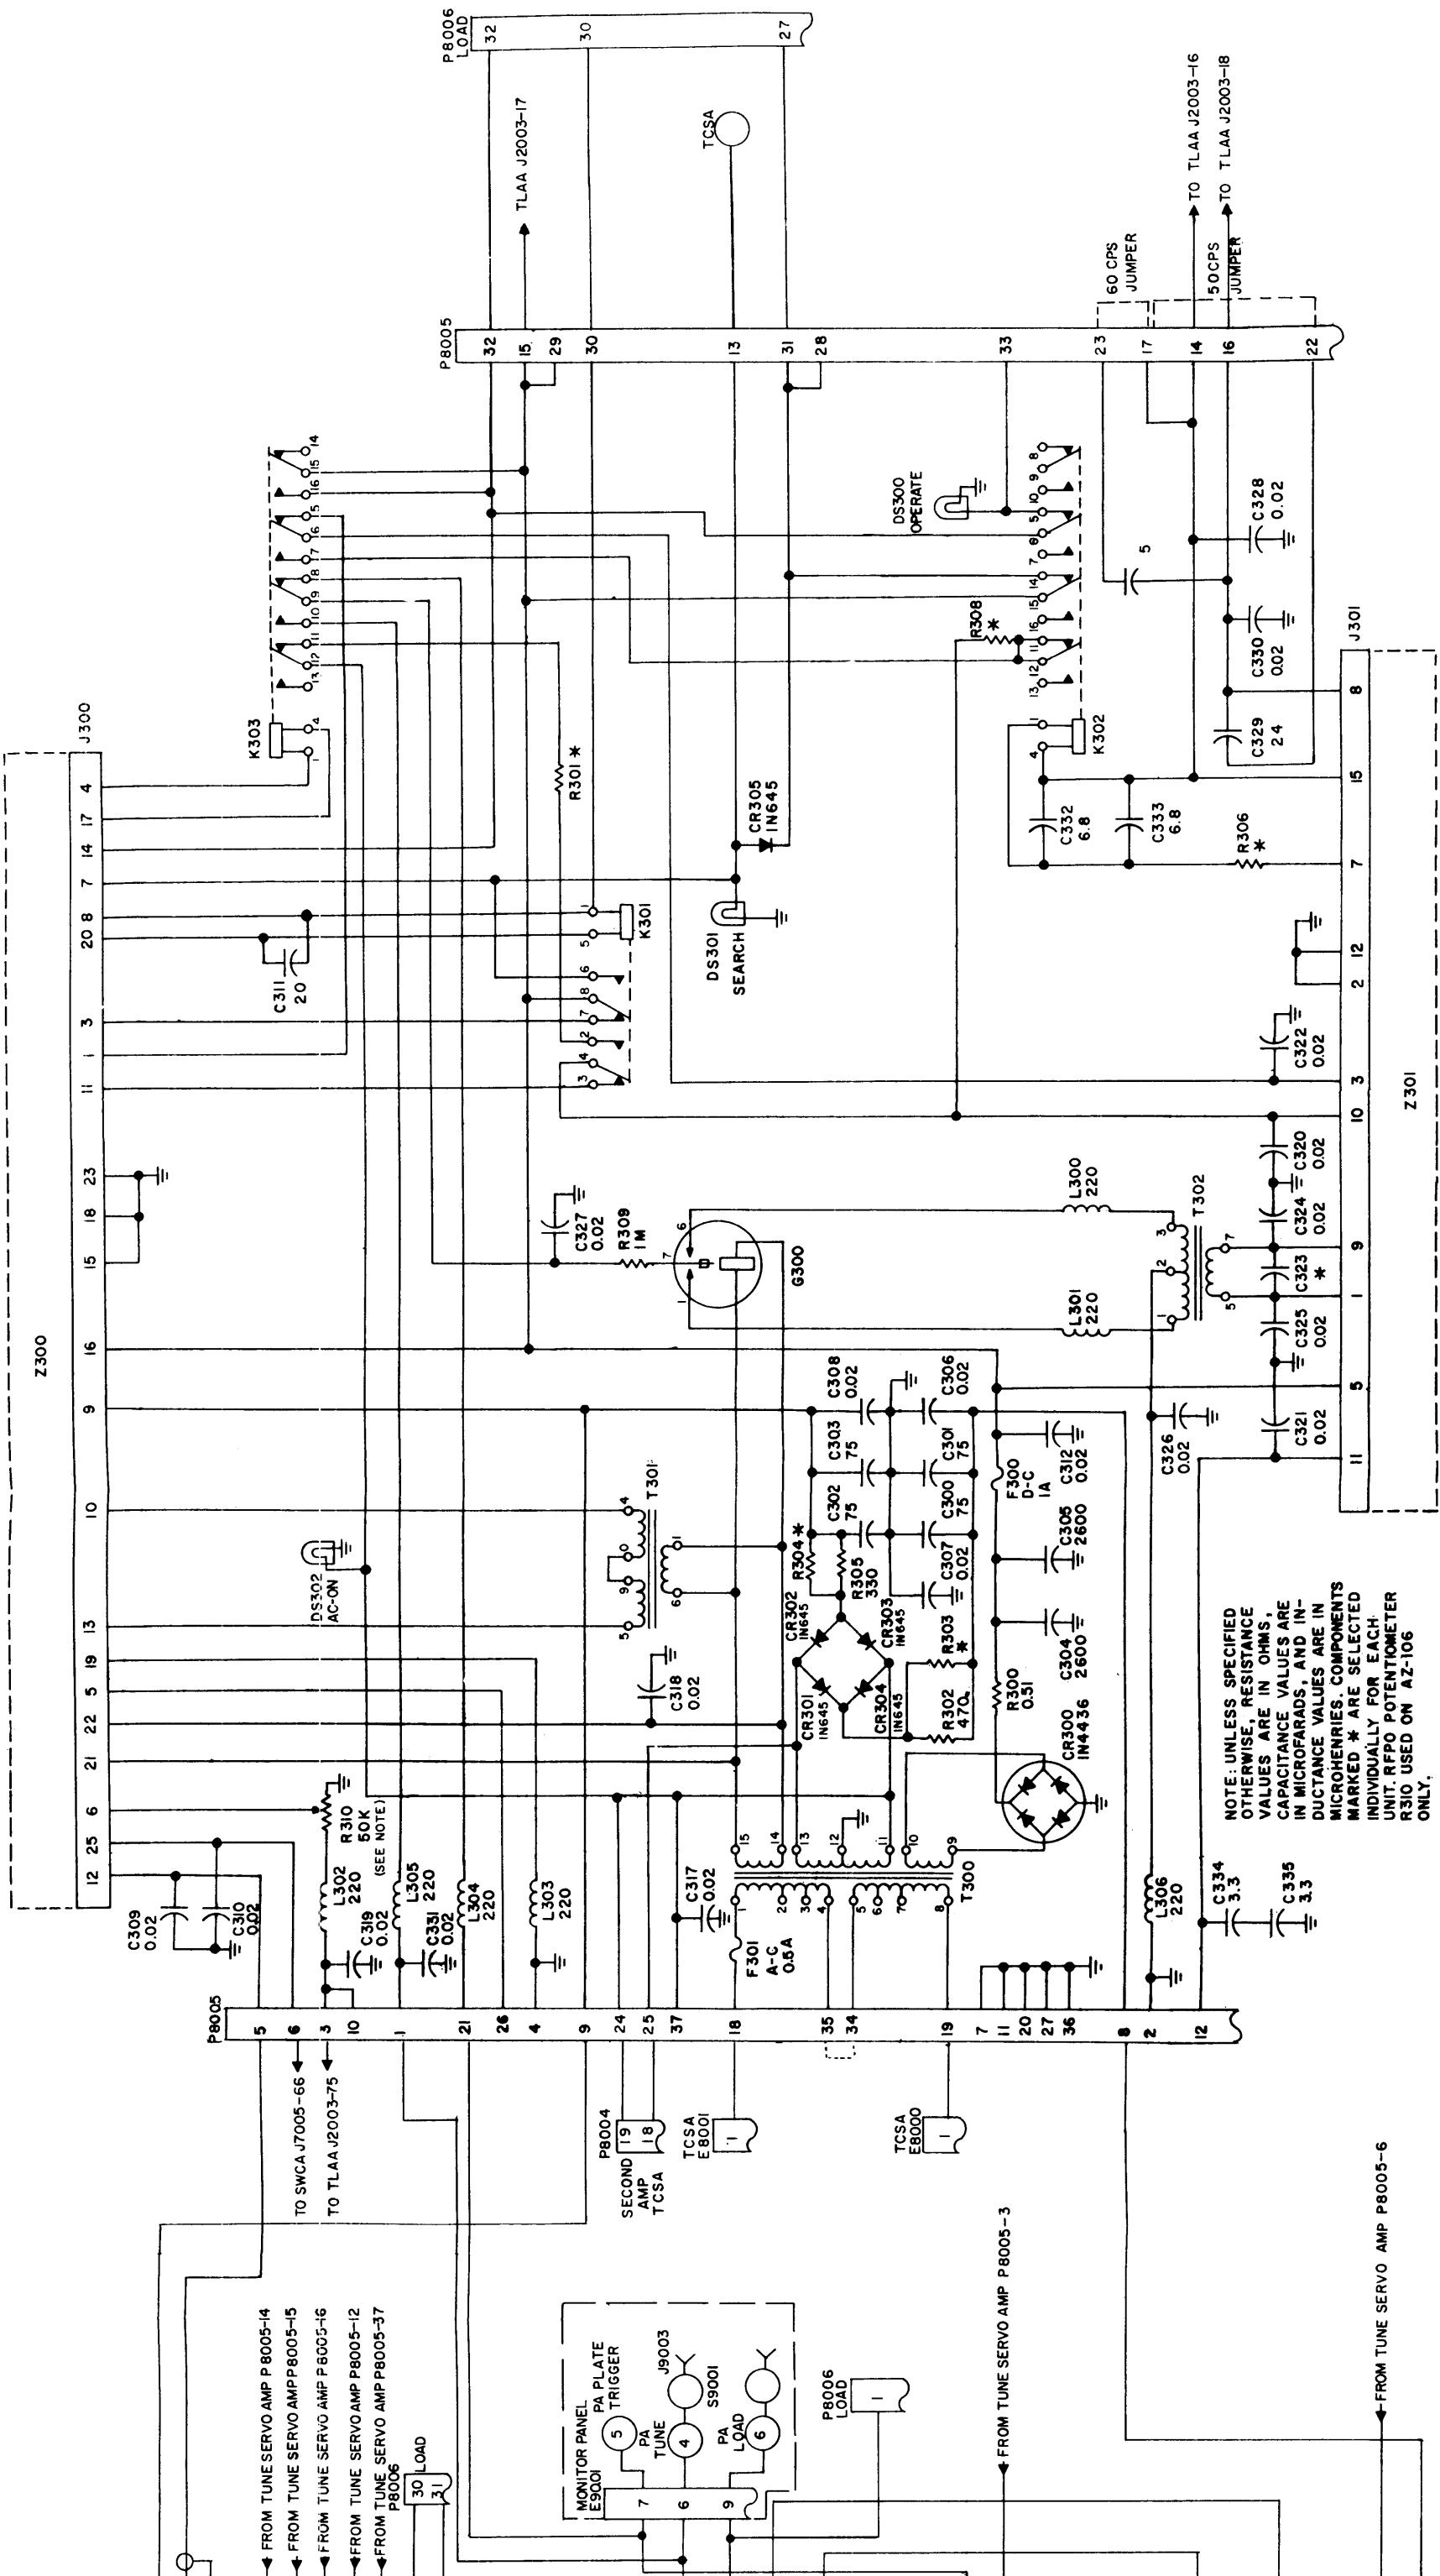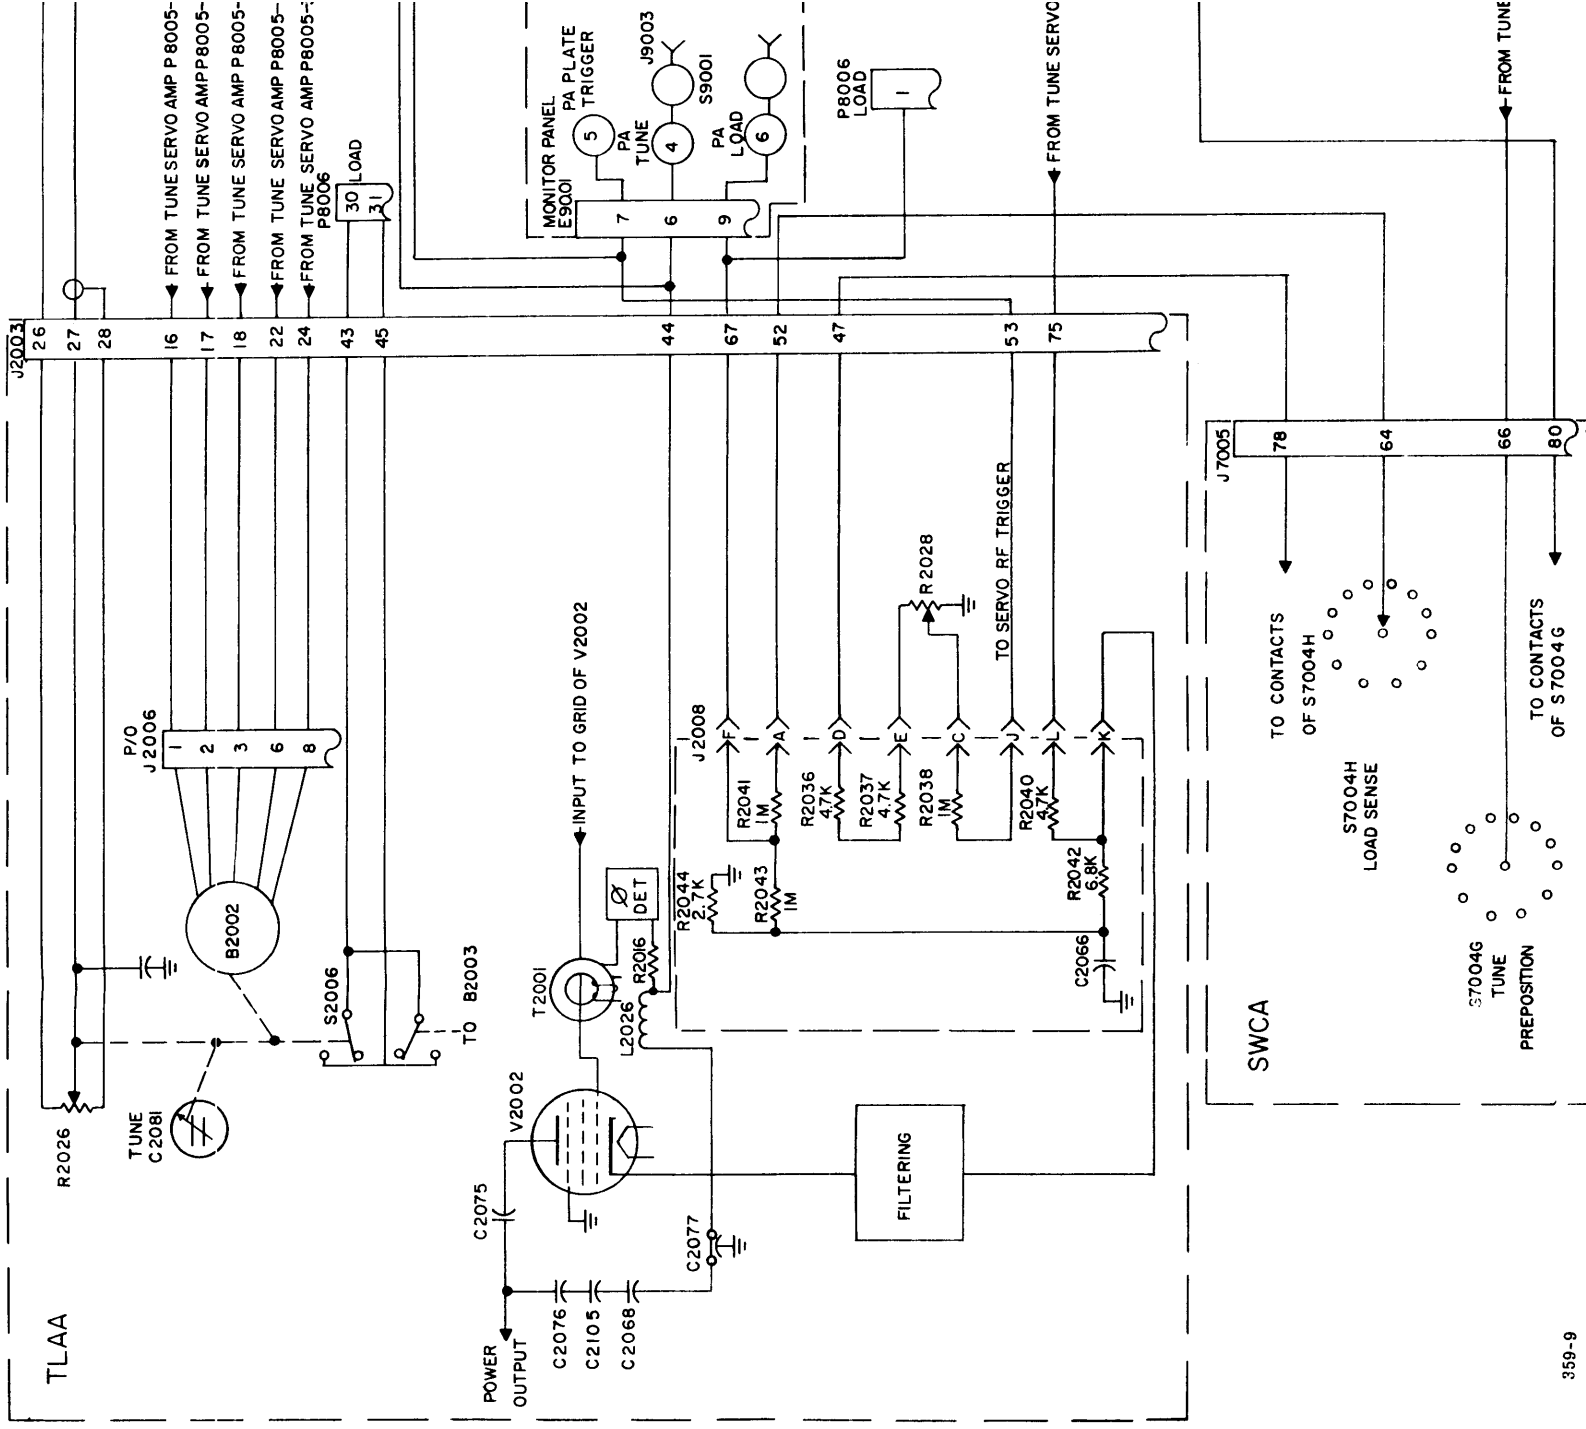

NOTE: UNLESS SPECIFIED OTHERWISE, RESISTANCE VALUES ARE IN OHMS, CAPACITANCE VALUES ARE IN MICROFARADS, AND INDUCTANCE VALUES ARE IN MICRONERIES. COMPONENTS MARKED \* ARE SELECTED INDIVIDUALLY FOR EACH UNIT. RFPO POTENTIOMETER R310 USED ON AZ-106 ONLY.

Figure 4-3. PA Tune Servo Amplifier AZ112, Circuit Diagram



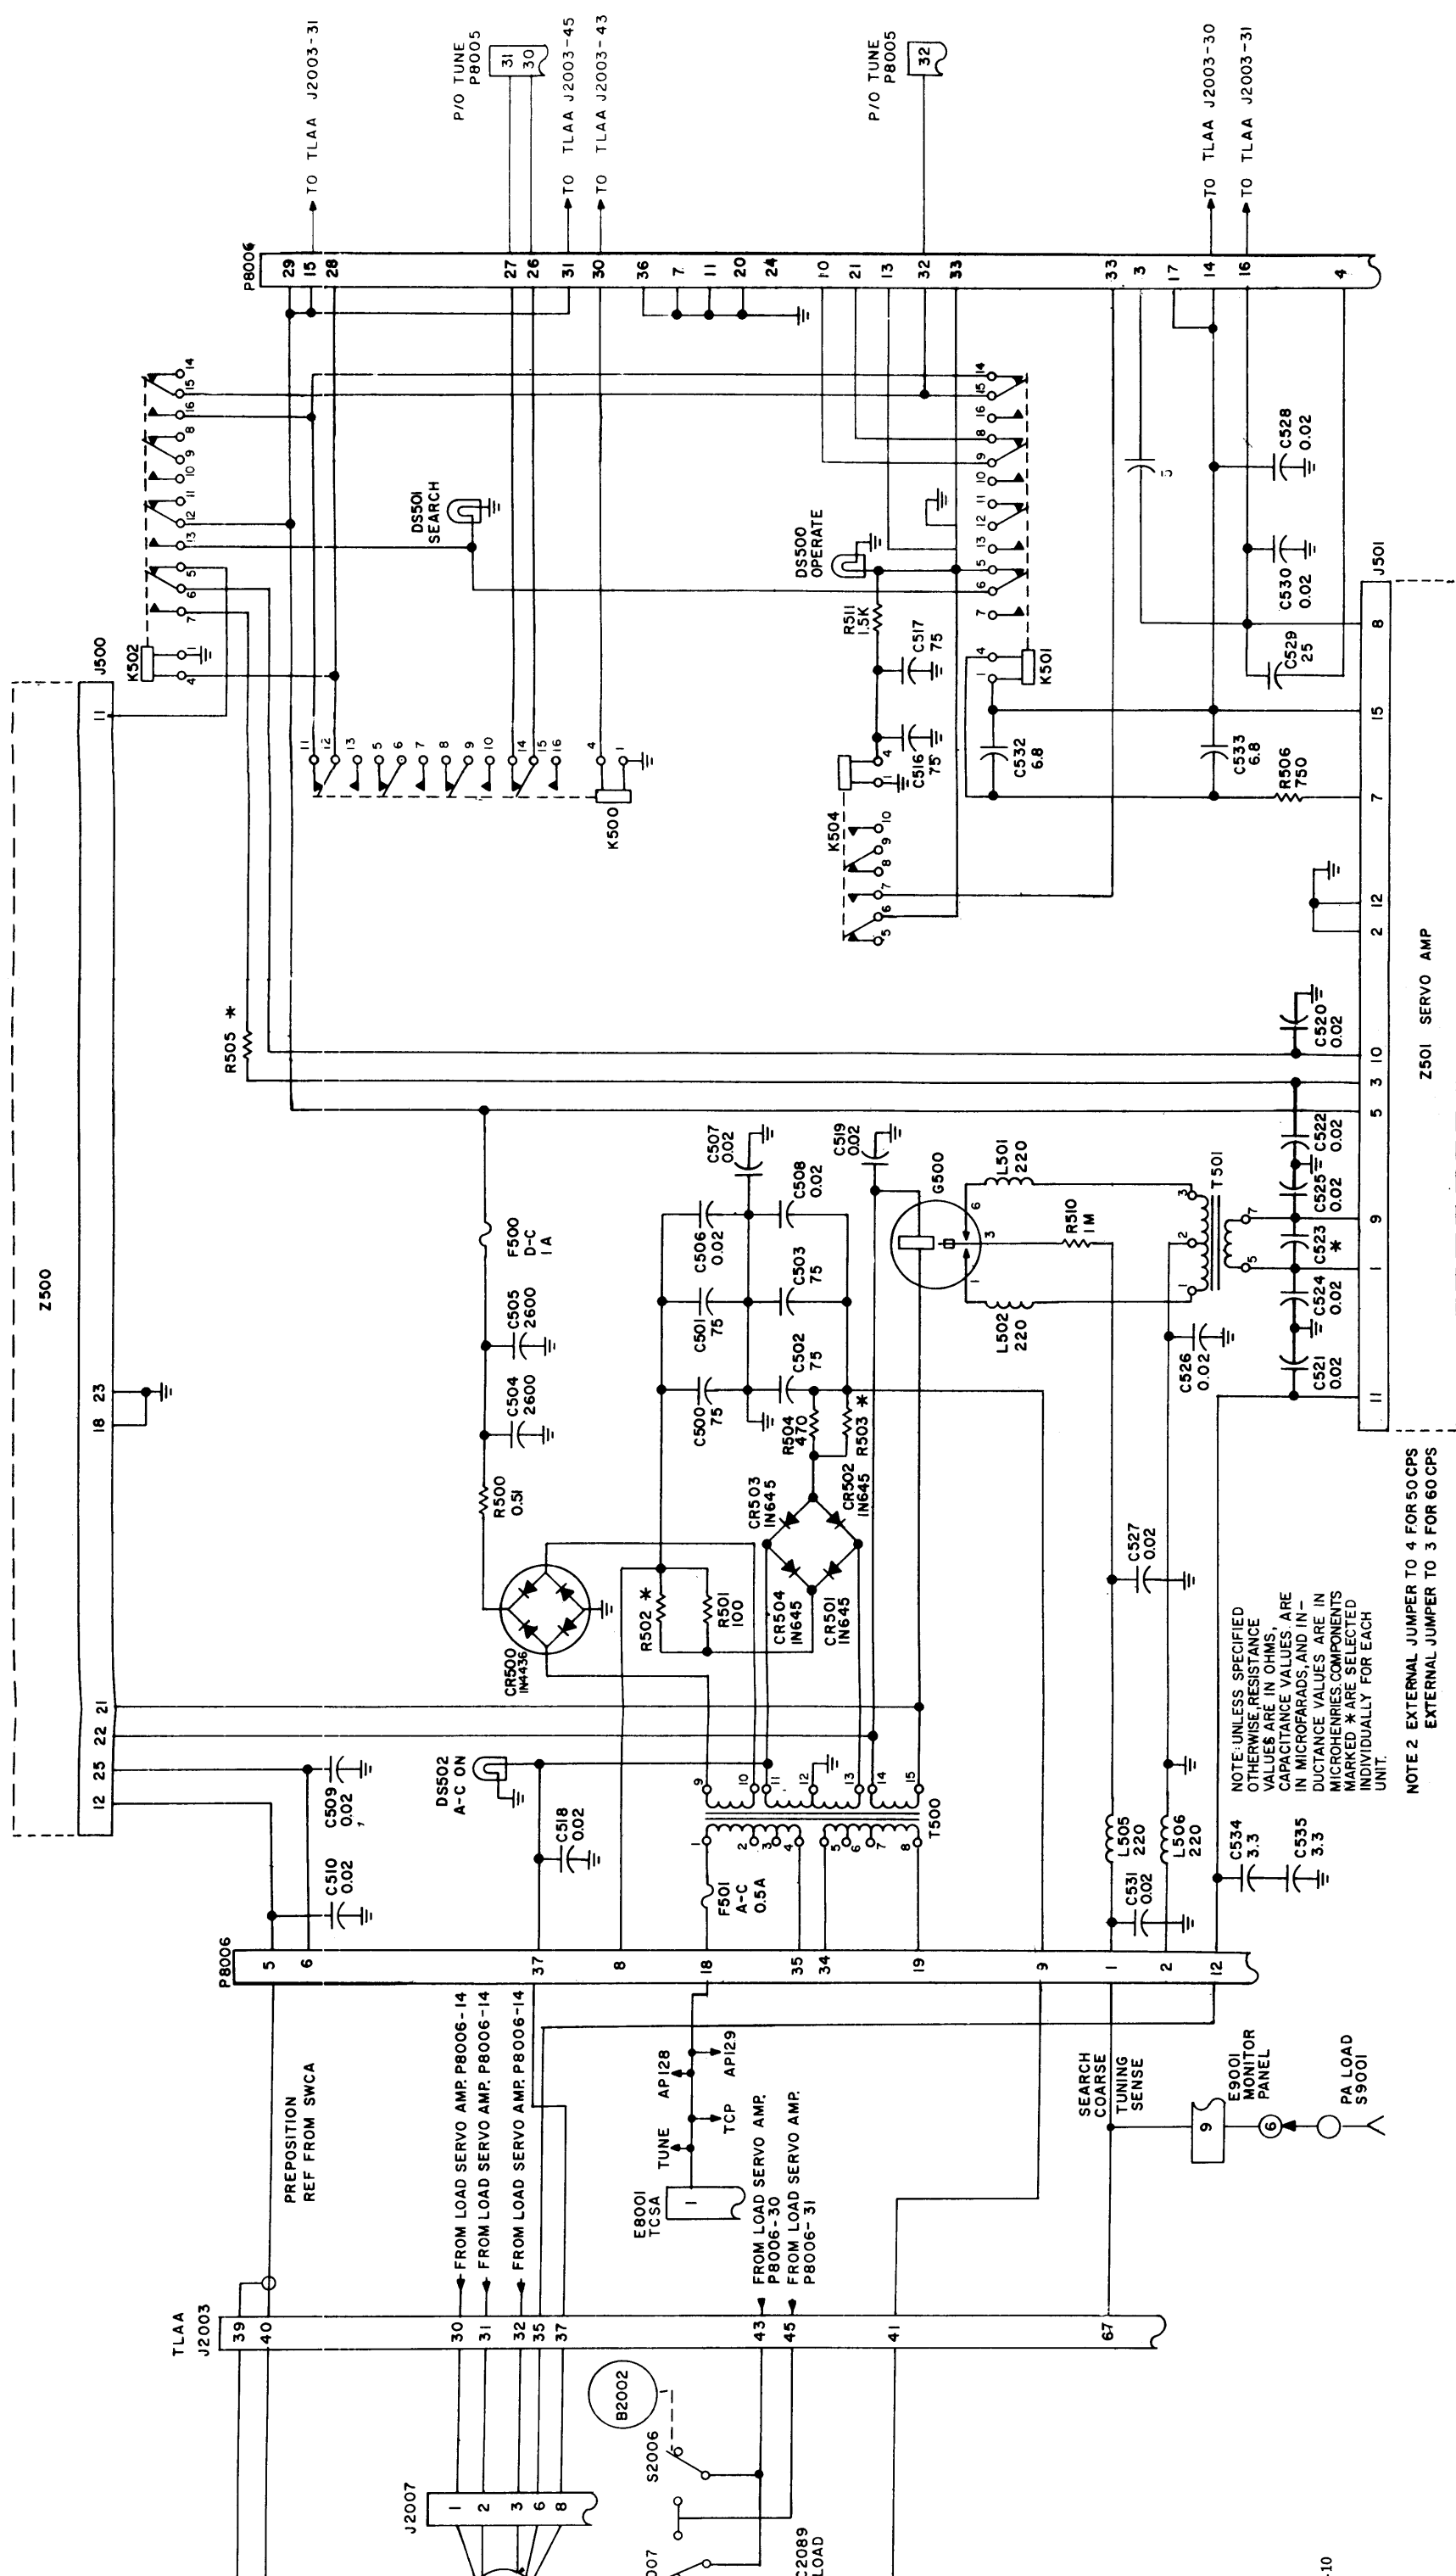


Figure 4-4. PA Load Servo Amplifier AZ111, Circuit Diagram



## **SECTION 5**

### **MAINTENANCE**

#### 5-1. PREVENTIVE MAINTENANCE.

In order to prevent equipment failure due to dust, dirt or other destructive elements, it is suggested that a schedule of preventive maintenance be set up and adhered to.

At periodic intervals, the equipment should be removed from its mounting for cleaning and inspection. The wiring and all components should be inspected for dirt, dust, corrosion, grease or other harmful conditions. Remove dust with a soft brush or vacuum cleaner. Remove dirt or grease with any suitable cleaning solvent. Use of carbon tetrachloride should be avoided due to its highly toxic effects. Trichlorethylene or methyl chloroform may be used, providing the necessary precautions are observed.

#### **WARNING**

When using toxic solvents, make certain that adequate ventilation exists. Avoid prolonged or repeated breathing of the vapor. Avoid prolonged or repeated contact with skin. Flammable solvents shall not be used on energized equipment or near any equipment from which a spark may be received. Smoking, "hot work", etc. is prohibited in the immediate area.

#### **CAUTION**

When using trichlorethylene, avoid contact with painted surfaces, due to its paint removing effects.

## 5-2. TROUBLESHOOTING

When a piece of equipment has been operating satisfactorily and suddenly fails, the cause of failure may be due to symptoms of past failures or due to component aging.

The first step in troubleshooting is to ascertain that proper equipment voltages are present, interconnecting cables are secure, and that all fuses are in functional condition. Refer to table 5-1, used in conjunction with figure 5-1, for system fuse locations and functions.

### **NOTE**

Never replace a fuse with one of a higher rating unless brief continued operation is more important than probable equipment damage. If a fuse burns out immediately after replacement, do not replace it a second time until the cause has been located and corrected.

If the above mentioned checks fail to locate the fault, perform the pre-operational checkout procedure shown in paragraph 2-5. Use of this procedure will help localize the particular fault at hand.

Visual troubleshooting of the modular unit chassis components and tube conditions may also help localize the fault.

The following troubleshooting aids are provided:

- a. Interconnection diagrams (Figures 2-4 and 2-5).
- b. Pre-operational checkout procedures (Paragraph 2-5).
- c. System block diagram (Figure 4-1).
- d. Fuse functions (Table 5-1).
- e. System protective circuit checks (paragraph 5-2, sub-paragraphs a. through g.

Table 5-1. Fuse Functions ATLA

| ITEM NO.<br>(Figure 5-1) | REF. SYMBOL<br>NO. | UNIT          | FUSE<br>RATING         | FUNCTION   |
|--------------------------|--------------------|---------------|------------------------|--|
| 1                        | F7002              | SWCA          | 3A/24 VDC<br>SLOW-BLOW | Protective fuse for control circuit; lights to indicate fuse is defective.             |
| 2                        | F7000              | SWCA          | 1A/230VAC<br>SLOW-BLOW | Protective fuse for power output meter circuits; lights to indicate fuse is defective. |
| 3                        | F400               | TCSA<br>AZ110 | 1.0A, DC               | Protective fuse for AZ110 power supply output.   |
| 4                        | F401               | TCSA<br>AZ110 | 0.5A, AC               | Protective fuse for AZ110 power supply input.  |
| 5                        | F301               | TCSA<br>AZ112 | 0.5A, AC               | Protective fuse for AZ112 power supply input.  |
| 6                        | F300               | TCSA<br>AZ112 | 1.0A, DC               | Protective fuse for AZ112 power supply output.   |
| 7                        | F501               | TCSA<br>AZ111 | 0.5A, AC               | Protective fuse for AZ111 power supply input.  |
| 8                        | F500               | TCSA<br>AZ111 | 1.0A, DC               | Protective fuse for AZ111 power supply output.   |
| 9                        | F5005              | AP128         | 0.5A<br>high-voltage   | Protective fuse for IPA screen ckt.  |
| 10                       | F5007              | AP128         | 2.5A<br>slow-blow      | Protective fuse for PA bandswitch ckt.   |
| 11                       | F5006              | AP128         | 0.75A<br>slow-blow     | Protective fuse for IPA bandswitch ckt.  |
| 12                       | F5008              | AP128         | 3.0A<br>slow-blow      | Protective fuse for interlock ckt.   |
| 13                       | F5009              | AP128         | 10.0A<br>slow-blow     | Protective fuse for interlock ckt.   |

Table 5-1. Fuse Functions ATLA (CONT)

| ITEM NO<br>(Figure 5-1) | REF. SYMBOL<br>NO. | UNIT  | FUSE<br>RATING              | FUNCTION                                |
|-------------------------|--------------------|-------|-----------------------------|---|
| 14                      | F5004              | AP128 | 0.5A<br>high-<br>voltage    | Protective fuse for<br>PA screen ckt.   |
| 15                      | F5002              | AP128 | 3.0A<br>slow-blow           | Protective fuse for<br>blower ckt.      |
| 16                      | F5000              | AP128 | 5.0A<br>slow-blow           | Protective fuse for<br>filament ckt.    |
| 17                      | F5001              | AP128 | 2.0A<br>slow-blow           | Protective fuse for<br>low-voltage ckt. |
| 18                      | F5003              | AP128 | 0.25A<br>slow-blow          | Protective fuse for<br>bias ckt.        |
| 19                      | F9000              | AX633 | 0.1A/DC<br>quick-<br>acting | Protective fuse for<br>alarm ckt.       |

**CAUTION**

Do not replace a fuse with one of a higher rating. If a fuse burns out immediately after replacement, do not replace it a second time until the trouble has been located and corrected.

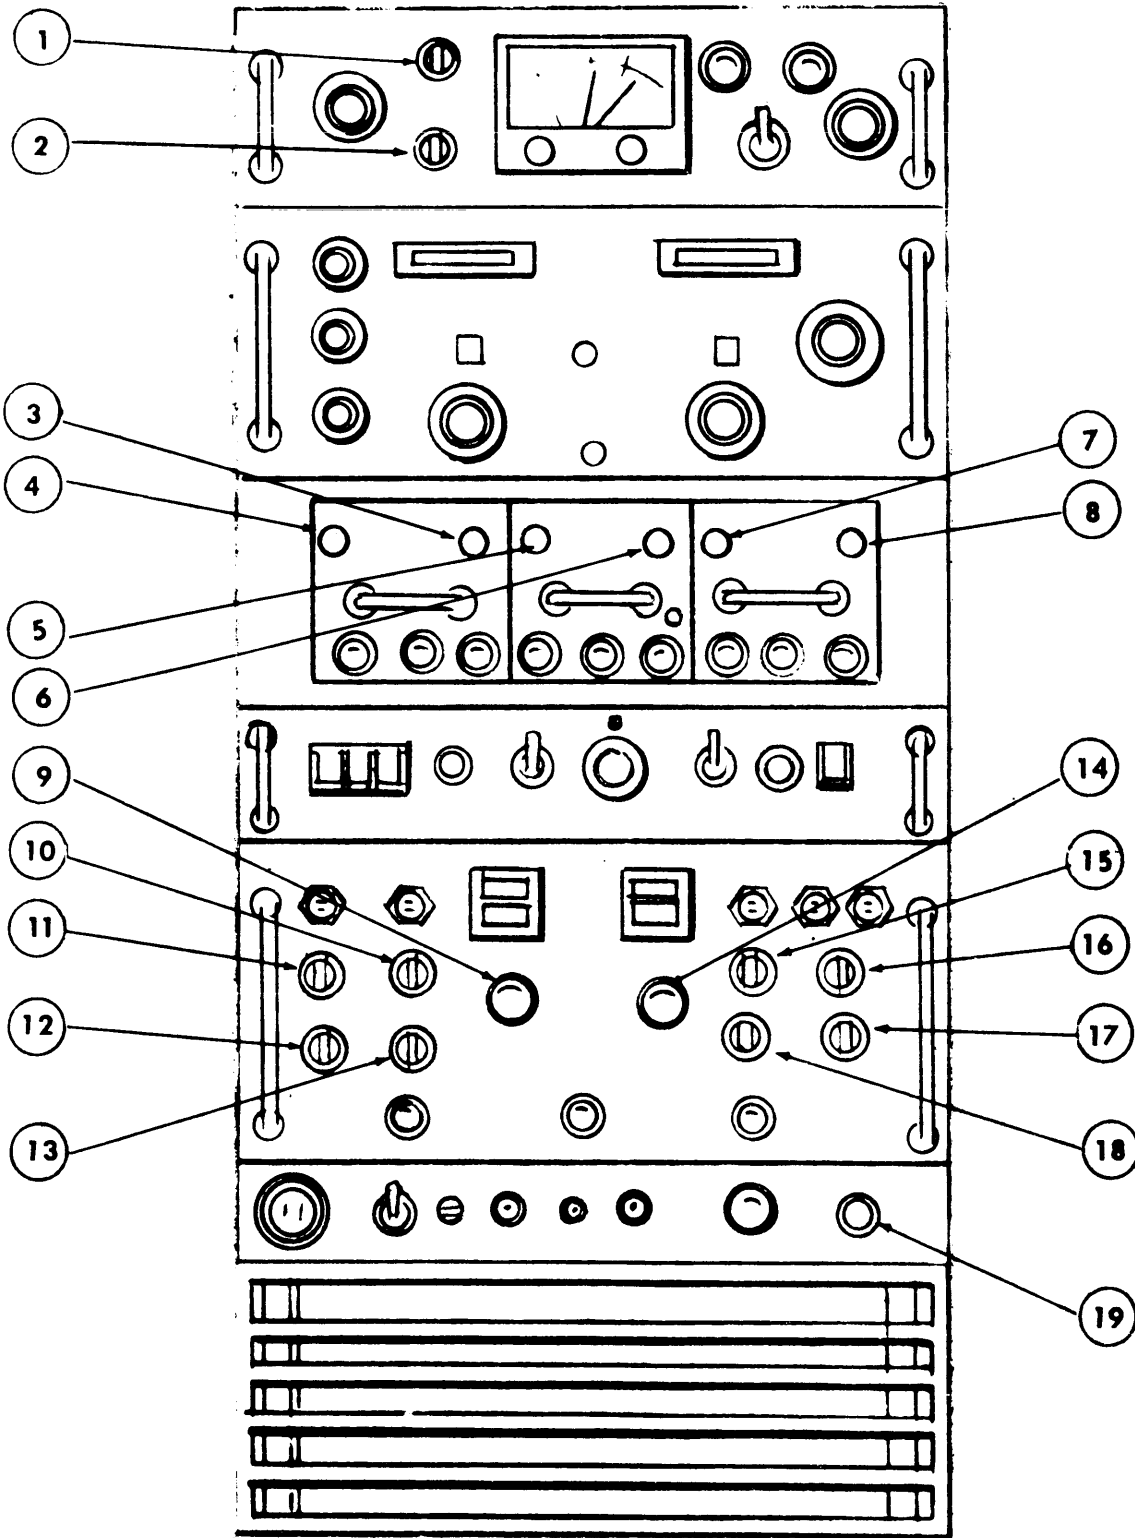


Figure 5-1. Fuse Locations, ATLA

a. PRELIMINARY ELECTRICAL INSPECTION

- (1) With main power switch set at OFF, check for short circuits to ground.
  - (a) The 3 power input phases should measure not less than 1-megohm.
  - (b) The positive side of the high voltage circuit should measure not less than 100 K ohms with the shorting relay contacts open. With the shorting relay contacts closed, this reading should measure zero.
- (2) Check all system modular units for proper cable terminations.
- (3) Check all system modular unit fuses for proper values.
- (4) Check PA output circuitry for proper connections.
- (5) Set main power switches at ON and observe for the following:
  - (a) TechniMatiC indicator should light.
  - (b) The PA blower and top fan must activate.

b. CIRCUIT FUSING CHECKS

- (1) Make sure that at least one interlock is open.
- (2) With the main power switch set at OFF, Remove the blower fuse. The main blower and top fan must not operate when the main power switch is set at ON. Reset main power switch at OFF and replace the blower fuse. Set main power switch at ON and continue fusing checks listed below.
  - (3) Remove the filament fuse; the PA Bias indicator lamp should go out (extinguish).
  - (4) Remove the LV fuse; the PA Bias indicator lamp should go out (internal relay may chatter).
  - (5) Set bandswitch control on TCP at AUTO.
  - (6) Remove IPA bandswitch fuse and turn SWCA band knob. The IPA and PA bandswitches should not turn. Replace fuse and bandswitches should turn. Check all positions of IPA and PA bandswitch positions in relation to the SWCA bandswitch settings.

(7) Remove PA bandswitch fuse and turn SWCA band knob. The IPA bandswitch should turn but the PA bandswitch should not turn. Replace fuse and PA bandswitch should turn.

(8) Remove first one and then the other interlock fuse; interlock lamp and TCP should go out.

c. PROTECTIVE INTERLOCK SYSTEM

(1) Before checking the interlock system, insure that a jumper is connected from COM to NO terminals 1 and 2 on terminal board E8006 on the rear junction box. The interlock indicator lamp and switch are connected so that the indicator lamp will be ON (lit) if all interlocks are closed. To find an open interlock, always turn the interlock switch to extreme counter-clockwise direction to the position where the indicator lamp goes out. This is an open interlock.

In cases where there are more than one interlocks open, the preceding procedure must be repeated until all interlocks are closed and all individual interlock indicator lamps are out (extinguished).

**NOTE**

For this check, the PS covers, PA covers, the Airswitch and Timer will not trip the HV circuit breaker.

(2) With the Main Power switch closed (ON), each interlock should be opened and closed with the interlock indicator switch in the appropriate position to show that the interlock is operating properly. Each time an interlock is opened, the High Voltage switch should be placed at the ON position. This switch should trip, preventing high voltage from coming on.

d. PROTECTIVE RELAY CHECKS

**WARNING**

Line voltage is constantly present  
on leads connected to top of Main  
Power switch located on TCP-1.

(1) Unlatch the PA plate overload relay; the corresponding overload indicator lamp should light.

(2) Unlatch the PA Screen overload relay; the corresponding overload indicator lamp should light.

By depressing the Overload Reset switch on the main control panel, the overload indicator lamps must go out (extinguish) and stay out and the overload relays must reset.

(3) The Filament Elapse Time meter must indicate that the filaments are on.

(4) With the HV at ON and the PA bias adjusted for minimum plate current, the Plate Elapse Time meter must indicate that HV is on.

Check the Time Delay relay for proper operate and time interval, maximum time of 80 seconds after which the IPA Bias OVLD indicator lamp should go out and the shorting relay should energize (if all interlocks are closed).

(5) Adjust PA bias adjust control on the power supply for 350 milliamperes as indicated on the TLAA Plate Current meter with AUTO/MANUAL switch set at MANUAL. With the ALARM switch set at ON, the alarm must sound (activate).

e. HIGH VOLTAGE REMOVAL PROTECTIVE CIRCUIT CHECK

(1) With the system energized as in the preceeding paragraph d., and with the ALARM switch set at ON, mechanically trip the PA Plate Overload and the PA Screen Overload protective devices in sequence. Each time a protective device is mechanically tripped, the device must reset electrically, and the high voltage must be turned on again

before testing the next protective device.

(2) Set High Voltage at OFF and remove the PA Bias fuse. Setting the High Voltage switch at ON should not energize the high voltage switch at ON should not energize the high voltage

(3) Mechanically tripping each of the aforementioned protective devices one at a time, the high voltage must go off and the alarm must sound; the Plate Elapse Time meter must stopping running.

(4) Set High Voltage at OFF.

f. PARASITIC CHECK

(1) Set the 2nd AMP and PA bandswitches at the 24-30 band position.

(2) Set the PA loading capacitor to minimum capacity.

(3) With no r-f drive, set High Voltage switch at ON.

(4) Rotate the PA tune capacitor from minimum to maximum capacity; there must be no indication on the PA Plate RF meter.

(5) Set High Voltage at OFF.

g. OVERLOAD ADJUSTMENTS

(1) Connect signal generator (Hewlett-Packard, Model 606A or equivalent) to the TLAA

(2) PA Plate Overload:

(a) Tune system to full output on any frequency within the assigned frequency range.

(b) Overload the system output by increasing the PA output loading (decreasing Output Load capacity).

(c) Retune the PA and increase the signal generator output.

(d) Adjust the PA Plate overload adjust control to trip at 1.3 amperes.

(3) PA Screen Overload:

(a) With the system tuned as in the preceeding sub-paragraph (2) (a), underload the system output by decreasing the PA output loading (increasing Output Load capacity).

(b) Connect a multimeter (Simpson Model 260 or equivalent)

in series with the screen overload relay K4003 or terminal 1 on E4001.

- (c) Retune the PA and increase the signal generator output to increase the screen current.
- (d) Adjust the PA Screen overload with the PA Screen; adjust to trip at 45 milliamperes.

### 5-3. REPAIR AND REPLACEMENT.

Maintenance of the ATLA will consist mainly of component replacement. It should be noted that when replacing components having many wires connected, such as switches, relays, etc., the wires should be tagged and marked for accurate identification when replacing.

When replacing components, the technician should observe for exact or equivalent replacements by referring to the parts list in section 6 of this manual.

Polarity and positioning of certain components should be observed before removing so that the replacement component will fit and operate correctly.

# SECTION 6

## PARTS LIST

### 6-1. INTRODUCTION

The parts list presented in this section is a cross-reference list of parts identified by a reference designation and TMC part number. In most cases, parts appearing on schematic diagrams are assigned reference designations in accordance with MIL-STD-16. Wherever practicable, the reference designation is marked on the equipment, close to the part it identifies. In most cases, mechanical and electro-mechanical parts have TMC part numbers stamped on them.

To expedite delivery when ordering any part, specify the following:

- a. Reference symbol.
- b. Description as indicated in parts list.
- c. TMC part number.
- d. Model and serial numbers of the equipment containing the part being replaced; this can be obtained from the equipment nameplate.

For replacement parts not covered by warranty (refer to warranty sheet in front of manual), address all purchase orders to:

The Technical Materiel Corporation  
Attention: Sales Department  
700 Fenimore Road  
Mamaroneck, New York

| <u>Assembly or Subassembly</u>                              | <u>Page</u> |
|---|-------------|
| CABINET, ELECTRICAL EQUIPMENT, ATLA-2.5K . . . . .          | 6-2         |
| PREPOSITION PANEL, MODEL AX631 . . . . .                    | 6-4         |
| RF AMPLIFIER, MODEL TLAA-2.5K . . . . .                     | 6-5         |
| TRANSMITTER CONTROL PANEL, MODEL TCP-1 . . . . .            | 6-19        |
| LOW VOLTAGE POWER SUPPLY, MODEL AP128 & AP128/50 . . . . .  | 6-21        |
| HIGH VOLTAGE POWER SUPPLY, MODEL AP129 & AP129/50 . . . . . | 6-28        |
| RF CONTROL/INDICATOR, MODEL SWCA-3K . . . . .               | 6-29        |
| TUNING CONTROL SYSTEM, MODEL TCSA-1 . . . . .               | 6-37        |
| ALARM PANEL, MODEL AX633 . . . . .                          | 6-38        |

PARTS LIST  
for  
CABINET, ELECTRICAL EQUIPMENT, ATLA-2.5K

| REF<br>SYMBOL           | DESCRIPTION   | TMC<br>PART NUMBER |
|-------------------------|---|--------------------|
| B8000                   | FAN, VANEAXIAL: AC motor; 230 V, $\pm 10\%$ , single phase, 50/60 cps (Hz); one 4 uf capacitor, 400 VAC; 2,800/3,300 RPM; current rating 0.85/0.6 amps. | BL117              |
| C8000                   | CAPACITOR, FIXED, PAPER DIELECTRIC: 4 uuf, $\pm 10\%$ ; 600 WVDC.   | CP41BIEF405K       |
| C8001                   | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 1,000 uuf, $\pm 20\%$ ; 5,000 WVDC.   | CC109-38           |
| C8002<br>thru<br>C8006. | Same as C8001.  |                    |
| CP8000                  | ADAPTER, CONNECTOR, ELECTRICAL: RF  | UG259*/U           |
| DS8000                  | LAMP, INCANDESCENT: 28 VAC/DC; 0.04 amps; single contact, T-1-3/4 bulb.   | BI110-7            |
| DS8001                  | LAMP, INCANDESCENT: 230 V, 10 watts; S-6 type bulb; screw type base.  | BI105-1            |
| DS8002                  | Same as DS8001.   |                    |
| DS8003                  | Same as DS8000.   |                    |
| E8000                   | Part of Tuning Control System, Model TCSA-1.  |                    |
| E8001                   | Part of Tuning Control System, Model TCSA-1.  |                    |
| E8002                   | TERMINAL BOARD, BARRIER: sixteen 6-32 thd. x 1/4" long binder head machine screws; phenolic body.   | TM100-16           |
| E8003                   | TERMINAL BOARD, BARRIER: two 6-32 thd. x 1/4" long binder head machine screws; phenolic body.   | TM102-2            |
| E8004                   | TERMINAL BOARD, BARRIER: three 6-32 thd. x 1/4" long binder head machine screws; phenolic body.   | TM102-3            |
| E8005                   | TERMINAL BOARD, BARRIER: nine 6-32 thd. x 1/4" long binder head machine screws; phenolic body.  | TM102-9            |
| E8006                   | NOT USED  |                    |
| E8007                   | NOT USED  |                    |
| E8008                   | TERMINAL BOARD, BARRIER: fourteen 6-32 thd. x 1/4" long binder head machine screws; phenolic body.  | TM102-14           |

## PARTS LIST (CONT)

## CABINET, ELECTRICAL EQUIPMENT, ATLA-2.5K

| REF SYMBOL       | DESCRIPTION  | TMC PART NUMBER |
|------------------|--|-----------------|
| E8009            | Same as E8004.   |                 |
| J8000            | CONNECTOR, RECEPTACLE, ELECTRICAL: 4 female contacts   | MS3102A14S2S    |
| K8000            | RELAY, COAXIAL, VACUUM: 3 DPDT; frequency range 0 - 600 mc; 50 ohms impedance; power rating 0.3 KW CW average at 30 mc, 0.4 KW CW average at 600 mc. | RL177-1         |
| L8000            | COIL, RADIO FREQUENCY: fixed; 15.0 uh; operating frequency 10 Kcs.   | CL410           |
| L8001            | Same as L8000.   |                 |
| L8002            | Same as L8000.   |                 |
| S8000            | SWITCH, ROLLER LEVER: SPDT; current rating 15 amps at 125 VAC.   | SW260           |
| S8001            | SWITCH, INTERLOCK: push-pull; 15 amps at 120/250 VAC or 0.2 amps resistive at 250 VAC.   | SW230           |
| S8002            | NOT USED   |                 |
| S8003 thru S8006 | Same as S8001.   |                 |
| S8007            | SWITCH, MICRO: low torque micro; SPDT; 5 amps at 125 or 250 VAC; CCW rotation.   | SW252           |
| S8008            | SWITCH, THERMOSTIC   | SS104-2         |
| T8000            | TRANSFORMER  | TF342           |
| XDS8000          | LAMPHOLDER   | TS184           |
| XDS8001          | LAMPHOLDER: accomodates candelabra screw type base lamps.  | TS186           |
| XDS8002          | Same as XDS8001.   |                 |
| XDS8003          | Same as XDS8000.   |                 |

PARTS LIST  
for  
PREPOSITION PANEL, MODEL AX631

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| C100          | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 30,000 uuf, +10%; 100 WVDC.                         | CC100-36           |
| C101          | Same as C100.   |                    |
| DS100         | LAMP, INCANDESCENT: 28 VAC/DC; 0.04 amps; single contact, T-1-3/4 bulb.                   | BI110-7            |
| DS101         | Same as DS100.  |                    |
| J100          | CONNECTOR, RECEPTACLE, ELECTRICAL: male   | MS3102A24-28P      |
| S100          | SWITCH, ROTARY  | SW436              |
| S101          | SWITCH, PUSHBUTTON: w/red lens; current rating 250 ma non-inductive, AC; 30 watts.        | SW296-1            |
| S102          | SWITCH, TOGGLE: SPST; nominal current rating 3 amps at 250 VAC/DC or 6 amps at 125VAC/DC. | ST103-1-62         |
| XDS100        | LIGHT, INDICATOR: with amber lens, sub-miniature type.                                    | TS153-3            |
| XDS101        | LIGHT, INDICATOR: with green lens, sub-miniature type.                                    | TS153-2            |

PARTS LIST  
for  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| B2000         | FAN, CENTRIFUGAL: 230 V, 50/60 cps (Hz); single phase; rotation 2,800/3,200 RPM; consists of one 4 uf, 220 VAC capacitor.  | BL126              |
| B2001         | MOTOR, TUBEAXIAL FAN: motor voltage fixed phase 115 volts, control phase 40 volts; current rating fixed phase 0.063 amps, control phase 0.182 amps; power input fixed phase 6.0 watts, control phase 6.4 watts; 50/60 cps; black oxide case. | MO127              |
| B2002         | MOTOR, TUBEAXIAL FAN: motor voltage fixed phase 220 volts, $\pm 10\%$ , control phase 36 volts; current rating fixed phase 0.067 amps, control phase 0.330 amps; power output 3 watts; 50/60 cps; steel case.                                | MO126              |
| B2003         | Same as B2002.   |                    |
| C2000         | CAPACITOR, FIXED, MICA DIELECTRIC: 1,000 uuf, $\pm 2\%$ ; 500 WVDC.  | CM20F102G03        |
| C2001         | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 10,000 uuf, GMV; 500 WVDC.   | CC100-16           |
| C2002         | Same as C2001.   |                    |
| C2003         | CAPACITOR, FIXED, MICA DIELECTRIC: 1,000 uuf, $\pm 10\%$ ; 300 WVDC.   | CB21QB102K         |
| C2004         | Same as C2001.   |                    |
| C2005         | Same as C2001.   |                    |
| C2006         | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 100,000 uuf, $+80\% -20\%$ ; 300 WVDC.   | CC100-37           |
| C2007         | Same as C2006.   |                    |
| C2008         | Same as C2003.   |                    |
| C2009         | Same as C2003.   |                    |
| C2010         | Same as C2006.   |                    |
| C2011         | Same as C2006.   |                    |
| C2012         | Same as C2001.   |                    |
| C2013         | Same as C2001.   |                    |

## PARTS LIST (CONT)

RF AMPLIFIER, MODEL TLA-2.5K

| REF SYMBOL | DESCRIPTION   | TMC PART NUMBER |
|------------|---|-----------------|
| C2014      | CAPACITOR, FIXED, MICA DIELECTRIC: 10,000 uuf, $\pm 2\%$ ; 300 WVDC.    | CM35F103G03     |
| C2015      | Same as C2003.  |                 |
| C2016      | Same as C2003.  |                 |
| C2017      | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 1,000 uuf, $\pm 20\%$ ; 500 WVDC. | CK70AW102M      |
| C2018      | Same as C2003.  |                 |
| C2019      | Same as C2003.  |                 |
| C2020      | CAPACITOR, FIXED, MICA DIELECTRIC: 1,500 uuf, $\pm 2\%$ ; 500 WVDC.     | CM100-10        |
| C2021      | Same as C2006.  |                 |
| C2022      | Same as C2003.  |                 |
| C2023      | Same as C2003.  |                 |
| C2024      | CAPACITOR, FIXED, MICA DIELECTRIC: 24 uuf, $\pm 5\%$ ; 500 WVDC.        | CM15C240J03     |
| C2025      | NOT USED  |                 |
| C2026      | NOT USED  |                 |
| C2027      | Same as C2003.  |                 |
| C2028      | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 2 x 4,000 uuf, GMV; 1,000 WVDC.   | CC100-22        |
| C2029      | NOT USED  |                 |
| C2030      | Same as C2003.  |                 |
| C2031      | NOT USED  |                 |
| C2032      | CAPACITOR, FIXED, MYLAR DIELECTRIC: 1.0 uf, $\pm 5\%$ ; 400 WVDC.       | CN114-1R0-4J    |
| C2033      | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 500 uuf, $\pm 20\%$ ; 5,000 WVDC. | CC109-36        |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL          | DESCRIPTION  | TMC<br>PART NUMBER |
|------------------------|--|--------------------|
| C2034                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 1,000 uuf, $\pm 20\%$ ; 500 WVDC.                  | CC108-1P1000M      |
| C2035                  | Same as C2028.   |                    |
| C2036                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC   | CC115-2-6800       |
| C2037                  | Same as C2028.   |                    |
| C2038                  | CAPACITOR, VARIABLE, AIR: 10.0 to 200 uuf, 1,500 V RMS; 60 cps; nominal air gap 0.0245". | CB118SRX200        |
| C2039                  | Same as C2001.   |                    |
| C2040                  | CAPACITOR, FIXED, MICA DIELECTRIC: 15 uuf, $\pm 5\%$ ; 500 WVDC.                         | CM15D150J03YY      |
| C2041                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 2 x 2,000 uuf, GMV; 1,000 WVDC.                    | CC100-19           |
| C2042                  | CAPACITOR, FIXED, MICA DIELECTRIC: 150 uuf, $\pm 2\%$ ; 500 WVDC.                        | CM15F151G03        |
| C2043                  | NOT USED   |                    |
| C2044                  | NOT USED   |                    |
| C2045                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 3 uuf, $\pm 10\%$ ; 5,000 WVDC.                    | CC109-1            |
| C2046                  | Same as C2040.   |                    |
| C2047<br>thru<br>C2051 | Same as C2001.   |                    |
| C2052                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 3 uuf, $\pm 10\%$ ; 5,000 WVDC.                    | CC109-2            |
| C2053                  | Same as C2003.   |                    |
| C2054                  | Same as C2003.   |                    |
| C2055                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 1,000 uuf, $\pm 20\%$ ; 5,000 WVDC.                | CC109-38           |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLAA-2.5K

| REF<br>SYMBOL          | DESCRIPTION  | TMC<br>PART NUMBER |
|------------------------|--|--------------------|
| C2056                  | Same as C2055.   |                    |
| C2057                  | Same as C2017.   |                    |
| C2058<br>thru<br>C2060 | Same as C2014.   |                    |
| C2061                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC:                                    | CC115-1-500        |
| C2062                  | Same as C2014.   |                    |
| C2063                  | Same as C2014.   |                    |
| C2064                  | Same as C2055.   |                    |
| C2065                  | Same as C2034.   |                    |
| C2066                  | Same as C2001.   |                    |
| C2067                  | Same as C2061.   |                    |
| C2068                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 10uuf, $\pm 10\%$ ;<br>5,000 WVDC. | CC109-6            |
| C2069                  | Same as C2061.   |                    |
| C2070                  | NOT USED   |                    |
| C2071                  | Same as C2036.   |                    |
| C2072                  | NOT USED   |                    |
| C2073                  | Same as C2001.   |                    |
| C2074                  | NOT USED   |                    |
| C2075                  | Same as C2061.   |                    |
| C2076                  | Same as C2068.   |                    |
| C2077                  | CAPACITOR, FIXED, MICA DIELECTRIC: 1,200 uuf, $\pm 2\%$ ;<br>500 WVDC.   | CM100-12           |
| C2078                  | Same as C2052.   |                    |
| C2079                  | Same as C2052.   |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL          | DESCRIPTION   | TMC<br>PART NUMBER |
|------------------------|---|--------------------|
| C2080                  | Same as C2033.  |                    |
| C2081                  | CAPACITOR, VARIABLE, VACUUM: 10 to 1500 uuf; peak test voltage 5 Kv.          | CB172-5            |
| C2082                  | CAPACITOR, FIXED, PAPER DIELECTRIC: 0.68 uf, $\pm 10\%$ ; 1,000 WVDC.         | CP106C684-10K      |
| C2083                  | Same as C2082.  |                    |
| C2084                  | NOT USED  |                    |
| C2085                  | Same as C2001.  |                    |
| C2086                  | NOT USED  |                    |
| C2087                  | NOT USED  |                    |
| C2088                  | Same as C2061.  |                    |
| C2089                  | CAPACITOR, VARIABLE, VACUUM: 20 to 2000 uuf; peak test voltage 5 Kv.          | CB172-6            |
| C2090                  | Same as C2061.  |                    |
| C2091                  | NOT USED  |                    |
| C2092                  | Same as C2001.  |                    |
| C2093                  | CAPACITOR, FIXED, MICA DIELECTRIC: 100 uuf, $\pm 5\%$ ; 500 WVDC.             | CM15F101J03        |
| C2094                  | Same as C2006.  |                    |
| C2095                  | Same as C2006.  |                    |
| C2096                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 20,000 uuf, $+80\%$ $-20\%$ ; 500 WVDC. | CC100-24           |
| C2097<br>thru<br>C2102 | Same as C2001.  |                    |
| C2103                  | Same as C2000.  |                    |
| C2104                  | NOT USED  |                    |
| C2105                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 10 uuf, $\pm 10\%$ ; 5,000 WVDC.        | CC109-5            |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL            | DESCRIPTION  | TMC<br>PART NUMBER |
|--------------------------|--|--------------------|
| C2106                    | NOT USED   |                    |
| C2107                    | Same as C2006.   |                    |
| C2108                    | Same as C2006.   |                    |
| C2109                    | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 100,000 uuf, +80% -20%; 500 WVDC.  | CC100-32           |
| C2110                    | NOT USED   |                    |
| C2111                    | CAPACITOR, FIXED, MICA DIELECTRIC: 10 uuf, +5%; 500 WVDC.  | CM15C100J03YY      |
| C2112                    | CAPACITOR, FIXED, MICA DIELECTRIC: 18 uuf, +5%; 500 WVDC.  | CM15C180J03YY      |
| C2113<br>thru<br>C2115   | Same as C2014.   |                    |
| C2116                    | Same as C2052.   |                    |
| C2117                    | Same as C2052.   |                    |
| C2118                    | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 100 uuf, +10%; 5,000 WVDC.   | CC109-28           |
| C2119                    | Same as C2020.   |                    |
| C2120                    | Same as C2001.   |                    |
| CR2000                   | ABSORBER, OVERVOLTAGE: operating voltage range 28 to 33 V; max. reverse voltage 10 VDC; current rating 750 ma; 200 PIV diode; 6.8 V, 1 watt Zener diode. | DD111-1            |
| CR2001                   | SEMICONDUCTOR DEVICE, DIODE  | 1N3070             |
| CR2002                   | Same as CR2001.  |                    |
| CR2003                   | Same as CR2000.  |                    |
| CR2004                   | Same as CR2001.  |                    |
| CR2005<br>thru<br>CR2009 | Same as CR2001.  |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL            | DESCRIPTION  | TMC<br>PART NUMBER |
|--------------------------|--|--------------------|
| DS2000                   | LAMP, INCANDESCENT: 5 to 6 volts; 0.063 amps; bulb size T-1.   | BI114-2            |
| DS2001<br>thru<br>DS2008 | Same as DS2000.  |                    |
| E2000<br>thru<br>E2011   | TERMINAL   | TE *               |
| J2000                    | CONNECTOR, RECEPTACLE, ELECTRICAL: 1 round female contact, straight type; series BNC to BNC.                                     | JJ172              |
| J2001                    | CONNECTOR, RECEPTACLE, ELECTRICAL: female  | MS3102A28-21S      |
| J2002                    | CONNECTOR, RECEPTACLE, ELECTRICAL: 14 male contacts, brass gold over silver plated.  | JJ242-5P           |
| J2003                    | CONNECTOR, RECEPTACLE, ELECTRICAL  | *                  |
| J2004                    | CONNECTOR, RECEPTACLE, ELECTRICAL: 9 female contacts, removeable crimp pin style; current rating 5 amps at 500 V RMS; polarized. | JJ310-4            |
| J2005                    | CONNECTOR, RECEPTACLE, ELECTRICAL  | *                  |
| J2006                    | Same as J2004.   |                    |
| J2007                    | Same as J2004.   |                    |
| J2008                    | CONNECTOR, RECEPTACLE, ELECTRICAL: 20 female contacts rated for 5 amps at 1,800 V RMS.   | JJ319-10DFE        |
| J2009                    | CONNECTOR, RECEPTACLE, ELECTRICAL: female; teflon insulation.  | UG560*/U           |
| J2010                    | CONNECTOR, RECEPTACLE, ELECTRICAL: RF; 1 round female contact; 52 ohms; series BNC to BNC.                                       | UG625*/U           |
| J2011                    | Same as J2000.   |                    |
| J2012                    | CONNECTOR, RECEPTACLE, ELECTRICAL  | MS                 |
| J2013                    | Same as J2004.   |                    |
| J2014                    | Same as J2004.   |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF SYMBOL | DESCRIPTION   | TMC PART NUMBER |
|------------|---|-----------------|
| J2015      | CONNECTOR, RECEPTACLE, ELECTRICAL: 30 female contacts, straight type; current rating 5 amps at 1,800 V RMS; printed circuit board type. | JJ319A15DPE     |
| L2000      | COIL, RADIO FREQUENCY: fixed; 220 uh, $\pm 5\%$ ; current rating 230 ma; molded case.   | CL275-221       |
| L2001      | Same as L2000.  |                 |
| L2002      | COIL, RADIO FREQUENCY: fixed; 120 uh, $\pm 5\%$ ; current rating 311 ma; molded case.   | CL275-121       |
| L2003      | NOT USED  |                 |
| L2004      | Same as L2002.  |                 |
| L2005      | COIL  | *               |
| L2006      | COIL, RADIO FREQUENCY: fixed; 3 PI; 1 mh inductance; 23 ohms, $\pm 10\%$ resistive; current rating 75 to 100 ma.                        | CL101-2         |
| L2007      | COIL, RADIO FREQUENCY: fixed; 128 uhy; test frequency 790 Kc.   | CL177           |
| L2008      | NOT USED  |                 |
| L2009      | COIL  |                 |
| L2010      | Same as L2000.  |                 |
| L2011      |   | TZ210           |
| L2012      | Same as L2007.  |                 |
| L2013      | Same as L2007.  |                 |
| L2014      | COIL, RADIO FREQUENCY: fixed; 113 uh, $\pm 5\%$ .   | CL361           |
| L2015      | Same as L2006.  |                 |
| L2016      | COIL  | CL406           |
| L2017      | Non-replaceable item. Part of CL407.  |                 |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLAA-2.5K

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| L2018         | Non-replaceable item. Part of CL407.   |                    |
| L2019         | Non-replaceable item. Part of CL409.   |                    |
| L2020         | Non-replaceable item. Part of CL409.   |                    |
| L2021         | Non-replaceable item. Part of CL408.   |                    |
| L2022         | Non-replaceable item. Part of CL408.   |                    |
| L2023         | Non-replaceable item. Part of CL409.   |                    |
| L2024         | Non-replaceable item. Part of CL408.   |                    |
| L2025         | COIL, RADIO FREQUENCY: fixed; 2.50 mh, $\pm 5\%$ ; current rating 200 ma; 3 PI.                  | CL226-1            |
| L2026         | COIL, RADIO FREQUENCY: fixed; 2.5 uh, $\pm 10\%$ ; current rating 100 ma; molded case.           | CL140-1            |
| L2027         | COIL, RADIO FREQUENCY  | CL100-5            |
| L2028         | Same as L2026.   |                    |
| L2029         | NOT USED   |                    |
| L2030         | COIL, RADIO FREQUENCY: 185 uh, $\pm 15$ uh; operating frequency 790 Kc; 3/8" dia. x 2" long o/a. | CL178              |
| L2031         | COIL, RADIO FREQUENCY: fixed; 0.150 uh, $\pm 10\%$ ; current rating 400 ma; molded case.         | CL140-2            |
| L2032         | Same as L2031.   |                    |
| L2033         | COIL, RADIO FREQUENCY  | CL413              |
| L2034         | NOT USED   |                    |
| L2035         | COIL, RADIO FREQUENCY: fixed; 33 uh, $\pm 10\%$ ; rated for 2.5 mc.                              | CL366              |
| L2036         | COIL, RADIO FREQUENCY: 0.270 uh, $\pm 10\%$ ; current rating 300 ma; molded case.                | CL140-3            |
| L2037         | Same as L2036.   |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| L2038         | COIL, RADIO FREQUENCY: fixed; 0.680 uh, $\pm 10\%$ ; current rating 200 ma; molded case.  | CL140-9            |
| L2039         | COIL  | CL398              |
| L2040         | COIL  | CL399              |
| L2041         | Same as L2030.  |                    |
| L2042         | NOT USED  |                    |
| L2043         | COIL, RADIO FREQUENCY: fixed; 3.3 uh, $\pm 10\%$ ; current rating 1,030 ma; molded case.  | CL275-3R3          |
| L2044         | NOT USED  |                    |
| L2045         | COIL, RADIO FREQUENCY: fixed; 150 uh, $\pm 5\%$ ; current rating 315 ma; molded case.   | CL275-151          |
| L2046         | COIL, RADIO FREQUENCY: fixed; 68 uh, $\pm 10\%$ ; current rating 750 ma; molded case.   | CL275-68           |
| L2047         | Same as L2045.  |                    |
| L2048         | COIL  | CL402              |
| L2049         | COIL  | CL405              |
| M2000         | METER: full scale deflection 0 to 100 ua; 11,000 ohms, $\pm 15\%$ ; dust proof molded lucite case.  | MR191-3            |
| M2001         | METER   | MR191-7            |
| P2000         | CONNECTOR, PLUG, ELECTRICAL: 14 female contacts rated for 7.5 amps; spring temper phosphor bronze, gold plated; 1,900 V RMS at sea level. | PL225-5S           |
| P2001         | CONNECTOR, PLUG, ELECTRICAL: w/hood; 9 male contacts crimp pin removeable style; current rating 5 amps at 500 V RMS; polarized.           | JJ313-4H           |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLAA-2.5K

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| P2002         | NOT USED   |                    |
| P2003         | Same as P2001.   |                    |
| P2004         | Same as P2001.   |                    |
| P2005         | CONNECTOR, PLUG, ELECTRICAL: 9 male contacts, removeable crimp pin style; current rating 5 amps at 500 V RMS; polarized. | JJ313-4            |
| P2006         | Same as P2005.   |                    |
| R2000         | RESISTOR, FIXED, COMPOSITION: 2,700 ohms, $\pm 5\%$ ; 1/2 watt.  | RC20GF272J         |
| R2001         | RESISTOR, FIXED, COMPOSITION: 10,000 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF103J         |
| R2002         | RESISTOR, PRECISION, WIREWOUND: 120 ohms, $\pm 1\%$ ; 0.66 watt.   | RB101R66R1200<br>F |
| R2003         | RESISTOR, FIXED, COMPOSITION: 4,700 ohms, $\pm 5\%$ ; 2 watts.   | RC42GF472J         |
| R2004         | NOT USED   |                    |
| R2005         | Same as R2001.   |                    |
| R2006         | RESISTOR, FIXED, GLASS: 1,000 ohms, 15 watts.  | *                  |
| R2007         | RESISTOR, FIXED, COMPOSITION: 47 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF470J         |
| R2008         | Same as R2002.   |                    |
| R2009         | NOT USED   |                    |
| R2010         | RESISTOR, FIXED, COMPOSITION: 47 ohms, $\pm 5\%$ ; 1 watt.   | RC32GF470J         |
| R2011         | Same as R2010.   |                    |
| R2012         | RESISTOR, FIXED, COMPOSITION: 1,000 ohms, $\pm 5\%$ ; 1/2 watt.  | RC20GF102J         |
| R2013         | Same as R2012.   |                    |
| R2014         | RESISTOR, FIXED, COMPOSITION: 100,000 ohms, $\pm 5\%$ ; 1/2 watt.  | RC20GF104J         |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLA-2.5K

| REF<br>SYMBOL          | DESCRIPTION  | TMC<br>PART NUMBER |
|------------------------|--|--------------------|
| R2015                  | Same as R2012.   |                    |
| R2016                  | Same as R2012.   |                    |
| R2017                  | RESISTOR, FIXED, COMPOSITION: 120 ohms, $\pm 5\%$ ; 1 watt.                                  | RC32GF121J         |
| R2018                  | Same as R2010.   |                    |
| R2019                  | Same as R2010.   |                    |
| R2020                  | RESISTOR, FIXED, COMPOSITION: 2,200 ohms, $\pm 5\%$ ; 1/2 watt.                              | RC20GF222J         |
| R2021                  | RESISTOR, FIXED, COMPOSITION: 220,000 ohms, $\pm 5\%$ ; 1/2 watt.                            | RC20GF224J         |
| R2022                  | RESISTOR, FIXED, COMPOSITION: 470,000 ohms, $\pm 5\%$ ; 1/2 watt.                            | RC20GF474J         |
| R2023<br>thru<br>R2025 | NOT USED   |                    |
| R2026                  | RESISTOR, VARIABLE, PRECISION: 1,000 ohms, $\pm 3\%$ ; 0 watt at 125°C or 2.5 watts at 70°C. | RV118-1-102        |
| R2027                  | Same as R2026.   |                    |
| R2028                  | RESISTOR, VARIABLE, COMPOSITION: 100,000 ohms, $\pm 10\%$ ; 1/2 watt.                        | RV106UX10C104<br>A |
| R2029                  | RESISTOR, VARIABLE, COMPOSITION: 500,000 ohms, $\pm 10\%$ ; 1/2 watt.                        | RV106UX10B504<br>A |
| R2030                  | RESISTOR, FIXED, COMPOSITION: 10 ohms, $\pm 5\%$ ; 1/2 watt.                                 | RC20GF100J         |
| R2031                  | RESISTOR, FIXED, COMPOSITION: 1,200 ohms, $\pm 5\%$ ; 1/2 watt.                              | RC20GF122J         |
| R2032                  | RESISTOR, FIXED, COMPOSITION: 4,700 ohms, $\pm 5\%$ ; 1/2 watt.                              | RC20GF472J         |
| R2033                  | Same as R2007.   |                    |
| R2034                  | Same as R2020.   |                    |
| R2035                  | Same as R2031.   |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLAA-2.5K

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| R2036         | Same as R2032.  |                    |
| R2037         | RESISTOR, FIXED, COMPOSITION: 47,000 ohms, $\pm 5\%$ ; 1/2 watt.  | RC20GF473J         |
| R2038         | RESISTOR, FIXED, COMPOSITION: 1 megohm, $\pm 5\%$ ; 1/2 watt.   | RC20GF105J         |
| R2039         | RESISTOR, FIXED, COMPOSITION: 47 ohms, $\pm 5\%$ ; 2 watts.   | RC42GF470J         |
| R2040         | Same as R2032.  |                    |
| R2041         | Same as R2038.  |                    |
| R2042         | RESISTOR, FIXED, COMPOSITION: 6,800 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF682J         |
| R2043         | Same as R2038.  |                    |
| R2044         | Same as R2000.  |                    |
| S2000         | SWITCH, INTERLOCK: SPDT; operating voltage 250 VAC; current rating 5 amps.  | SW219              |
| S2001         | Same as S2000.  |                    |
| S2002         | SWITCH, ROTARY: 1 section, 2 positions; 60° angle of throw; non-shorting type contacts, silver plated brass; mycalex insulation.  | SW252              |
| S2003         | SWITCH, ROTARY: 1 section, 4 positions; 30° angle of throw; non-shorting type contacts; mycalex insulation.                       | SW105              |
| S2004         | SWITCH  | SW430              |
| S2005         | SWITCH  | SW429              |
| S2006         | SWITCH, SENSITIVE: SPDT; current rating 5 amps at 125 VAC or 250 VAC; 7 amps resistive, 4 amps inductive at 28 VDC; plastic body. | SW353-2            |
| S2007         | Same as S2006.  |                    |

PARTS LIST (CONT)  
RF AMPLIFIER, MODEL TLAA-2.5K

| REF<br>SYMBOL | DESCRIPTION                              | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| S2008         | SWITCH                                   | AS128              |
| S2009         | Same as S2006.                           |                    |
| T2000         |  | CL415-1            |
| T2001         |  | CL415-2            |
| TB2000        | TERMINAL BOARD,                          | TB*                |
| V2000         | TUBE, ELECTRON: tetrode; 11 pin contact. | 8121               |
| V2001         | Same as V2000.                           |                    |
| V2002         | TUBE, ELECTRON                           | PL264              |
| XV2000        | SOCKET, ELECTRON TUBE: 11 pin contact.   | TS170-1            |
| XV2001        | Same as XV2000.                          |                    |
| XV2002        | SOCKET, ELECTRON TUBE                    | TS182              |
| PS2000        |  | AX*                |
| PS2001        | NOT USED                                 |                    |
| PS2002        |  | AX*                |
| PS2003        |  | AX*                |

PARTS LIST  
for  
TRANSMITTER CONTROL PANEL, MODEL TCP-1

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER  |
|---------------|--|---------------------|
| C4000         | CAPACITOR, FIXED, ELECTROLYTIC: 75 uf, -10% +150% at 120 cps (Hz) at 25°C; 50 WVDC; polarized.   | CE105-75-50         |
| CB4000        | CIRCUIT BREAKER  | SW417-1             |
| CB4001        | CIRCUIT BREAKER  | SW418-1             |
| CR4000        | SEMICONDUCTOR DEVICE, DIODE  | 1N2484              |
| DS4000        | LAMP, INDICATOR: w/white lens; 5.0 V at 0.06 amps for 60,000 hrs or 6.3 V at 0.07 amps for 6,000 hrs.  | BI116-1-5           |
| E4000         | TERMINAL BOARD, BARRIER: sixteen 6-32 thd. x 1/4" long binder head machine screws; phenolic body.  | TM102-16            |
| E4001         | TERMINAL BOARD, BARRIER: twelve 6-32 thd. x 1/4" long binder head machine screws; phenolic body.   | TM102-12            |
| J4000         | CONNECTOR, RECEPTACLE, ELECTRICAL: 7 male contacts.  | MS3102A24-10P       |
| J4001         | CONNECTOR, RECEPTACLE, ELECTRICAL: 52 male contacts.   | MS3102A32-414<br>P  |
| K4000         | RELAY, ARMATURE: DPDT; 24 VDC, 400 ohms; contacts rated for 10 amps resistive at 115 VAC or 5 amps inductive at 26 VDC; nominal coil power 1 to 2 watts. | RL168-2C10-24<br>DC |
| K4001         | RELAY, ARMATURE  | RL126               |
| K4002         | RELAY, ARMATURE  | RL123               |
| K4003         | RELAY, ARMATURE: 4PDT; contacts rated for 25 amps non-inductive load at 125 VAC.   | RL127               |
| K4004         | Same as K4000.   |                     |
| R4000         | RESISTOR, FIXED, COMPOSITION: 10,000 ohms, ±5%; 2 watts.   | RC42GF1035          |
| R4001         | RESISTOR, FIXED, COMPOSITION: 390 ohms, ±5%; 2 watts.  | RC42GF3913          |
| S4000         | SWITCH, PUSHBUTTON: w/red lens; AC; current rating 250 ma non-inductive; 30 watts.   | SW296-1             |
| S4001         | SWITCH, TOGGLE: DPDT; nominal current rating 1 amp at 250 VAC/DC, 3 amps at 125 VAC/DC.  | ST101-16-62         |

## PARTS LIST (CONT)

## TRANSMITTER CONTROL PANEL, MODEL TCP-1

| REF<br>SYMBOL            | DESCRIPTION  | TMC<br>PART NUMBER |
|--------------------------|--|--------------------|
| S4002                    | SWITCH, ROTARY: 1 section, 12 positions; 30° angle of throw; non-shorting type contacts. | SW250              |
| S4003                    | Same as S4000.   |                    |
| S4004                    | Same as S4001.   |                    |
| XDS4000                  | Non-replaceable item. Part of DS4000.  |                    |
| XK4000                   | SOCKET, RELAY: 8 contacts  | TS101P01           |
| XK4001<br>thru<br>XK4003 | NOT USED   |                    |
| XK4004                   | Same as XK4000.  |                    |

PARTS LIST  
for  
LOW VOLTAGE POWER SUPPLY, AP128 & AP128/50

| REF<br>SYMBOL          | DESCRIPTION   | TMC<br>PART NUMBER |
|------------------------|---|--------------------|
| C5000                  | CAPACITOR, FIXED, PAPER DIELECTRIC: 10 uf, $\pm 10\%$ ;<br>2,000 WVDC; polarized.   | CP70IEG106K        |
| C5001                  | CAPACITOR, FIXED, ELECTROLYTIC: 80 uf, 450 WVDC.  | CE51C800R          |
| C5002                  | Same as C5001.  |                    |
| C5003                  | NOT USED  |                    |
| C5004                  | CAPACITOR, FIXED, PAPER DIELECTRIC: 4 uuf, $\pm 10\%$ ;<br>600 WVDC.  | CP41IFF405K        |
| C5005<br>thru<br>C5008 | Same as C5004.  |                    |
| CR5000                 | RECTIFIER, SEMICONDUCTOR DEVICE: 3 phase; average<br>current 1.5 amps at 75°C; non-recurrent surge 20<br>amps at 75°C; peak reverse voltage 4 Kv. | DD129              |
| CR5001                 | Same as CR5000.   |                    |
| CR5002                 | RECTIFIER, SEMICONDUCTOR DEVICE: forward current<br>22 amps at 40°C; peak reverse voltage 200 V; out-<br>put voltage 128 V.                       | DD132-1            |
| DS5000                 | Non-replaceable item. Part of XF5003.   |                    |
| DS5001                 | Non-replaceable item. Part of XF5004.   |                    |
| DS5002                 | Non-replaceable item. Part of XF5002.   |                    |
| DS5003                 | Non-replaceable item. Part of XF5001.   |                    |
| DS5004                 | Non-replaceable item. Part of XF5000.   |                    |
| DS5005                 | LAMP, INCANDESCENT: 28.0 VAC/DC, 0.04 amps; single<br>contact, T-1-3/4 bulb.  | BI110-7            |
| DS5006                 | Same as DS5005.   |                    |
| DS5007                 | Same as DS5005.   |                    |
| DS5008                 | Non-replaceable item. Part of XF5005.   |                    |
| DS5009                 | Non-replaceable item. Part of XF5006.   |                    |
| DS5010                 | Non-replaceable item. Part of XF5008.   |                    |

## PARTS LIST (CONT)

LOW VOLTAGE POWER SUPPLY, AP128/AP128/50

| REF SYMBOL | DESCRIPTION  | TMC PART NUMBER     |
|------------|--|---------------------|
| DS5011     | Non-replaceable item. Part of XF5007.  |                     |
| DS5012     | Non-replaceable item. Part of XF5009.  |                     |
| F5000      | FUSE, CARTRIDGE: 5 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.   | FU102-5             |
| F5001      | FUSE, CARTRIDGE: 2 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.   | FU102-2             |
| F5002      | FUSE, CARTRIDGE: 3 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.   | FU102-3             |
| F5003      | FUSE, CARTRIDGE: 1/4 amp; time lag; 1-1/4" long x 1/4" dia.; slo-blo.  | FU102-.250          |
| F5004      | FUSE, CARTRIDGE: 1/2 amp; 600 VAC/DC; 1-1/2" long x 13/32" dia.; high voltage.   | FU104-R5            |
| F5005      | Same as F5004.   |                     |
| F5006      | FUSE, CARTRIDGE: 3/4 amp; time lag; 1-1/4" long x 1/4" dia.; slo-blo.  | FU102-.750          |
| F5007      | FUSE, CARTRIDGE: 2-1/2 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.   | FU102-2.5           |
| F5008      | Same as F5002.   |                     |
| F5009      | FUSE, CARTRIDGE: 10 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.  | FU102-10            |
| J5000      | CONNECTOR, RECEPTACLE, ELECTRICAL: male  | MS3102A32P          |
| J5001      | CONNECTOR, RECEPTACLE, ELECTRICAL: female  | MS3102A32S          |
| K5000      | RELAY, ARMATURE: DPDT; 220 VDC, 5,000 ohms; contacts rated for 10 amps resistive at 115 VAC or 5 amps inductive at 26 VDC; nominal coil power 2 to 3 volt - amps. (Model AP128)    | RL168-2C10-220AC    |
| * K5000    | RELAY, ARMATURE: DPDT; 220 VDC, 5,000 ohms; contacts rated for 10 amps resistive at 115 VAC or 5 amps inductive at 26 VDC; nominal coil power 2 to 3 volt - amps. (Model AP128/50) | RL168-2C10-220AC/50 |

\*NOTE add -50 to Part number of K5000 for 50 cycle version.  
TMC Model AP128/50.

PARTS LIST (CONT)  
LOW VOLTAGE POWER SUPPLY, AP128/AP128/50

| REF<br>SYMBOL          | DESCRIPTION  | TMC<br>PART NUMBER |
|------------------------|--|--------------------|
| K5001                  | RELAY, ARMATURE: DPDT; 24 VDC, 400 ohms; contacts rated for 10 amps resistive at 115 VAC or 5 amps inductive at 26 VDC; nominal coil power 1 to 2 watts. | RL168-2C10-24DC    |
| K5002<br>thru<br>K5005 | Same as K5001.   |                    |
| L5000                  | REACTOR: 5 hy at 25 MADC; DC resistance 375 ohms; hermetically sealed rectangular steel case.  | TF5028             |
| L5001                  | REACTOR: 5 hy; current rating 250 MADC; nominal DC resistance 90 ohms; 120 cps (Hz) at 450 VAC, 400 cps at 30 VAC. stud mounted.                         | TF5025             |
| L5002                  | Same as L5001.   |                    |
| M5000                  | METER, TIME ELAPSED: 115 V, 60 cps; 2.5 watts. (Model AP128)   | MR193-1            |
| * M5000                | METER, TIME ELAPSED: 115 V, 60 cps; 2.5 watts. (Model AP128/50)  | MR193-1-50         |
| M5001                  | Same as M5000. (Model AP128)   |                    |
| * M5001                | Same as M5000. (Model AP128/50)  |                    |
| R5000                  | RESISTOR, FIXED, COMPOSITION: 12,000 ohms, $\pm 5\%$ ; 2 watts.  | RC42GF123J         |
| R5001                  | RESISTOR, VARIABLE, COMPOSITION: 25,000 ohms, $\pm 10\%$ ; 2 watts.  | RV4LAYS253A        |
| R5002                  | RESISTOR, FIXED, COMPOSITION: 18,000 ohms, $\pm 5\%$ ; 2 watts.  | RC42GF183J         |
| R5003                  | RESISTOR, FIXED, COMPOSITION: 33,000 ohms, $\pm 5\%$ ; 2 watts.  | RC42GF333J         |
| R5004                  | Same as R5001.   |                    |
| R5005                  | RESISTOR, FIXED, COMPOSITION: 3,900 ohms, $\pm 5\%$ ; 2 watts.   | RC42GF392J         |
| R5006                  | Same as R5003.   |                    |
| R5007                  | Same as R5001.   |                    |

\*NOTE add -50 to Part number of M5000 & M5001 for 50 cycle version.  
TMC Model AP128/50 only.

PARTS LIST (CONT)  
 LOW VOLTAGE POWER SUPPLY, AP128/AP128/50

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| R5008         | Same as R5005.  |                    |
| R5009         | RESISTOR, FIXED, WIREWOUND: 50 ohms, 10 watts.                                  | RW109-7            |
| R5010         | Same as R5009.  |                    |
| R5011         | Same as R5009.  |                    |
| R5012         | Same as R5003.  |                    |
| R5013         | Non-replaceable item. Part of XF5003.   |                    |
| R5014         | RESISTOR, FIXED, COMPOSITION: 470,000 ohms, $\pm 5\%$ ; 2 watts.                | RC42GF474J         |
| R5015         | RESISTOR, FIXED, WIREWOUND: 1,500 ohms, 10 watts.                               | RW109-26           |
| R5016         | Same as R5014.  |                    |
| R5017         | Non-replaceable item. Part of XF5004.   |                    |
| R5018         | RESISTOR, VARIABLE, WIREWOUND: 6 ohms, $\pm 10\%$ ; 25 watts; linear taper.     | RA75AXC6ROAK-25    |
| R5019         | RESISTOR, FIXED, WIREWOUND: 5 ohms; current rating 1,000 ma; 5 watts.           | RW107-6            |
| R5020         | Same as R5014.  |                    |
| R5021         | RESISTOR, FIXED, WIREWOUND: 5,000 ohms, $\pm 5\%$ ; 5 watts non-inductive.      | RR114-5000W        |
| R5022         | Same as R5021.  |                    |
| R5023         | Non-replaceable item. Part of XF5002.   |                    |
| R5024         | Non-replaceable item. Part of XF5001.   |                    |
| R5025         | Non-replaceable item. Part of XF5000.   |                    |
| R5026         | RESISTOR, FIXED, WIREWOUND: 500 ohms; current rating 100 ma; 5 watts.           | RW107-28           |
| R5027         | RESISTOR, VARIABLE, WIREWOUND: 2,500 ohms, $\pm 10\%$ ; 25 watts; linear taper. | RA75AXC252AK-25    |
| R5028         | RESISTOR, FIXED, WIREWOUND: 1,000 ohms, 10 watts.                               | RW109-24           |

PARTS LIST (CONT)  
 LOW VOLTAGE POWER SUPPLY, AP128/AP128/50

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| R5029         | RESISTOR, FIXED, COMPOSITION: 56,000 ohms, $\pm 5\%$ ; 2 watts.   | RC42GF563J         |
| R5030         | Non-replaceable item. Part of XF5006.   |                    |
| R5031         | RESISTOR, FIXED, COMPOSITION: 82,000 ohms, $\pm 5\%$ ; 2 watts.   | RC42GF823J         |
| R5032         | Non-replaceable item. Part of XF5007.   |                    |
| R5033         | Non-replaceable item. Part of XF5009.   |                    |
| R5034         | Non-replaceable item. Part of XF5008.   |                    |
| R5035         | Non-replaceable item. Part of XF5005.   |                    |
| R5036         | RESISTOR, FIXED, WIREWOUND: 25 ohms, 10 watts.  | RW109-6            |
| R5037         | Same as R5036.  |                    |
| R5038         | Same as R5036.  |                    |
| S5000         | SWITCH, INTERLOCK: SPDT; current rating 5 amps inductive at 30 VDC or 4 amps resistive at 30 VDC at sea level.  | SW219              |
| S5001         | Same as S5000.  |                    |
| T5000         | TRANSFORMER, FILIAMENT  | TF341              |
| T5001         | TRANSFORMER, POWER, STEP-UP: primary 220/440 VAC; triple phase, 50/60 cps (Hz); secondary 634 VAC at 200 MADC; neutral 365 VAC at 250 MADC; secondary 346 VAC at 50 MADC. | TF313              |
| V5000         | TUBE, ELECTRON: voltage regulator; 7 pin miniature.   | OA2                |
| V5001         | TUBE, ELECTRON: voltage regulator; 7 pin miniature.   | OB2                |
| V5002         | Same as V5001.  |                    |
| V5003         | Same as V5000.  |                    |
| V5004         | Same as V5000.  |                    |
| V5005         | Same as V5001.  |                    |
| XC5000        | NOT USED  |                    |

PARTS LIST (CONT)  
 LOW VOLTAGE POWER SUPPLY, AP128/AP128/50


| REF<br>SYMBOL              | DESCRIPTION  | TMC<br>PART NUMBER |
|----------------------------|--|--------------------|
| XC5001                     | SOCKET, ELECTRON TUBE: 8 pin contact; saddle type; C5001 mounting.   | TS101P01           |
| XC5002                     | Same as XC5001. for mounting C5002.  |                    |
| XDS5000<br>thru<br>XDS5004 | NOT USED   |                    |
| XDS5005                    | LIGHT, INDICATOR: with white lens, sub-miniature type.   | TS153-5            |
| XDS5006                    | Same as XDS5005.   |                    |
| XDS5007                    | Same as XDS5005.   |                    |
| XF5000                     | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 300 V, 20 amps; neon lamp type with a 220K ohm lamp resistor; transparent clear flat sided knob; black body; consists of DS5004, R5025.             | FH104-3            |
| XF5001                     | Same as XF5000. Consists of DS5003, R5024.   |                    |
| XF5002                     | Same as XF5000. Consists of DS5002, R5023.   |                    |
| XF5003                     | Same as XF5000. Consists of DS5000, R5013.   |                    |
| XF5004                     | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 500 V, 30 amps; neon lamp type with a 220K ohm lamp resistor; clear octagon knob; Consists of DS5001, R5017.  | FH106              |
| XF5005                     | Same as XF5004. Consists of DS5008, R5035.   |                    |
| XF5006                     | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 22 to 33 V, 20 amps; incandescent lamp type with a 330 ohm lamp resistor; transparent amber flat sided knob; brown body. Consists of DS5009, R5030. | FH104-11           |
| XF5007                     | Same as XF5006. Consists of DS5011, R5032.   |                    |
| XF5008                     | Same as XF5006. Consists of DS5010, R5034.   |                    |
| XF5009                     | Same as XF5006. Consists of DS5012, R5033.   |                    |

## PARTS LIST (CONT)

LOW VOLTAGE POWER SUPPLY, AP128/AP128/50

| REF<br>SYMBOL            | DESCRIPTION                           | TMC<br>PART NUMBER |
|--------------------------|---------------------------------------|--------------------|
| XK5000<br>thru<br>XK5005 | Same as XC5001.                       |                    |
| XV5000                   | SOCKET, ELECTRON TUBE: 7 pin contact. | TS102P01           |
| XV5001<br>thru<br>XV5005 | Same as XV5000.                       |                    |

PARTS LIST  
for  
HIGH VOLTAGE POWER SUPPLY, AP129 & AP129/50
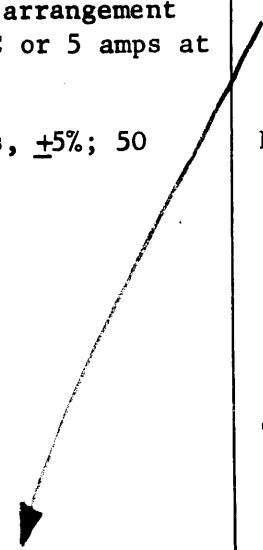
| REF SYMBOL               | DESCRIPTION  | TMC PART NUMBER |
|--------------------------|--|-----------------|
| C6000                    | CAPACITOR, FIXED, PLASTIC DIELECTRIC: 10 uf, +_10%; 5 KVDC.  | CX113-2         |
| CR6000                   | RECTIFIER, SEMICONDUCTOR DEVICE: average rectified current 2.6 amps; max. forward voltage drop 9.6 V; max. peak reverse voltage 6,400 V.   | DD128-1         |
| CR6001<br>thru<br>CR6005 | Same as CR6000.  |                 |
| E6000                    | TERMINAL BOARD, BARRIER: eight 6-32 thd. x 1/4" long binding head machine screws; plastic body.  | TM102-8         |
| *K6000                   | RELAY, ARMATURE: 4 pole; contact current rating 30 amps at 600 VAC; coil voltage 208 VAC at 60 cps (Hz).   | RL171-8         |
| L6000                    | REACTOR; 2 hy  | TF5029          |
| M6000                    | TIMER, INTERVAL: adjustable; range setting 30 sec. minium, 5 min. maximum; switch contact arrangement SPDT; current rating 10 amps at 125 VAC or 5 amps at 250 VAC resistive load. | TI105           |
| R6000                    | RESISTOR, FIXED, WIREWOUND: 71,000 ohms, +_5%; 50 watts.   | RW125F713J      |
| R6001                    | Same as R6000.   |                 |
| R6002                    | Same as R6000.   |                 |
| S6000                    | Non-replaceable item. Part of M6000.   |                 |
| T6000                    | TRANSFORMER, POWER   | TF314           |
|                          |  <p>TI 105-1 60Hz<br/>TI 105-2 50Hz</p>   |                 |

PARTS LIST  
for  
RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF<br>SYMBOL          | DESCRIPTION   | TMC<br>PART NUMBER |
|------------------------|---|--------------------|
| B7000                  | MOTOR   | M0130-2            |
| C7000                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 10,000 uuf, GMV; 500 WVDC.                                | CC100-16           |
| C7001                  | Same as C7000.  |                    |
| C7002                  | Same as C7000.  |                    |
| C7003                  | CAPACITOR, FIXED, ELECTROLYTIC: 500 uf, 50 WVDC; polarized.                                     | CE116-10VN         |
| C7004                  | CAPACITOR, FIXED, CERAMIC DIELECTRIC: 200,000 uuf, +80% -20%; 25 WVDC.                          | CC100-33           |
| C7005                  | Same as C7004.  |                    |
| C7006<br>thru<br>C7010 | Same as C7000.  |                    |
| C7011                  | CAPACITOR, FIXED, ELECTROLYTIC: 2,000 uf, 25 WVDC; polarized.                                   | CE116-5VN          |
| C7012                  | Same as C7000.  |                    |
| C7013                  | CAPACITOR, FIXED, MICA DIELECTRIC: 1,000 uuf, $\pm 2\%$ ; 500 WVDC.                             | CM20F102G03        |
| C7014                  | Same as C7013.  |                    |
| C7015                  | CAPACITOR, FIXED, MICA DIELECTRIC: 10 uuf, $\pm 2\%$ ; 500 WVDC.                                | CM15C100G03-YY     |
| C7016                  | CAPACITOR, FIXED, MICA DIELECTRIC: 47 uuf, $\pm 2\%$ ; 500 WVDC.                                | CM15F470G03-YY     |
| C7017                  | Same as C7003.  |                    |
| C7018                  | CAPACITOR, FIXED, ELECTROLYTIC: 100 uf, -10% +150% at 120 cps (Hz) at 25°C; 25 WVDC; polarized. | CE105-100-25       |
| CR7000                 | SEMICONDUCTOR DEVICE, DIODE   | 1N3027B            |
| CR7001                 | SEMICONDUCTOR DEVICE, DIODE   | 1N34A              |
| CR7002                 | Same as CR7001.   |                    |

PARTS LIST (CONT)  
RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF SYMBOL | DESCRIPTION  | TMC PART NUMBER |
|------------|--|-----------------|
| CR7003     | ABSORBER, OVERVOLTAGE: operating voltage range 28 to 33 V; max. reverse voltage 10 VDC; current rating 750 ma; 200 PIV diode; 6.8 V, 1 watt Zener diode. | DD111-1         |
| CR7004     | SEMICONDUCTOR DEVICE, DIODE  | 1N2484          |
| CR7005     | SEMICONDUCTOR DEVICE, DIODE  | 1N270           |
| CR7006     | Same as CR7004.  |                 |
| CR7007     | Same as CR7004.  |                 |
| DS7000     | LAMP, INCANDESCENT: 28.0 VAC/DC; 0.04 amps; single contact, T-1-3/4 bulb.  | BI110-7         |
| DS7001     | Non-replaceable item. Part of XF7000.  |                 |
| DS7002     | Same as DS7000.  |                 |
| DS7003     | Non-replaceable item. Part of XF7002.  |                 |
| F7000      | FUSE, CARTRIDGE: 1 amp; time lag; 1-1/4" long x 1/4" dia.; slo-blo.  | FU102-1         |
| F7001      | FUSE, CARTRIDGE: 3 amps; time lag; 1-1/4" long x 1/4" dia.; slo-blo.   | FU102-3         |
| F7002      | Same as F7000.   |                 |
| J7000      | CONNECTOR, RECEPTACLE, ELECTRICAL: 44 female contacts, rated for 5 amps at 1,800 V RMS; for double sided printed circuit board.                          | JJ319-22DFE     |
| J7001      | CONNECTOR, RECEPTACLE, ELECTRICAL  | *               |
| J7002      | Same as J7000.   |                 |
| J7003      | CONNECTOR, RECEPTACLE, ELECTRICAL: RF; 1 round female contact, straight type; 52 ohms; BNC to BNC.   | UG625*/U        |
| J7004      | Same as J7003.   |                 |
| J7005      | CONNECTOR, RECEPTACLE, ELECTRICAL  | *               |
| J7006      | Same as J7000.   |                 |

## PARTS LIST (CONT)

## RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF SYMBOL | DESCRIPTION  | TMC PART NUMBER |
|------------|--|-----------------|
| J7007      | CONNECTOR, RECEPTACLE, ELECTRICAL: RF; 1 round male contact, straight type; series BNC to BNC.   | JJ211           |
| J7008      | Same as J7007.   |                 |
| J7009      | CONNECTOR, RECEPTACLE, ELECTRICAL: male  | JJ313-1         |
| K7000      | RELAY, ARMATURE: DPDT; 700 ohms, $\pm 10\%$ DC resistance; operating voltage 24 VDC; current rating 35 ma; power rating 700 mw at 25°C; 8 contacts rated for 3 amps at 115 VAC or 5 amps at 29 VDC; clear high impact styrene dust cover case.                         | RL156-1         |
| K7001      | RELAY, ARMATURE: 4PDT; 485 ohms each coil, $\pm 10\%$ DC resistance; operating voltage 24 VDC; current rating 49 ma each coil; power rating 1,200 mw at 25°C; 16 contacts rated for 0.5 amps at 115 VAC or 1 amp at 29 VDC; clear high impact styrene dust cover case. | RL156-10        |
| K7002      | RELAY, ARMATURE: DPDT; 485 ohms each coil, $\pm 10\%$ DC resistance; operating voltage 24 VDC; current rating 49 ma each coil; power rating 1,200 mw at 25°C; 10 contacts rated for 3 amps at 115 VAC or 5 amps at 29 VDC; clear high impact styrene dust cover case.  | RL156-9         |
| K7003      | Same as K7002.   |                 |
| K7004      | Same as K7002.   |                 |
| K7005      | Same as K7000.   |                 |
| K7006      | RELAY, ARMATURE: 4PDT; 700 ohms, $\pm 10\%$ DC resistance; operating voltage 24 VDC; current rating 35 ma; power rating 700 mw at 25°C; 14 contacts rated for 3 amps at 115 VAC or 5 amps at 29 VDC; clear high impact styrene dust cover case.                        | RL156-8         |
| K7007      | RELAY, HI-SEN: insulated for 400 VDC or 300 VAC; calibrated at 77°F; 9 male contacts, open 51 ua, closed 50 ua; 2,700 ohms; corrosion resistant aluminium case.  | RL158           |
| K7008      | Same as K7002.   |                 |
| K7009      | Same as K7002.   |                 |
| K7010      | Same as K7000.   |                 |

## PARTS LIST (CONT)

RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF SYMBOL | DESCRIPTION  | TMC PART NUMBER |
|------------|--|-----------------|
| K7011      | Same as K7001.   |                 |
| K7012      | Same as K7001.   |                 |
| K7013      | RELAY, ARMATURE: DPDT; 185 ohms, $\pm 10\%$ DC resistance; operating voltage 12 VDC; current rating 65 ma; power rating 700 mw at 25°C; 8 contacts rated for 3 amps at 115 VAC or 5 amps at 29 VDC; clear high impact styrene dust cover case. | RL156-13        |
| K7014      | RELAY, ARMATURE: SPST; contacts rated for 2 amps at 115 VAC normally open; 5 seconds time delay; operating voltage 26 V; aluminum case.  | RL166-26N05     |
| L7000      | COIL, RADIO FREQUENCY: fixed; 0.150 uh, $\pm 10\%$ ; current rating 400 ma.  | CL140-2         |
| L7001      | Same as L7000.   |                 |
| L7002      | Same as L7000.   |                 |
| M7000      | METER, CONTACTLESS: KW/SWR   | MR195           |
| P7000      | CONNECTOR, PLUG, ELECTRICAL  | *               |
| P7001      | CONNECTOR, PLUG, ELECTRICAL: RF; 1 round female contact, straight type; miniature bayonet lock series.   | PL204           |
| P7002      | Same as P7001.   |                 |
| P7003      | CONNECTOR, PLUG, ELECTRICAL: 15 female contacts rated for 5 amps at 500 V RMS; polarized.  | JJ310-1H        |
| Q7000      | TRANSISTOR   | 2N697           |
| Q7001      | TRANSISTOR   | 2N492           |
| R7000      | RESISTOR, FIXED, COMPOSITION: 2,200 ohms, $\pm 5\%$ ; 1/2 watt.  | RC20GF222J      |
| R7001      | RESISTOR, FIXED, COMPOSITION: 15,000 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF153J      |
| R7002      | RESISTOR, FIXED, COMPOSITION: 22,000 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF223J      |
| R7003      | Same as R7000.   |                 |

\* Part number to be supplied at a later date.

PARTS LIST (CONT)  
RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF<br>SYMBOL          | DESCRIPTION  | TMC<br>PART NUMBER |
|------------------------|--|--------------------|
| R7004                  | RESISTOR, FIXED, COMPOSITION: 470,000 ohms, $\pm 5\%$ ;<br>1/2 watt.       | RC20GF474J         |
| R7005                  | Same as R7000.   |                    |
| R7006                  | Non-replaceable item. Part of XF7002.                                      |                    |
| R7007                  | NOT USED   |                    |
| R7008                  | Same as R7000.   |                    |
| R7009                  | RESISTOR, FIXED, COMPOSITION: 220 ohms, $\pm 5\%$ ; 1/2<br>watt.           | RC20GF221J         |
| R7010                  | RESISTOR, FIXED, COMPOSITION: 220 ohms, $\pm 5\%$ ; 1<br>watt.             | RC32GF221J         |
| R7011                  | NOT USED   |                    |
| R7012                  | NOT USED   |                    |
| R7013                  | RESISTOR, FIXED, COMPOSITION: 10,000 ohms, $\pm 5\%$ ;<br>1/2 watt.        | RC20GF103J         |
| R7014                  | RESISTOR, VARIABLE, COMPOSITION: 100,000 ohms,<br>$\pm 10\%$ ; 0.25 watts. | RV111U104A         |
| R7015                  | NOT USED   |                    |
| R7016                  | RESISTOR, VARIABLE, COMPOSITION: 50 ohms, $\pm 10\%$ ; 2<br>watts.         | RV4NAYSK500A       |
| R7017                  | Non-replaceable item. Part of XF7000.                                      |                    |
| R7018                  | Same as R7010.   |                    |
| R7019                  | RESISTOR, VARIABLE, COMPOSITION: 500,000 ohms,<br>$\pm 10\%$ ; 0.25 watts. | RV111U504A         |
| R7020                  | RESISTOR, VARIABLE, WIREWOUND: 5,000 ohms, $\pm 5\%$ ;<br>1 watt at 50°C.  | RV119-1-502        |
| R7021<br>thru<br>R7026 | Same as R7020.   |                    |
| R7027                  | RESISTOR, FIXED, COMPOSITION: 2,700 ohms, $\pm 5\%$ ; 1/2<br>watt.         | RC20GF272J         |

PARTS LIST (CONT)  
RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF<br>SYMBOL | DESCRIPTION   | TMC<br>PART NUMBER |
|---------------|---|--------------------|
| R7028         | RESISTOR, FIXED, COMPOSITION: 3,900 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF392J         |
| R7029         | Same as R7027.  |                    |
| R7030         | Same as R7027.  |                    |
| R7031         | RESISTOR, FIXED, COMPOSITION: 3,000 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF302J         |
| R7032         | Same as R7000.  |                    |
| R7033         | RESISTOR, FIXED, COMPOSITION: 3,300 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF332J         |
| R7034         | RESISTOR, VARIABLE, WIREWOUND: 50,000 ohms, $\pm 5\%$ ; 1 watt at 50°C.   | RV119-1-503        |
| R7035         | Same as R7034.  |                    |
| R7036         | Same as R7034.  |                    |
| R7037         | RESISTOR, FIXED, COMPOSITION: 100,000 ohms, $\pm 5\%$ ; 1/2 watt.   | RC20GF104J         |
| R7038         | RESISTOR, VARIABLE, WIREWOUND: 100,000 ohms, $\pm 5\%$ ; 1 watt at 50°C.  | RV119-1-104        |
| R7039         | Same as R7038.  |                    |
| R7040         | Same as R7038.  |                    |
| R7041         | RESISTOR, FIXED, COMPOSITION: 470 ohms, $\pm 5\%$ ; 2 watts.  | RC42GF471J         |
| S7000         | SWITCH, TOGGLE: DPDT; 6 contacts rated for 5.0 amp at 250 VAC or 6 amps at 125 VAC; bat type handle.                              | ST105              |
| S7001         | SWITCH, TOGGLE: SPDT; 28° angle of throw; bat type handle.  | ST12D              |
| S7002A,B      | SWITCH, SENSITIVE: DPDT; current rating 5.0 amps at 125 VAC, 250 VAC; 7 amps resistive, 4 amps inductive at 28 VDC; plastic body. | SW353-3            |
| S7003         | SWITCH, SENSITIVE: SPDT; current rating 5.0 amps at 125 VAC, 250 VAC; 7 amps resistive, 4 amps inductive at 28 VDC; plastic body. | SW353-2            |

PARTS LIST (CONT)  
RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF<br>SYMBOL                         | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------------------------------|--|--------------------|
| S7004A,B<br>C,D,E,F,<br>G,H,I,J,<br>K | SWITCH, ROTARY: solenoid; 10 sections, 18 positions; current rating 10 to 15 amps resistive, break at 24 VDC, 5 amps resistive, break at 115 VDC; bakelite wafer insulation.   | SW428              |
| XDS7000                               | LIGHT, INDICATOR: w/red lens, sub-miniature type.  | TS153-1            |
| XDS7001                               | NOT USED   |                    |
| XDS7002                               | Same as XDS7000.   |                    |
| XF7000                                | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 300 V, 20 amps; neon lamp type with a 220K ohm lamp resistor; transparent clear flat sided knob; black body. Consists of DS7001, R7017.             | FH104-3            |
| XF7001                                | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 22 to 33 V, 20 amps; incandescent lamp type with a 330 ohm lamp resistor; transparent amber flat sided knob; brown body. Consists of DS7003, R7006. | FH104-11           |
| XK7000                                | SOCKET, RELAY: w/retainer; 6 male beryllium copper gold plated contacts; black phenolic body.  | TS171-5            |
| XK7001                                | SOCKET, RELAY: w/retainer; 12 male beryllium copper gold plated contacts; black phenolic body.   | TS171-4            |
| XK7002<br>thru<br>XK7005              | Same as XK7000.  |                    |
| XK7006                                | Same as XK7001.  |                    |
| XK7007                                | SOCKET, RELAY: 9 pin contact; 3 amps at 1,250 V RMS at sea level; phenolic body.   | TS100-7            |
| XK7008<br>thru<br>XK7010              | Same as XK7000.  |                    |
| XK7011                                | Same as XK7001.  |                    |
| XK7012                                | Same as XK7001.  |                    |
| XK7013                                | Same as XK7000.  |                    |

## PARTS LIST (CONT)

RF CONTROL/INDICATOR, MODEL SWCA-3K

| REF<br>SYMBOL | DESCRIPTION                        | TMC<br>PART NUMBER |
|---------------|------------------------------------|--------------------|
| XK7014        | SOCKET, RELAY: 7 pin contact.      | TS130MPW           |
| Z7000         | NETWORK, RELAY METER.              | NW132              |
| Z7001         | NETWORK, RELAY METER: power supply | NW131              |

PARTS LIST  
for  
TUNING CONTROL SYSTEM, MODEL TCSA-1


| REF<br>SYMBOL          | DESCRIPTION   | TMC<br>PART NUMBER |
|------------------------|---|--------------------|
| E8000                  | TERMINAL BOARD, BARRIER: four 6-32 thd. x 1/4" long binding head machine screws; phenolic body.                                 | TM102-4            |
| E8001                  | Same as E8000.  |                    |
| J8000                  | Part of Rack, Electrical Equipment, RAK111-2  |                    |
| J8001<br>thru<br>J8003 | NOT USED  |                    |
| J8004                  | CONNECTOR, RECEPTACLE, ELECTRICAL: 37 female contacts, removeable crimp pin style; current rating 5 amps, 500 V RMS; polarized. | JJ310-3            |
| J8005                  | Same as J8004.  |                    |
| J8006                  | Same as J8004.  |                    |
| Z8000                  | SECOND AMPLIFIER SERVO  | AZ110              |
| Z8001                  | PA LOAD SERVO AMPLIFIER   | AZ111              |
| Z8002                  | PA TUNE SERVO AMPLIFIER   | AZ112              |

PARTS LIST  
for  
ALARM PANEL, MODEL AX633

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| C9000         | CAPACITOR, FIXED, ELECTROLYTIC: 25 uf, -10% +150% at 120 cps (Hz) at 25°C; 50 WVDC; polarized.                     | CE105-25-50        |
| CP9000        | ADAPTER, CONNECTOR, ELECTRICAL: series BNC   | UG492D/U           |
| CP9001        | Same as CP9000.  |                    |
| CR9000        | SEMICONDUCTOR DEVICE, DIODE  | 1N2484             |
| DS9000        | Non-replaceable item. Part of XF9000.  |                    |
| DS9001        | BUZZER: audible signal; operating voltage 6 to 28 VDC; current rating 3 to 14 ma; 1-5/8" long x 1-11/16" dia. o/a. | BZ101-1            |
| E9000         | TERMINAL BOARD, BARRIER: fourteen 6-32 thd. x 1/4" long binding head machine screws; black phenolic body.          | TM100-14           |
| E9001         | TERMINAL BOARD, BARRIER: ten 6-32 thd. x 1/4" long binding head machine screws; black phenolic body.               | TM100-10           |
| F9000         | FUSE, CARTRIDGE: 1 amp; 1-1/4" long x 1/4" dia.; quick acting.   | FU100-1            |
| J9000         | JACK, TELEPHONE: silver alloy contacts.  | JJ116-10           |
| J9001         | CONNECTOR, RECEPTACLE, ELECTRICAL: 1 round female contact, straight type; series BNC to BNC.                       | JJ172              |
| J9002         | Same as J9001.   |                    |
| J9003         | CONNECTOR, RECEPTACLE, ELECTRICAL: series BNC  | UG1094A/U          |
| P9000         | CONNECTOR, PLUG, ELECTRICAL: 1 male contact; voltage rating 500 V peak; polarized.                                 | PL244-1            |
| P9001         | Same as P9000.   |                    |
| R9000         | Non-replaceable item. Part of XF9000.  |                    |
| R9001         | RESISTOR, FIXED, COMPOSITION: 330 ohms, $\pm 5\%$ ; 1 watt.  | RC32GF331J         |
| S9000         | SWITCH, TOGGLE: SPST; nominal current rating 3 amps at 250 VAC/DC or 6 amps at 125 VAC/DC.                         | ST103-1-62         |


PARTS LIST (CONT)  
ALARM PANEL, MODEL AX633

| REF<br>SYMBOL | DESCRIPTION  | TMC<br>PART NUMBER |
|---------------|--|--------------------|
| S9001         | SWITCH, ROTARY   | SW147              |
| XF9000        | FUSEHOLDER: lamp indicating; accomodates cartridge fuse 1-1/4" long x 1/4" dia.; 22 to 33 V, 20 amps; incandescent lamp type with a 330 ohm lamp resistor; transparent amber flat sided knob; brown body; consists of DS9000, R9000. | FH104-11           |

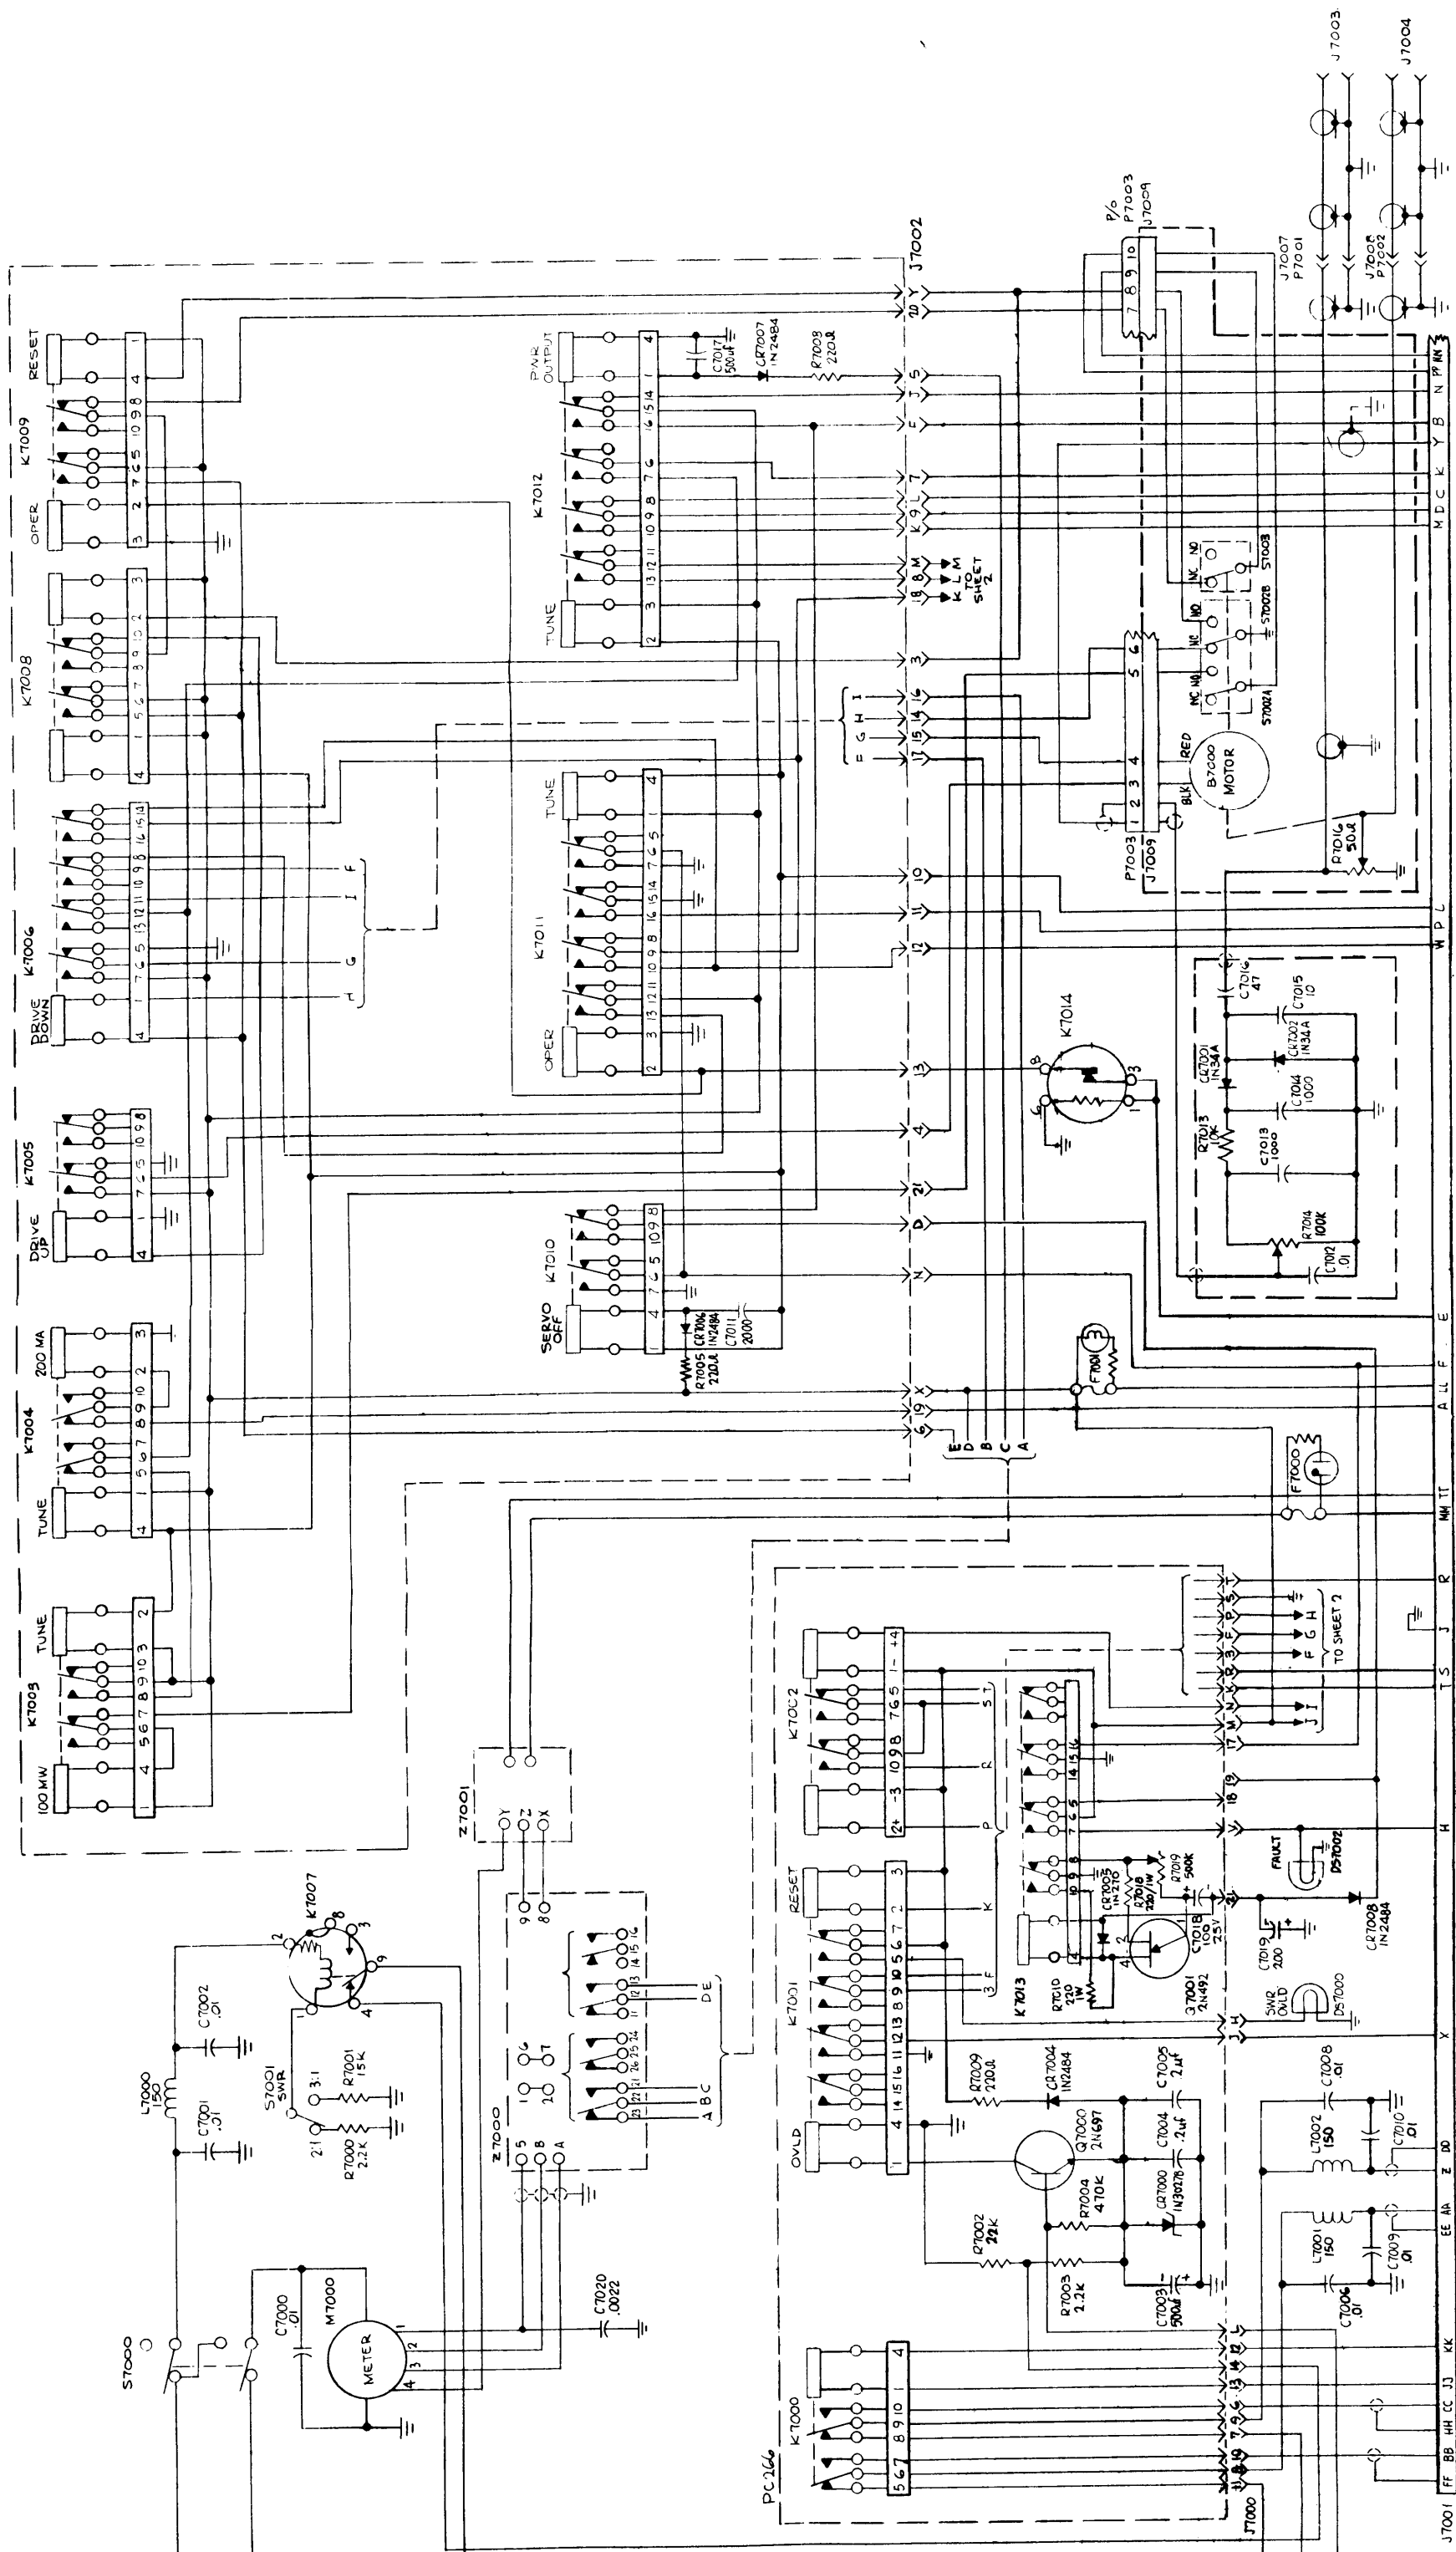


CK10480

Figure 7-7. Schematic Diagram, SWCA-3K ( sheet 1 of 2 )

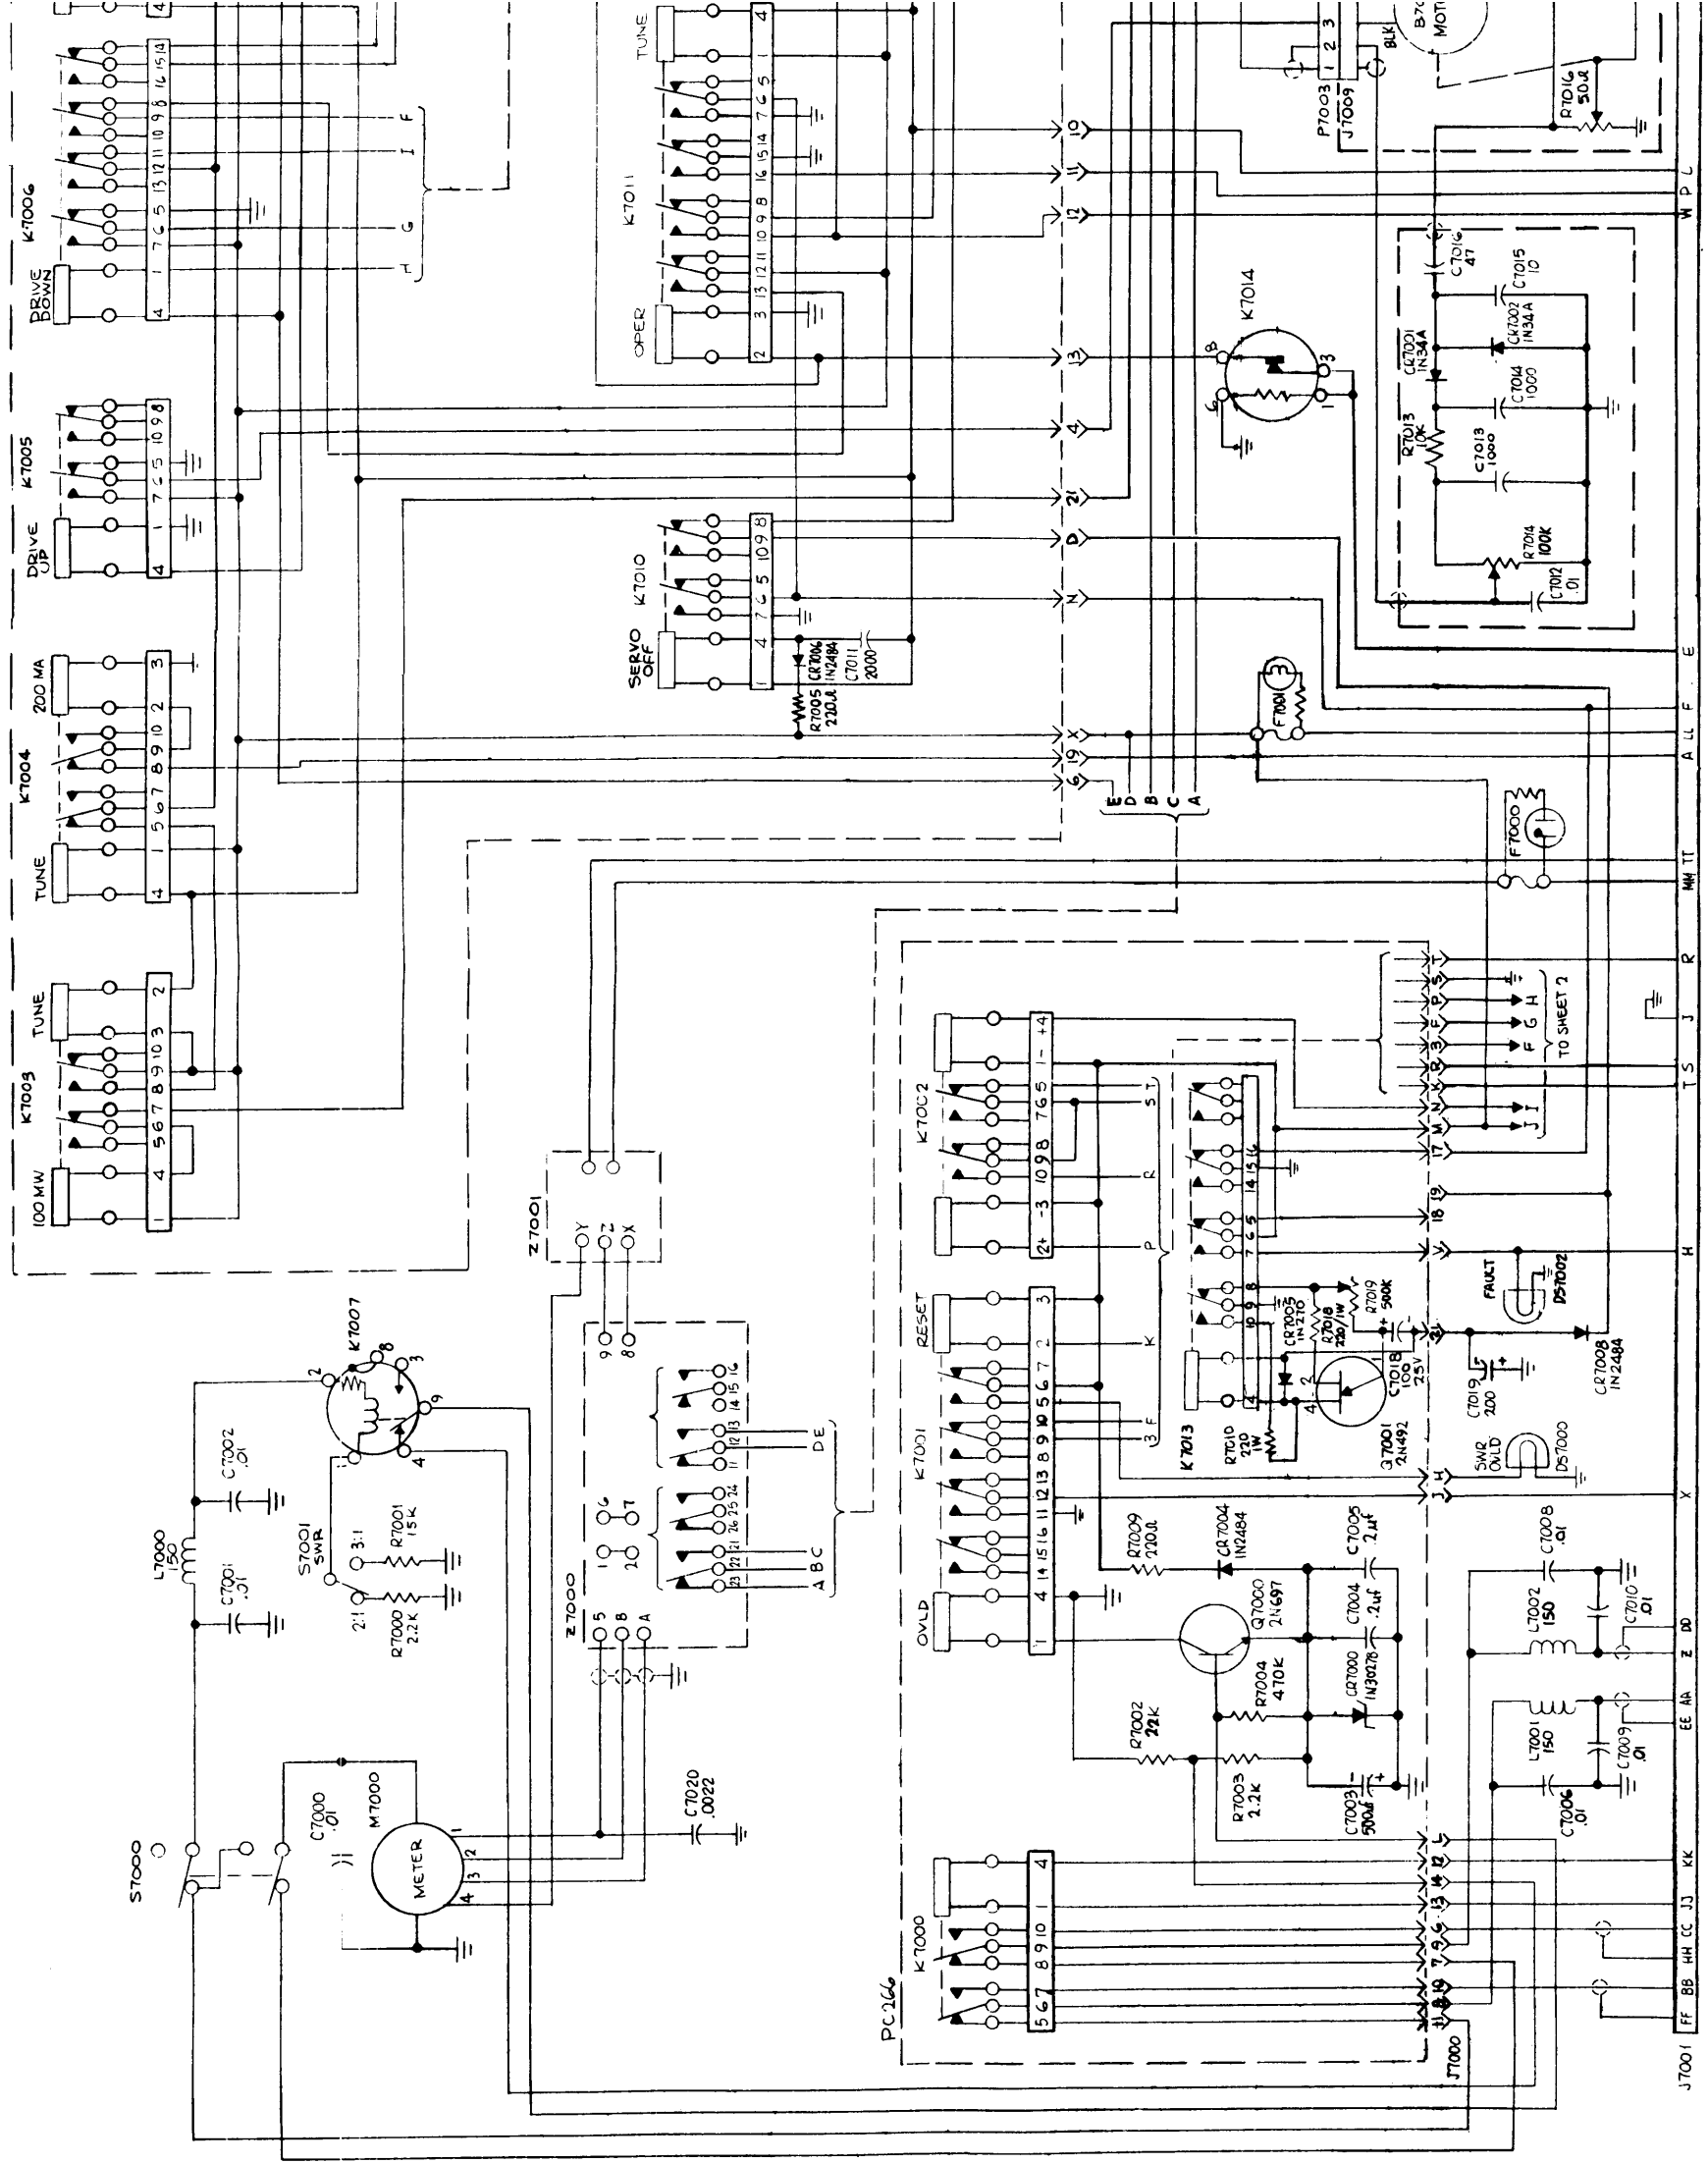


CK10480

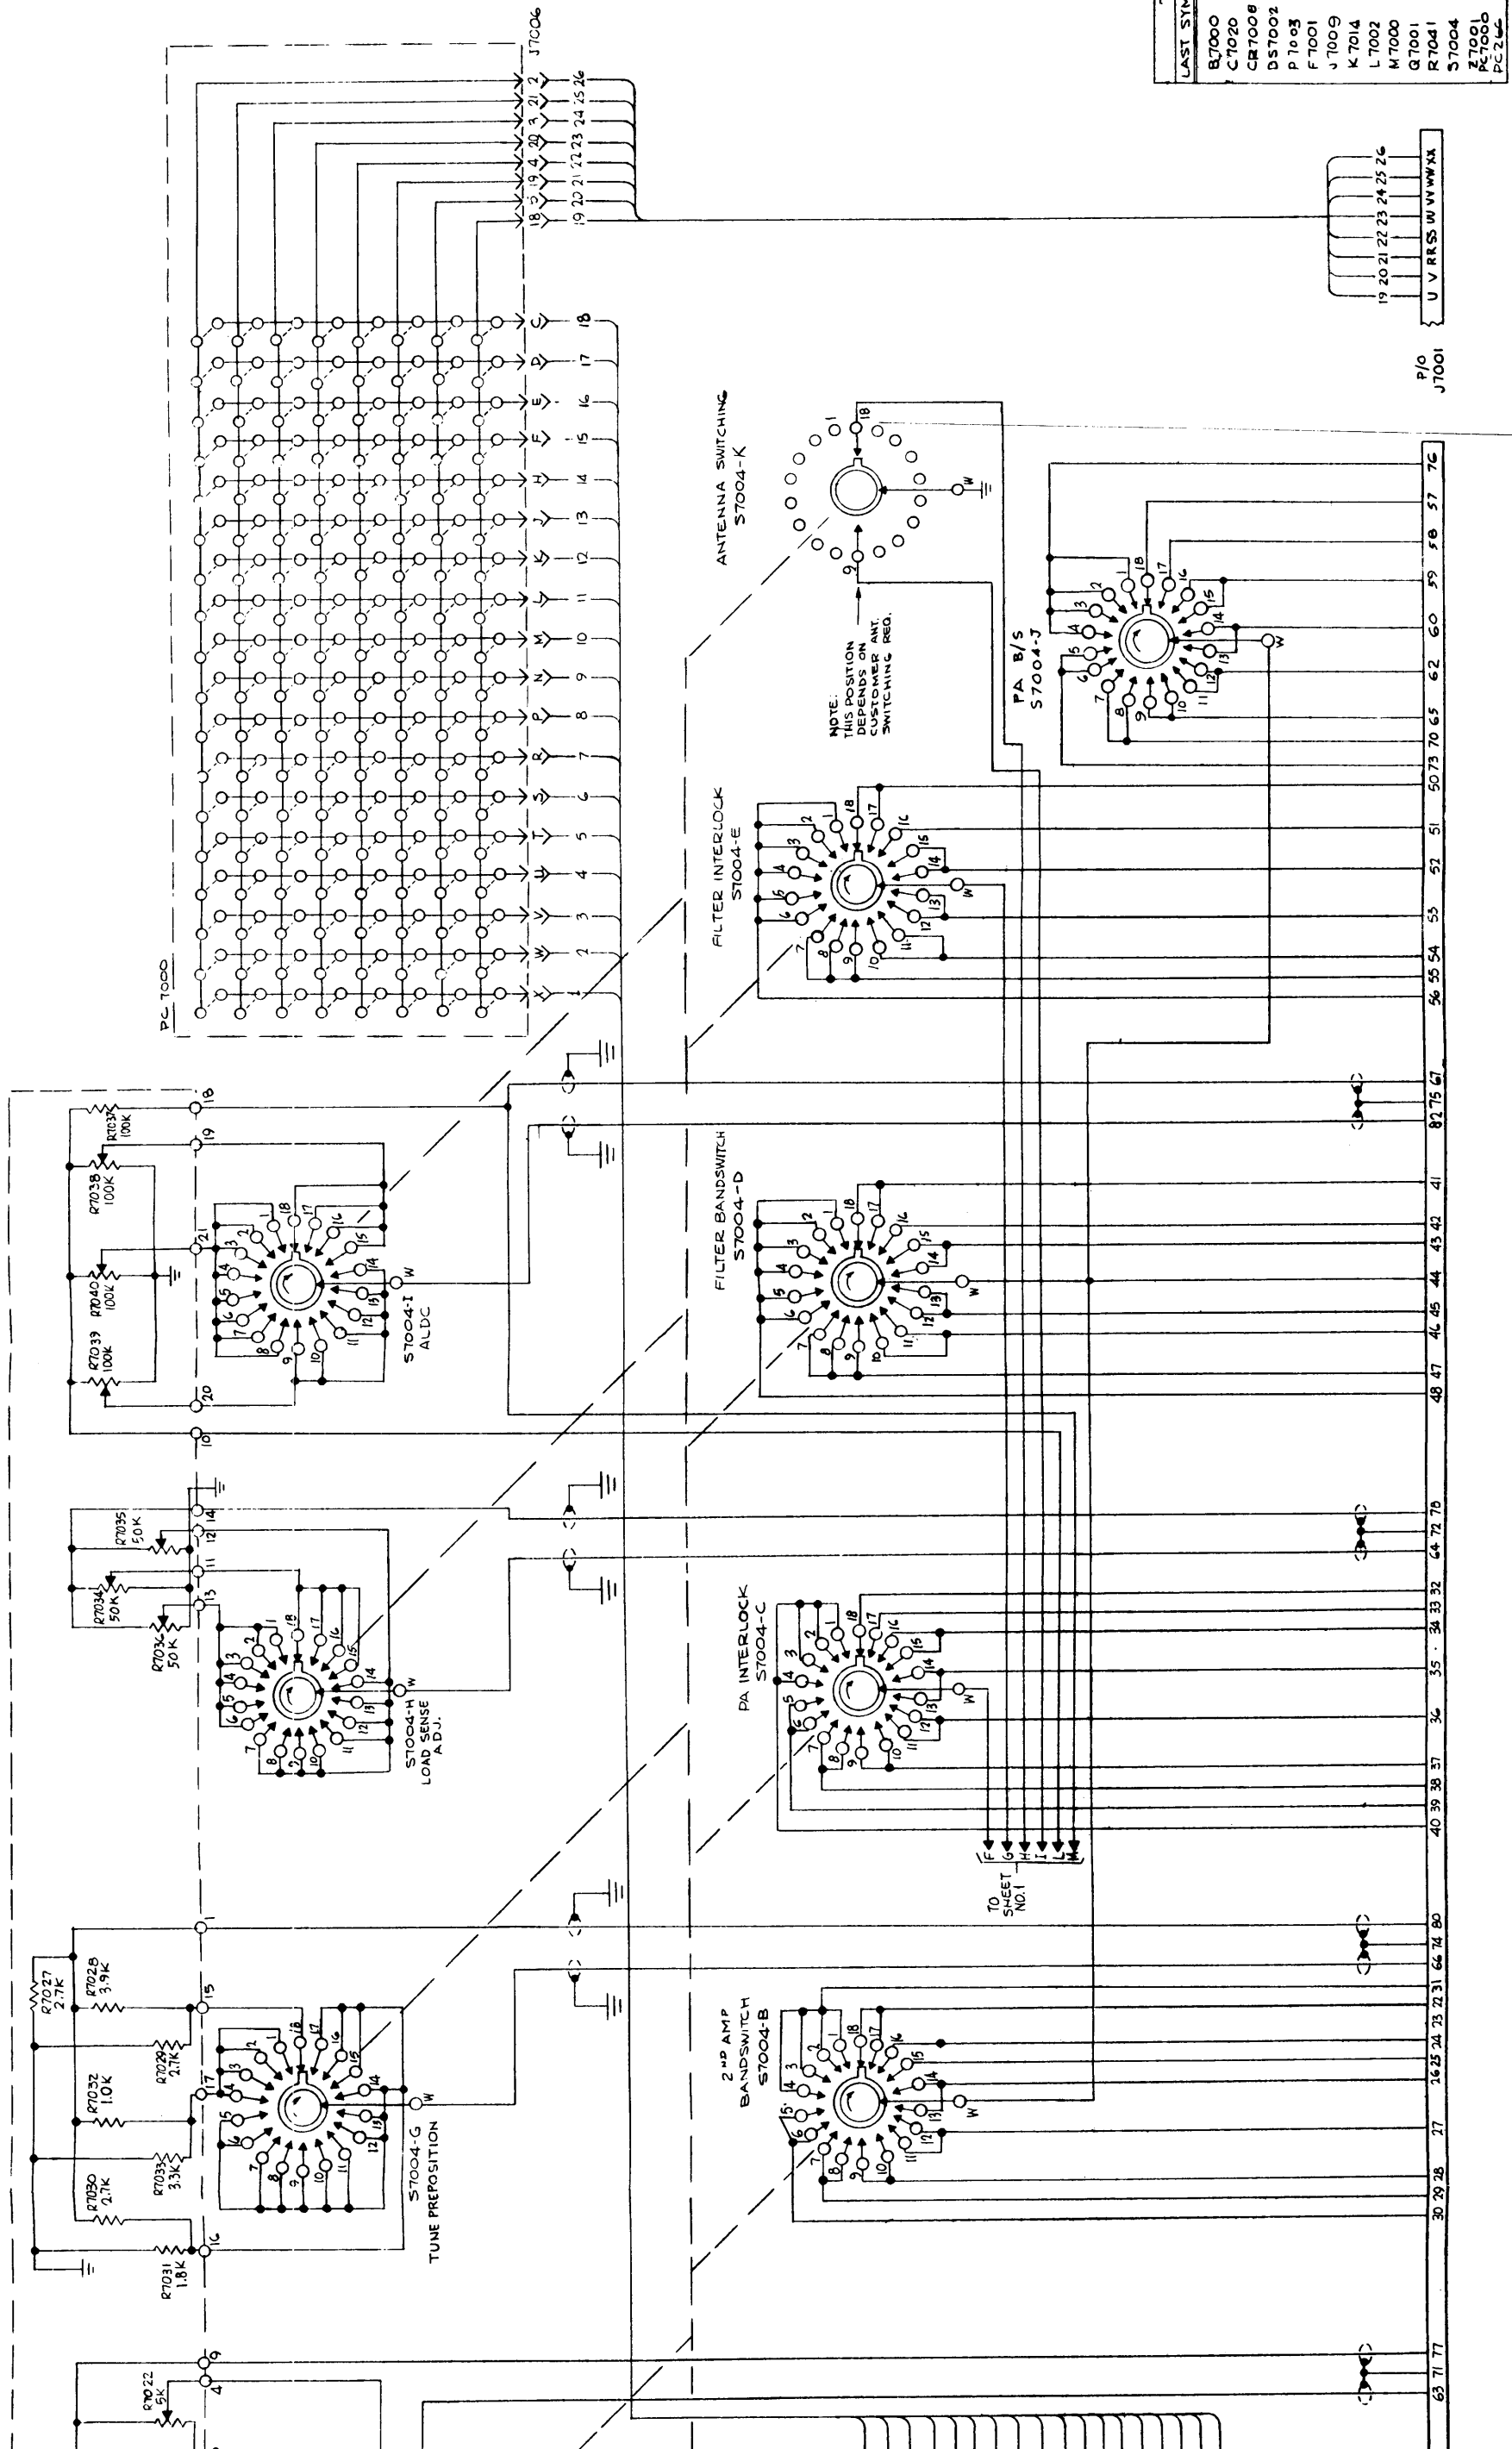

| 7000 SERIES |                         |
|-------------|-------------------------|
| LAST SYM    | MISSING SYMBOLS         |
| B7000       |                         |
| C7020       |                         |
| CR7008      | P37001                  |
| DS7002      |                         |
| P7003       |                         |
| F7001       |                         |
| J7009       |                         |
| K7014       |                         |
| L7002       |                         |
| M7000       |                         |
| Q7001       |                         |
| R7041       | R7011, 7015, 7006, 7017 |
| S7004       |                         |
| Z7001       |                         |
| PC7005      |                         |
| PC22        |                         |

CK10480

Figure 7-7. Schematic Diagram, SWCA-3K (sheet 2 of 2)

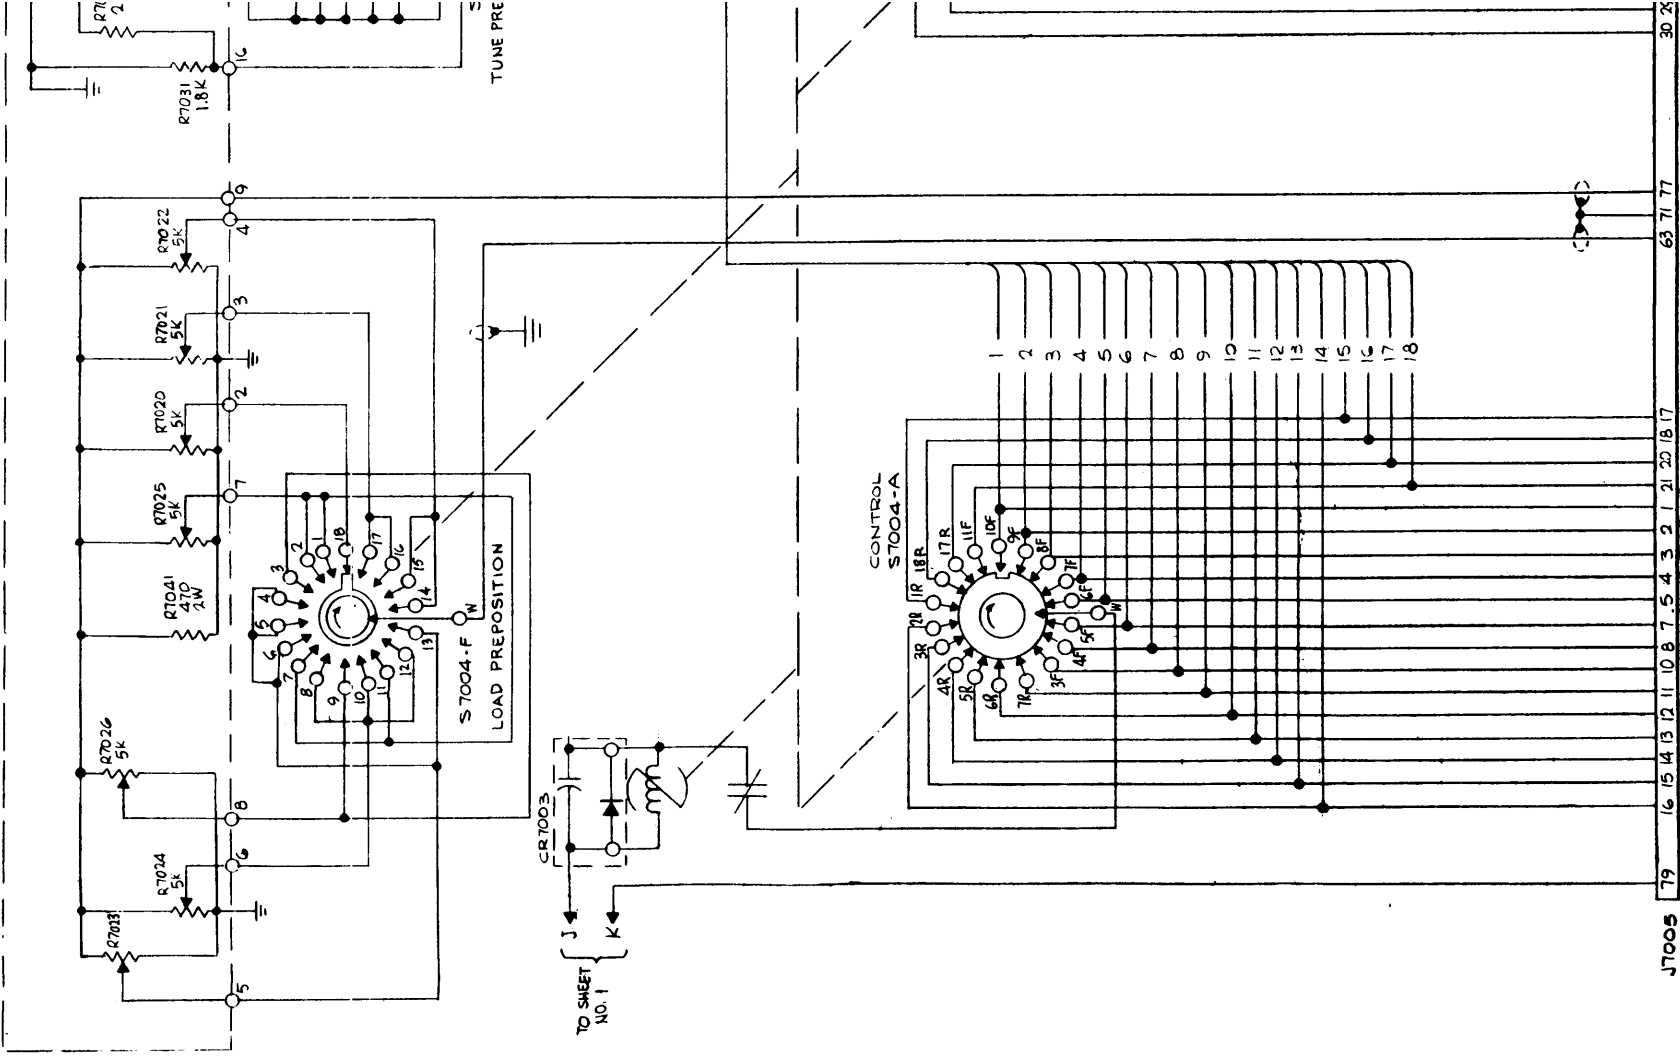

J7005

63 71 77

30 23