

1. Download the SailMail application (Airmail) from <http://www.sailmail.com>.
2. Extract the zip file to the Desktop of your PC.
3. Double click the setup.exe file to begin the software installation.
4. Please refer the SailMail Primer (<http://www.sailmail.com/smprimer.htm>) for detailed instructions.

Note: During installation, various RF grade ferrites and a line isolator may need to be added. Please consult with a qualified marine electronics dealer.

