EPT055V30Z
See Schematic
for this PCB

J304

BAND Switch

Position
A = Band A & E
B = Band B & F
C = Band C & G
D = Band D & F

BAND HI LOW
Switch

J105
Location EPT360014B

J1 Bv G 10Khz 17 16 15 14 12 11 10 9

D36 1N4148

R1 or R6 47K see NOTE

C1 100uF 10V

C2 103

IC2 IC1

D35 1N4148

D34 1N4148

B+

IC5 PLL

P0 P1 P2 P3 P4 P5 P6 P7 P8

J64

See Main PCB
Schematic

EPT360014B

8v

10Khz

J2 J3

RA1 RA2 RA3

D4-D33
1N4148
X 30

NOTE: On some boards R6 is
used or R1 but not both.

EPT004410Z

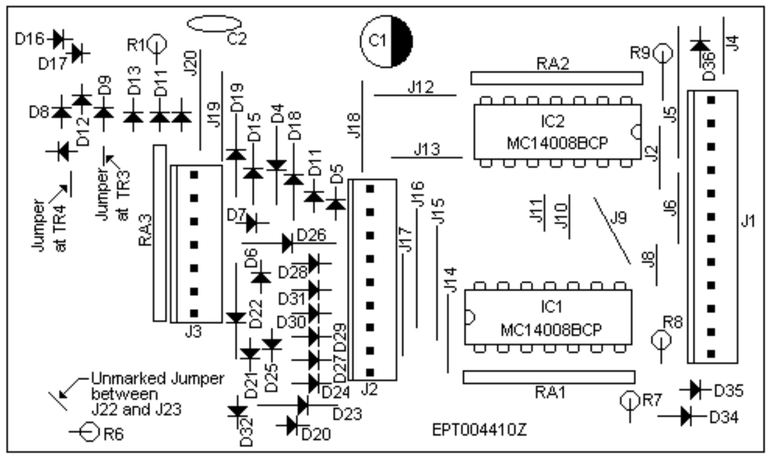

Galaxy DX Radios DX99V
BAND PCB EPT004410Z

Copyright © 2001 CBTricks. All rights reserved

Rev.# 1.0 http://www.cbtricks.com