
MTR3B-V4 "CURRAHEE" VERSION
MOUNTAIN TOPPER
QUICK REFERENCE CARD

BAND SELECTION – Slide switches as shown.

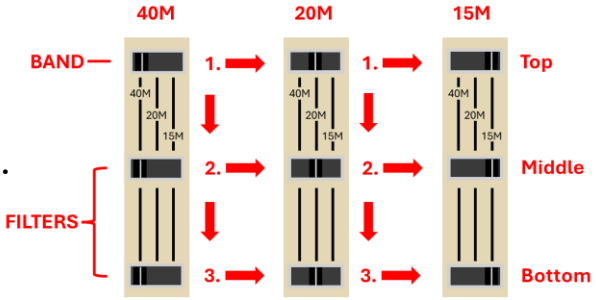

FREQUENCY SELECTION – Use TUNE Up [▲] / TUNE Down [▼] buttons.

DIRECT FREQUENCY ENTRY (DFE) – Press and hold [Fn] button until "DFE" is displayed. Use Keyer paddles to "enter" frequency.

FREQUENCY MEMORY – 1. Press and hold the [Fn] button until "F-MEM" is displayed. 2. Tap Tune Up / Tune Down buttons to select memory.

STORE: 3. Press "R/S" ([RIT]) to change from Load Memory "(LD)" to Store Memory "(SR)". 4. Tap the Enter "EN" ([Fn]) button to store the current frequency into Memory. 5. Tap "EN" ([Fn]) button to exit.

LOAD: 3. Tap "EN" ([Fn]) button. 4. Tap the "EN" ([Fn]) button to exit.

MESSAGE MEMORY – 1. Press and hold [Fn] button until the "K-MEM" is displayed.

STORE: 2. Tap "EM" ([Fn]) button to Enter Message mode. 3. Use Keyer paddles to enter message. 4. Tap "BS" ([▲]) to delete mistakes. 5. Tap "CK" ([Fn]) button to check message. 6. Tap "M0" ([Fn]), "M1" TUNE Down [▼], or "M2" TUNE Up [▲] buttons to store message in Message Memory 0, 1, or 2. 7. Tap "X" [RIT] button to exit.

RECALL: 2. Tap [RIT] button. 3. Press "M0" ([Fn]), "M1" [▼] , or "M2" [▲] buttons to recall memory. 4. Press "X" ([RIT]) button to exit. 5. Press Dash paddle to pause message. 6. Press Dot paddle to stop message.

BEACON – 1. Start sending a message. 2. Press and hold the "X" ([RIT]) button until "BEACON 2S" is displayed. 3. Press Dot Paddle to stop.

KEYER SPEED - 1. Press and hold [Fn] button until "CS" is displayed. 2. Tap TUNE Up [▲] or TUNE Down [▼] buttons to adjust speed. 3. Tap [Fn] button to exit.

TUNE MODE – 1. Press and hold the [Fn] button until “TUNE” is displayed. 2. Press the DOT Paddle to display Power and SWR. 3. Tap [Fn] button to exit.

STRAIGHT KEY - 1. Press and hold [Fn] button until “CS” is displayed. 2. Tap [RIT] button. 3. Tap [Fn] button to exit.

SET TIME - 1.Press and hold [RIT] button until “SET TIME” is displayed. 2. Use TUNE Up [▲] button to increment the 1’s digit of the minutes. 3. Use the TUNE Down [▼] button to increment the 10’s digit up to 5. 4. Tap the “E” ([Fn]) button to go to hours. 5. Use the TUNE Up [▲] button to increment the 1’s digit of the hours. 6. Use the TUNE Down [▼] button to increment the 10’s digit between 0, 1, and 2. 7. Tap “E” ([Fn]) to set the time and exit.

TOGGLE MFE - 1.Press and hold [RIT] button until “MFE” is displayed. 2. Press “TG” ([RIT]) button to toggle MFE ON or OFF. 3. Press “EN” ([Fn]) to exit.

See Operating Manual for more information.

