

Envoy™ Transceiver



No part of this manual may be reproduced, transcribed, translated into any language or transmitted in any form whatsoever without the prior written consent of Codan Limited.

© Copyright 2012 Codan Limited.

Codan part number 15-04177-EN Issue 1, December 2012.

CODAN™, Envoy™, *Easitalk*™, and CALM™ are trademarks of Codan Limited. Other brand, product, and company names mentioned in this document are trademarks or registered trademarks of their respective holders.

The English version takes precedence over any translated versions.

Table of contents

Section 1	Introduction	
	Overview of this guide	2
	The 2220 Handset	3
	The 2221 Handset	5
	The 2230 Desk Console	7
	Keypad	8
	Accessing the CD	11
	Standards and icons	12
Section 2	Using the wizard	
	Using the wizard	14
	Selecting a language	15
	Setting the time and date	15
	Setting the location of the desk console	16
	Adding a channel	17
	Entering a self address	19
	Adding a contact	20
	Selecting an antenna	23
	Selecting a peripheral device	24
Section 3	Navigating the menu structure	
	The basic menu structure	26
	Navigating the menu structure	28
	Overview of basic and advanced views	29
	Basic view	29
	Advanced view	29

Switching between basic and advanced views	31
Finding a word or value	32
Selecting an icon	35
Selecting a function from the menu bar	36
Entering text in a field	38
Entering special characters	40
Entering text in the 2221 Handset	41
Selecting a value from a list	42
Selecting/deselecting a check box	43
Moving a slider	44
Changing the order of items in a list	45
Saving your changes	46

Section 4 Operating the transceiver

Switching the transceiver on and off	48
Switching on the transceiver	48
Switching off the transceiver	48
The channel screen	49
Selecting a channel	51
Scanning channels	52
Switching scanning on or off	52
Pausing scanning	53
Muting the transceiver	54
Switching mute on or off	54
Selecting the mute type	55
Using the microphone	56
Setting the date and time	57
Calling	59
Making a Selective call	60
Making a Message call	61
Making a call to a contact	64
Making a call from the Call History	65
Making a call from the Emergency key	66
Upgrading the transceiver via a USB stick	67

Section 5 Contacts

Adding a contact	70
Adding a simple call	71
Adding a Message call	71

Adding a Phone call	72
Adding a Get Status call	73
Adding an RFDS Emergency call	73
Completing the contact	74
Adding a contact from an entry in the Call Log or Call History	75

Section 6 Specifications

Appendix A Installing the transceiver

Overview of mobile stations	80
Cables in a mobile station	82
Mounting a mobile Envoy™ station	82
Connecting a mobile Envoy™ station	84
Overview of fixed stations	86
Cables in a fixed station	88
Mounting a fixed Envoy™ station	88
Connecting a fixed Envoy™ station	89

Appendix B Compliance

Overview	92
European R&TTE Directive	93
Product marking and labelling	93
Radiation safety (EU installations only)	93
Declaration of Conformity and Notified Body Letter of Opinion	94
Protection of the radio spectrum	94
EMC and safety notices	96
Radiation safety (non-EU installations)	96
EMC	97
Electrical safety	97
Earth symbols	98
RCM approval	99

Index

This page has been left blank intentionally.

List of figures

Figure 1:	2220 Handset	3
Figure 2:	2221 Handset	5
Figure 3:	2230 Desk Console	7
Figure 4:	Wizard Startup screen	14
Figure 5:	Typical menu screen	26
Figure 6:	Menu structure (user level, basic view)	27
Figure 7:	Basic view (no advanced view indicator)	29
Figure 8:	Advanced view	30
Figure 9:	Find function	33
Figure 10:	Highlighted icon	35
Figure 11:	Functions on the menu bar	36
Figure 12:	Example of an editable text field	38
Figure 13:	List of entries, with and without focus	42
Figure 14:	Entry with a check box	43
Figure 15:	A slider value	44
Figure 16:	Screen that has changes to be saved	46
Figure 17:	Channel screen	49
Figure 18:	Scanning screen	50
Figure 19:	Call screen	59
Figure 20:	Call Log and Call History	75
Figure 21:	Typical mobile station	81
Figure 22:	Typical fixed station	87

This page has been left blank intentionally.

List of tables

Table 1:	Keys and their function	8
Table 2:	Character-entry mode	39
Table 3:	Specifications	77
Table 4:	Cables for a typical mobile Envoy™ station	82
Table 5:	Cables for a typical fixed Envoy™ station	88
Table 6:	Earth symbols	98

This page has been left blank intentionally.

1

Introduction

Congratulations on choosing a Codan Envoy™ Transceiver to meet your HF communications needs. You can expect many years of reliable high performance, and if ever assistance is required, Codan's world-class after-sales support team is ready to help. Please read this guide thoroughly and retain it for future reference. There is an index at the end of this guide to assist you in finding information.

Overview of this guide

This guide provides instructions on how to connect up your Envoy™ Transceiver, and how to perform basic setup and operating tasks. It assumes that you have limited knowledge of HF communication and of using an HF transceiver.

Detailed information for setting up a particular system and extensive reference material are provided on the CD at the back of this guide.

This guide contains the following sections:

Using the wizard—describes the steps in the wizard that are used to set up the transceiver

Navigating the menu structure—describes how to navigate the menu structure and perform basic selection and editing functions

Operating the transceiver—describes how to operate the transceiver and how to make calls

Adding a contact—describes how to add a contact

Specifications—provides a list of specifications for the transceiver


Installing the transceiver—describes how to mount and connect the transceiver in mobile and fixed stations

Compliance—provides mandatory compliance information

The 2220 Handset

The 2220 Handset is a control point for the Envoy™ Transceiver. The user interface provides an icon-based menu structure for easy setup and operation of the transceiver.

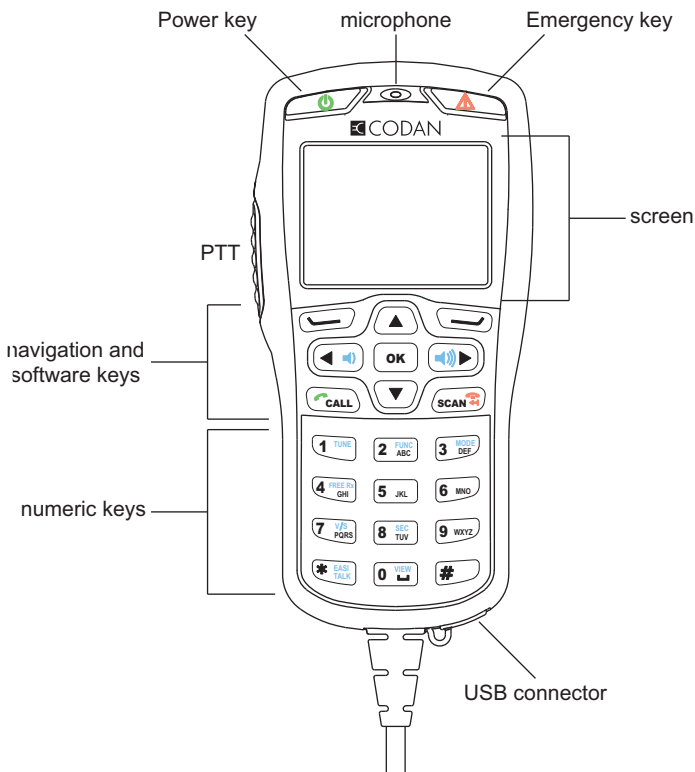Figure 1: 2220 Handset



The 2220 Handset is a hand-held device that has a microphone, a PTT button, a screen, navigation keys, and numeric keys. The keypad enables you to control and configure the transceiver system via the user interface. The handset and an external speaker connect to the RF unit via a special interface cable.

The 2220 Handset is shipped from the factory with standard hot keys programmed to the numeric keys. The function that each standard hot key performs is written on the numeric key in blue text. You may also add your own macros and assign these to a hot key.


Related links:

[*Keypad*](#)

The 2221 Handset

The 2221 Handset is a control point for the Envoy™ Transceiver. The user interface provides an icon-based menu structure for easy operation of the transceiver. It has a condensed set of keys for use in simpler communication scenarios.

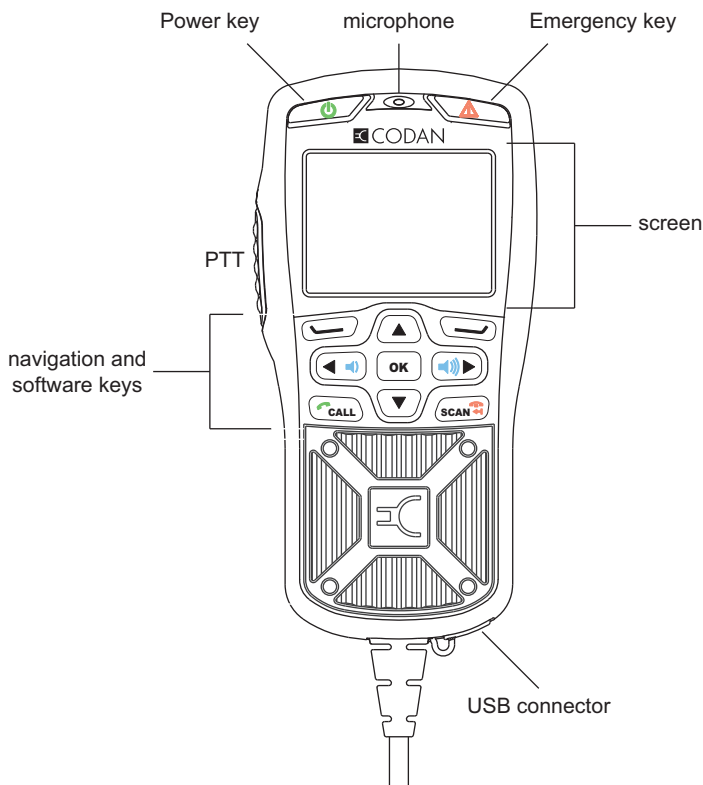Figure 2: 2221 Handset



The 2221 Handset is a hand-held device that has a microphone, a PTT button, a screen, and navigation keys. The navigation keys enable you to operate the transceiver system via the user interface using pre-defined profile information. Typically, this profile is fully configured using the TPS system programmer. The handset and an external speaker connect to the RF unit via a special interface cable.


Related links:

[*Keypad*](#)

The 2230 Desk Console

The 2230 Desk Console is a control point for the Envoy™ Transceiver. The user interface provides an icon-based menu structure for easy setup and operation of the transceiver. The desk console is an optional accessory for a fixed station.

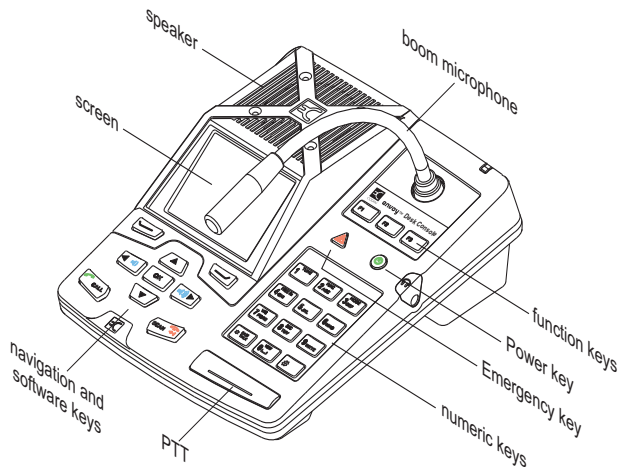Figure 3: 2230 Desk Console



The 2230 Desk Console has a boom microphone, a built-in speaker, a PTT button, a screen, navigation keys, function keys, and numeric keys. The console also supports the use of headphones and a foot-switched PTT device. The keypad enables you to control and configure the transceiver system via the user interface.

The 2230 Desk Console is shipped from the factory with standard hot keys programmed to the numeric keys. The function that each standard hot key performs is written on the numeric key in blue text.

Related links:

[Keypad](#)

Keypad

Standard macros are programmed in the transceiver in the factory. You can create a macro and assign it to a hot key.

Table 1: Keys and their function














Key	Function
	Switches on the transceiver. Switches off the transceiver (<i>hold</i> for 2 sec). Performs a hot-key sequence with another key (<i>hold</i> + key):  + 0 jumps to the Brightness screen  + 2 toggles advanced view  + 3 jumps to the Select Language screen  + SEC performs secure erase  + # performs the built-in test
	Starts a chain call of emergency contacts (<i>hold</i> for 2 sec).
PTT	Press-to-talk. Cancels out of editing and calls before they are connected.
	Performs the function shown directly above the key in the menu bar.
	Scrolls left in a list of values. Moves the cursor/highlight to the left. Reduces the volume when the  indicator is shown in the menu bar.
	Scrolls right in a list of values. Moves the cursor/highlight to the right. Increases the volume when the  indicator is shown in the menu bar.
	Scrolls up in a list of entries. Moves the highlight up a row.

Table 1: Keys and their function (cont.)

Key	Function
▼	Scrolls down in a list of entries. Moves the highlight down a row.
OK	Enters the submenu or list of entries represented by the selected icon. Toggles the selection of a check box.
CALL	Starts the calling process by jumping to the call screen. Jumps to Contacts/Call History/Emergency Contacts/Last Heard Log.
SCAN ←	Toggles scanning on and off. Ends a call.
1 TUNE	Enters 1 in character-entry mode. Tunes the antenna.
2 FUNC	Enters 2, a, b, c, A, B, C in character-entry mode. Clarifies the currently selected channel.
3 MODE	Enters 3, d, e, f, D, E, F in character-entry mode. Selects the next allowed mode for the current channel.
4 FREE Rx	Enters 4, g, h, i, G, H, I in character-entry mode. Accesses the free-tune receive function.
5	Enters 5, j, k, l, J, K, L in character-entry mode. Toggles the operating mode of a crosspatch, if connected. Shows the firmware version of a crosspatch, if connected (<i>hold</i> for 2 sec).
6	Enters 6, m, n, o, M, N, O in character-entry mode.
7 V/S	Enters 7, p, q, r, s, P, Q, R, S in character-entry mode. Toggles the type of mute selected.

Table 1: Keys and their function (cont.)

Key	Function
8 SEC	Enters 8, t, u, v, T, U, V in character-entry mode. Toggles secure mode on and off. Enables you to enter a PIN for a secure session, or access secure information (<i>hold</i> for 2 sec).
9	Enters 9, w, x, y, W, X, Y in character-entry mode.
0 VIEW	Enters 0 or a space in character-entry mode. Toggles between the channel screen and Contacts/Call History.
* EASITALK	Enters a special character (repeated press, or <i>hold</i> for 2 sec). Toggles <i>Easitalk</i> TM on or off.
#	Toggles character-entry mode.

Accessing the CD

To access the CD:

- Place the CD in the CD drive of your computer.

You can view and search the Reference Manual and Getting Started Guide using the Adobe® Reader® supplied on the CD.

Standards and icons

The following standards and icons are used:

This typeface...	Means...
<i>Italic</i>	a cross-reference or text requiring emphasis
Bold	a key on a computer keyboard
Bold	a menu, submenu, tab, entry, or value in the user interface of the control point

2

Using the wizard


This section contains the following topics:

- *Using the wizard* on page 14
- *Selecting a language* on page 15
- *Setting the time and date* on page 15
- *Setting the location of the desk console* on page 16
- *Adding a channel* on page 17
- *Entering a self address* on page 19
- *Adding a contact* on page 20
- *Selecting an antenna* on page 23
- *Selecting a peripheral device* on page 24

Using the wizard

The wizard should start automatically when a new transceiver is powered up for the first time.

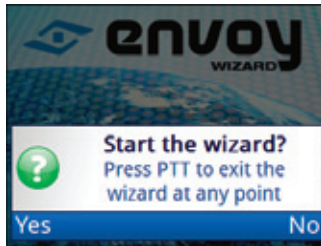Figure 4: Wizard Startup screen






NOTE: If the wizard screen doesn't launch automatically, follow the instructions below. If your transceiver has been profiled using TPS, the wizard may not be available.



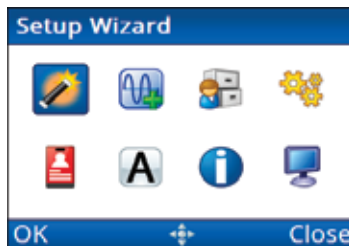NOTE: For information on specific entries in the wizard, please refer to the Reference Manual.

To use the wizard:

- Press PTT then  (**Menu**) to return to the top level of the menu structure.







- Check that the icon for the wizard is highlighted () , then press  (**OK**).

- Press  (**Yes**) to confirm that you want to start the wizard.
- If you want to bypass the wizard, press  (**No**).

Selecting a language














NOTE: This step in the wizard is shown if you have multiple languages available.

To select a language:

- Press  or  to scroll to the language that you want to use on the control point, then press  (**Select**).
- Press  (**Yes**) to confirm that you want to change to the selected language.

Setting the time and date

To set the time and date:

- Press  or  to select the time zone that you want to use.
- Press  to move to the **Daylight Saving** entry.
- Press  or  to select the time that you want to use.
- Press  to move to the **Local Time** entry.
- Press  to enter edit mode for the local time.
- Press  or  to scroll to the value that you want to set, then press  to move to the next item.
- Repeat this for minutes, seconds and AM/PM values.
- Press  (**Save**) to save the local time.
- Press  to move to the **Local Date** entry.
- Press  to enter edit mode for the local date.

- Press ▲ or ▼ to scroll to the value that you want to set, then press ► to move to the next item.
 - Repeat this for the day/month and year, as required.
 - Press ⏪ (**Save**) to save the local date.
 - Press ▼ to move to the **Clock** entry.
 - Press ◀ or ▶ to select the type of clock that you want to use.
 - Press ▼ to move to the **Time Format** entry.
 - Press ◀ or ▶ to select the format that you want to use.
 - Press ▼ to move to the **Date Format** entry.
 - Press ◀ or ▶ to select the format that you want to use.
 - If you want to review the information that you have entered, press ▲ or ▼ to move through the entries.
 - Press ⏪ (**Save**) to save the information.
- If you have not changed any of the time and date information, press ⏩ (**Close**).

Setting the location of the desk console

NOTE: This step in the wizard is shown if your control point is a desk console.














To set the location of the desk console:



- Press ◀ or ▶ to scroll through the following values:
 - If the desk console is connected directly to the transceiver, select **Local**.
 - If the desk console is connected to the transceiver remotely, select **Remote**.
- Press ⏪ (**Save**) to save the location of the desk console.



Adding a channel

NOTE: This step in the wizard is shown if you are permitted to add channels.

To add a channel:

- Press  (**Yes**) to add a channel, if required.
- Enter the name that you want to use for the channel, then press  to move to the **Tx** entry.
- Enter the transmit frequency (in kHz) that you want to use for this channel, then press  to move to the **Rx** entry.
The **Rx** entry is automatically filled with the transmit frequency.
- Enter the receive frequency (in kHz), if required to be different from the Tx frequency, then press  to move to the Mode entry.
- To select a mode:
 - Press  to view the list of available modes.
 - Press  to scroll down through the list, and press **OK** to select the highlighted mode.
The check box contains a  when the mode is selected.
 - Press  (**Save**).
- If you want to review the information that you have entered, press  or  to move through the entries.
- Press  (**Save**) to save the information.
- Do *one* of the following:
 - If you want to add another channel, press  (**Yes**), then repeat these steps.
 - If you do not want to add another channel, press  (**No**).











- Do *one* of the following:
 - If you want to add a scan table, press  (**Yes**).
 - If you do not want to add a scan table, press  (**No**), then continue from *Entering a self address on page 19*.




- Do *one* of the following:
 - If you want to scan all of the channels in the transceiver that have a USB mode, press  (**Yes**), then continue from *Entering a self address on page 19*.
 - If you want to choose the channels and modes that you want to scan, press  (**No**), then continue from *Adding channels to a scan table on page 18*.

Adding channels to a scan table

When you are adding or editing a scan table, you may want to add extra scan channels to those already in the scan table. When you use the **Add Chan** option, you view a list of the channels in the transceiver that have not yet been added to the scan table that you are currently viewing.

To add channels to a scan table:

- From the main menu, select  (**User Data**), then  (**Scan Tables**).
- Press  to scroll to the scan table in which you want to add a channel, then press **OK**.
- Press  to move to the **Scan Channels** entry.
- Press  to view the list of channels that are already added to the scan table.
- Press  (**Options**), scroll to **Add Chan**, then press  (**Select**).
- Press  to scroll down through the list, then press **OK** to select the highlighted channel.
- Press  or  to select the mode that you want to use.

- Press  (**Options**), scroll to **Save**, then press  (**Select**).
- Press  (**Save**) to save the information.


Entering a self address

To enter a self address:



- Enter the address that you want to use.

You can enter up to six digits.

NOTE: Addresses ending in 99 and 00 have a special function in Selcall HF networks.


- Press  (**Save**) to save the information.

NOTE: The wizard automatically allocates this self address to the default HF networks: Selcall and CALM (if FED-STD-1045 ALE or MIL-STD-188-141B ALE option is installed).

- Do *one* of the following:
 - If you want to add a contact, press  (**Yes**), then continue from [Adding a contact on page 20](#).
 - If you do not want to add a contact, press  (**No**), then continue from [Selecting an antenna on page 23](#).

Adding a contact

To add a contact:

- Enter the name that you want to use for the contact, then press  (**Add Call**).
- The **HF Network** entry is highlighted.
- Press ◀ or ▶ to scroll through the available HF networks until the one you want to use is shown.
- Press ▼ to move to the **Call Type** entry.
- Press ◀ or ▶ to scroll through the available call types until the one you want to use is shown.

NOTE: The call type that you select affects information that you can enter for the remainder of this call.

- If you are adding:
 - a Selective, Channel Test, Emergency, Get Position or Send Position call, continue from [Adding a simple call on page 20](#)
 - a Message call, continue from [Adding a Message call on page 21](#)
 - a Phone call, continue from [Adding a Phone call on page 22](#)
 - a Get Status call, continue from [Adding a Get Status call on page 22](#)

Adding a simple call





To continue with adding a Selective, Channel Test, Emergency, Get Position or Send Position call:





- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Continue from [Completing the contact on page 22](#).

Adding a Message call

To continue with adding a Message call:

- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Press ▼ to move to the **Message** entry, then press ►.
- If you want to enter a message:
 - Start typing the message.

NOTE: Press **OK** to start a new line, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**) to add the message to the call.
- If you want to select a message from a list of stored messages:
 - Press  (**Options**), scroll to **Stored**, then press  (**Select**).
 - Press ▲ or ▼ to scroll to the message that you want to use.

NOTE: If you want to view the message, press  (**Details**), then press  (**Close**).
 - Press **OK** to select the message.
 - Edit the message, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**).
- Continue from [Completing the contact on page 22](#).

Adding a Phone call

To continue with adding a Phone call:

- Press ▼ to move to the **Phone Number** entry.
- Enter the phone number.
- Continue from [Completing the contact on page 22](#).

Adding a Get Status call



To continue with adding a Get Status call:

- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Press ▼ to move to the **Status Type** entry, then press ►.
- Press ▲ or ▼ to scroll to the status type that you want to use, then press **OK**.
- If you selected **?: Other** as the status type, enter the text/command that you want to send, press ⏏ (**Options**), scroll to **Save**, then press ⏏ (**Select**).
- Continue from [Completing the contact on page 22](#).

Completing the contact





To finish entering the information required for the contact:



- Press ▼ to move to the **Call Description** entry.
By default, the call type is entered as the call description.
- Enter the description that you want to use for this call.
- Press ⏏ (**Save**) to save the information.
- If you want to add another call for the contact, press ⏏ (**Yes**), then repeat the steps for adding a call.
If you do not want to add another call, press ⏏ (**No**).

- If you want to add another contact, press  (**Yes**), then repeat the steps for adding a contact.
- If you do not want to add another contact, press  (**No**).
- Do *one* of the following:
 - If you want to select an antenna, continue from [Selecting an antenna on page 23](#)
 - If you do not want to select an antenna, continue from [Selecting a peripheral device on page 24](#)

Selecting an antenna



To select an antenna:




- Do *one* of the following:
 - Press  or  to scroll to the antenna type that you want to use, then press **OK**.
 - Press  (**Close**), then continue from [Selecting a peripheral device on page 24](#).
- Press  (**Save**) to save the information.

- Do *one* of the following:
 - If you want to connect accessories to the 15-way port of the RF unit, press  (**Yes**), then continue from [Selecting a peripheral device on page 24](#).
 - If you do not want to connect an accessory, press  (**No**), then press **OK** to close the wizard.

Selecting a peripheral device

To select a peripheral device:

- Press  or  to scroll to the type of peripheral device that is attached to the connector, then press **OK**.

If there are settings that you can change to optimise this peripheral for your requirements,  is shown to the right of the peripheral name when it is selected.
- If you want to change settings for the peripheral, press  to see the list of entries that you may change.
- Press  (**Save**) to automatically update settings for correct operation of the connected peripheral device.
- Press **OK** to close the wizard.
- If you added a peripheral device, restart your transceiver to activate the new settings.

3

Navigating the menu structure


This section contains the following topics:

- *The basic menu structure on page 26*
- *Navigating the menu structure on page 28*
- *Overview of basic and advanced views on page 29*
- *Switching between basic and advanced views on page 31*
- *Finding a word or value on page 32*
- *Selecting an icon on page 35*
- *Selecting a function from the menu bar on page 36*
- *Entering text in a field on page 38*
- *Selecting a value from a list on page 42*
- *Selecting/deselecting a check box on page 43*
- *Moving a slider on page 44*
- *Changing the order of items in a list on page 45*
- *Saving your changes on page 46*

The basic menu structure

The menu structure comprises a main menu and a series of submenus that are accessed via the main menu. Each menu and submenu is represented by an icon. Some icons provide direct access to an input/view screen, while other icons provide a list of entries for the menu.

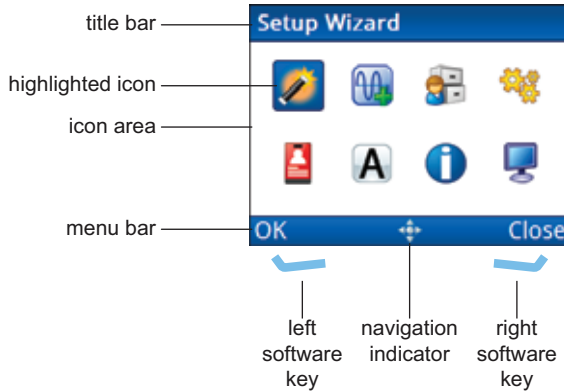Figure 5: Typical menu screen




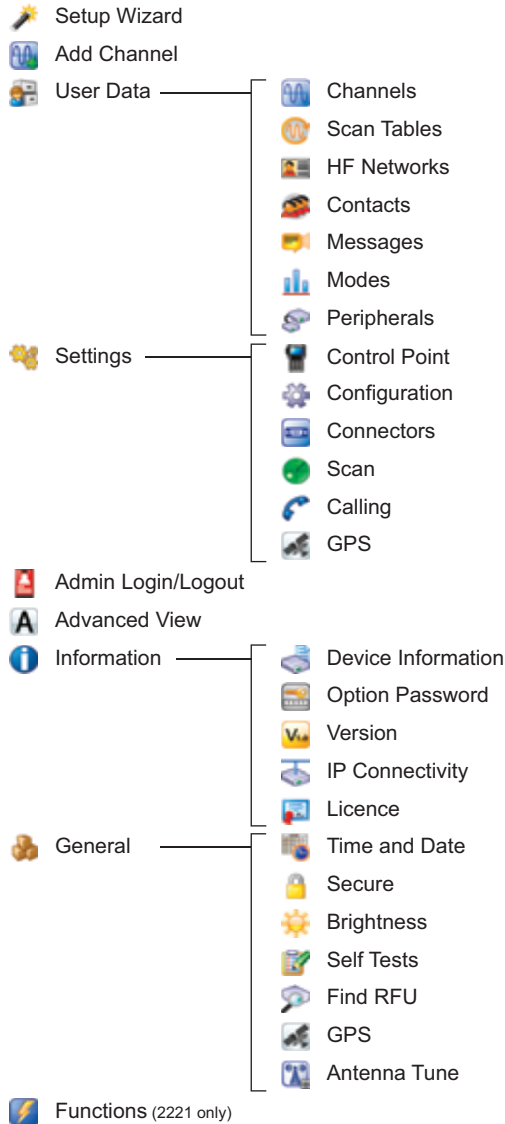
When an icon is highlighted, the name of the icon is shown in the title bar of the screen. For example, when the  icon is highlighted, **Setup Wizard** is shown in the title bar.

Figure 6: Menu structure (user level, basic view)





The menu items may contain further submenus and lists of entries. Each entry either has specific values from which you may choose, or you may enter the information required.

Navigating the menu structure

The menu structure comprises a main menu and a series of submenus that are accessed via the main menu. Navigation keys enable you to highlight an icon, then press **OK** to select that menu. You can continue drilling down through the menu structure in this way. At the lowest level of the menu structure there is either an input/view screen, or a list of entries.

To navigate the menu structure:

- To move down through the menu structure:
 - Press ◀, ▶, ▲ or ▼ to highlight the icon that you want to select.
The name of the icon appears in the title bar of the screen.
 - Press **OK**.
 - Continue moving down through the menu structure by highlighting the icon you want, then pressing **OK**.
- To move through a list of entries at the lowest level of the menu structure, press ▲ or ▼.
- To go to the top level in the menu structure, do *one* of the following:
 - Press PTT to exit to the channel screen, then press  (**Menu**) to enter the top level of the menu structure.
 - Press  to return to the top level of the menu structure, one level at a time.

Overview of basic and advanced views

There are two views of information in the user interface of the control point: basic and advanced. The contents of basic and advanced views are pre-determined and cannot be changed.

Basic view

Basic view provides a condensed view of the user interface, and typically the view at which the control point is operated. When you power up the transceiver, the control point enters basic view. Basic view is indicated by the absence of an advanced view indicator in the menu bar.

Figure 7: Basic view (no advanced view indicator)




Basic view provides access to items that are likely to be changed on a regular basis, or the user may want to change to suit their preferences for the day-to-day operation of the transceiver. The user can switch to advanced view to access items that they may want to change occasionally. The user should switch back to basic view to simplify the view of information presented on the screen of the control point.

Advanced view

Advanced view provides access to additional settings that may need to be changed occasionally, but are not required in the day-to-day operation of the transceiver. Generally, the control point of the transceiver is in basic view so you must switch to advanced view. Advanced view is indicated by the presence of the advanced view indicator in the menu bar.

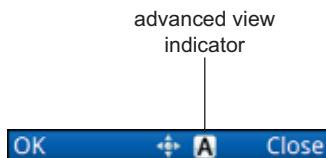Figure 8: Advanced view





Switching between basic and advanced views


The user can switch between basic and advanced views to either:


- simplify the user interface of the control point (basic view), or
- access advanced settings that they are permitted to change (advanced view)

To switch between views:


- Press  until the main menu screen is shown.
- From the main menu, select **A (Advanced View)**.



- Press **OK** to toggle advanced view on or off as required.
- Press  (**Save**).


NOTE: You can also use the  + **2** hot-key sequence.

Finding a word or value


The quickest way to find an entry or a value in the user interface of the control point is to use the Find function, which is available via the  key when the icon selected contains submenus or lists of entries. The feature searches for the sequence of characters (letter, numbers, or a combination of both) that you enter.

NOTE: The Find function only searches on words and values that are visible to the operator at the current view and level of access.

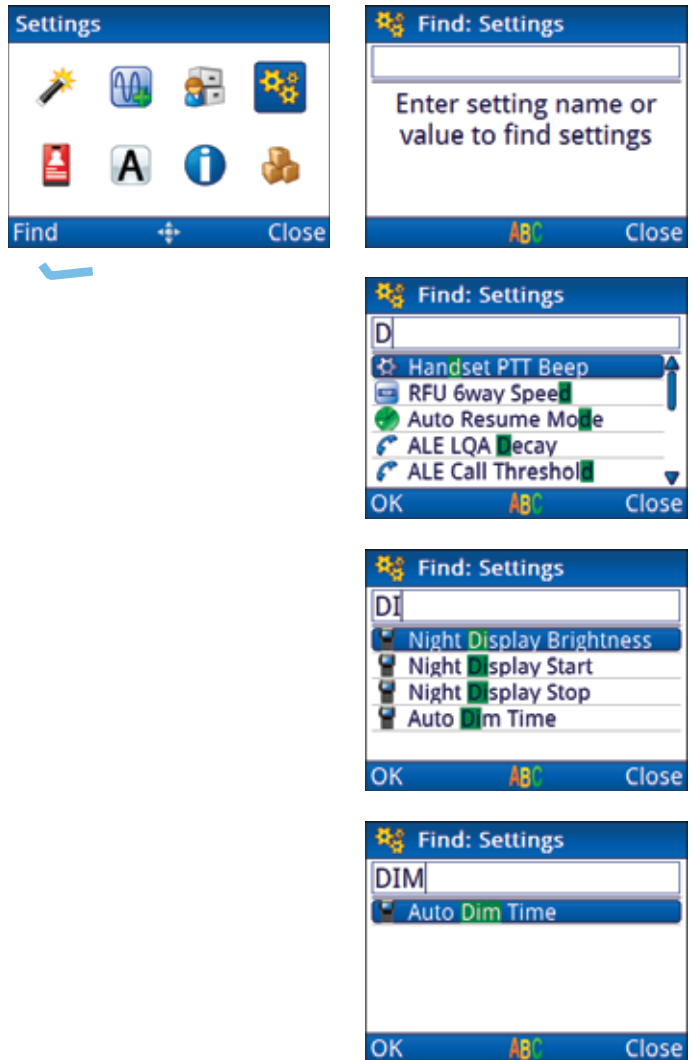Figure 9: Find function





To find a word or value:

- Highlight the icon that represents the highest level in which you want to search, then press  (**Find**).
- Start entering the letter and/or number on which you want to search.

Any entries or values that contain the character you have entered are shown in a list, with the character highlighted.

NOTE: You may have to scroll through the list to view all of the results.

- Enter more characters to refine your search.
- Scroll to the entry or value that you want to select.

You may need to use the corresponding icon to provide context to the text. For example, if you enter **2** for a search within the **User Data** menu, you may have a result for 2 in an HF network () and in a contact ()

- Press **OK**.
You are taken to the entry or the name level of the user data containing the character.


Selecting an icon


The top levels of the menu structure are represented by icons. In order to enter the menu represented by the icon, you need to select the icon.

Figure 10: Highlighted icon



To select an icon:

- Use ◀, ▶, ▲ and ▼ to highlight the icon that you want to select.
- Press **OK** or  to select the icon.

In this instance, the  key corresponds to **OK** in the menu bar.

Selecting a function from the menu bar



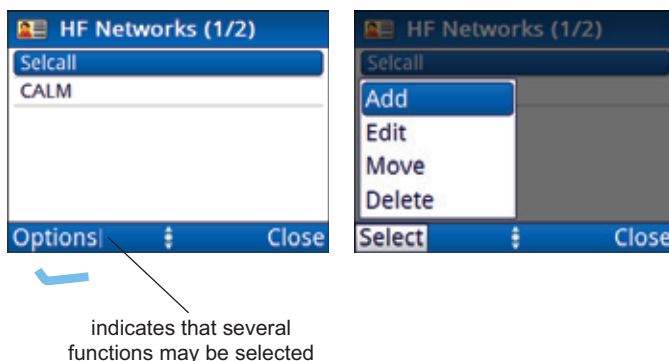


The menu bar at the bottom of the screen provides varying functions, depending on the context. You can select a function directly, or activate a pop-up from the menu bar by pressing the corresponding key ( or ). A vertical line next to the text indicates that there are a number of choices from which to choose. Typically, you can add, edit, move, delete, save, duplicate, and clear items specific to your current location in the user interface.

Figure 11: Functions on the menu bar



To select a function from the menu bar:

- Press  or , corresponding to the function that you want to select.

If the function in the menu bar does not have a vertical line next to it, the function is performed immediately.


If the function in the menu bar has a vertical line next to it, a pop-up is shown.

- If a pop-up of available functions is shown:
 - Press ▲ or ▼ until the function that you want to select is highlighted.
 - Press **OK**.
The function is performed.

Entering text in a field

You may need to enter text into a field within an entry. This may be a name given to some user data, or it may be a specific value, such as a frequency. When you first enter an editable text field, either by selecting a menu or using the ▲ and ▼ navigation keys, any existing text that you can edit is highlighted. You can use this text, edit this text, or delete this text and enter new text.

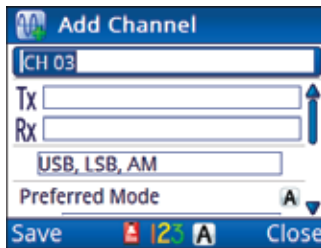Figure 12: Example of an editable text field



To enter text in a field:

- Navigate to a field in which you can edit text.
- Do *one* of the following:
 - To use this text, press ▼.
 - To delete this text, start entering new text.
 - To edit this text, press ► to place the cursor at the end of the text.
- Press # repeatedly to select the character-entry mode that you want to use.

The indicator for the character-entry mode is shown in the centre of the menu bar.

Table 2: Character-entry mode

Character-entry mode	Icon
All upper-case letters	ABC
All lower-case letters	abc
Leading-capital letters	Abc
Numbers	123

- Do any of the following:
 - Press ◀ or ▶ to move the cursor to the point at which you want to enter text.
 - Press ← to delete text to the left of the cursor.
 - *Hold* ← to delete the whole entry.
 - Press the key on the keypad that corresponds to the letter that you want to enter.
For example, if you want to enter the letter E, press **3** twice.
After a brief pause, the cursor moves to the next space, ready to enter another character.

NOTE: If you are in a letter-entry mode and want to enter a number, *hold* the key corresponding to the number that you want to enter.
- Press ▼ to move to the next field.

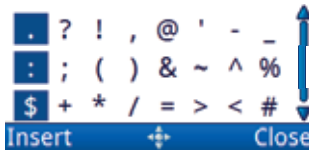
Entering special characters


You can enter special characters in messages and names, and in addresses of stations that you call.

NOTE: If the FED-STD-1045 ALE/CALM option or MIL-STD-188-141B ALE option is installed in your transceiver, the * key may be used to enter the global ALL address syntax (@?@) or special ALE addressing characters easily.

To enter a special character:

- To enter a special character in a text field:
 - Press ◀ or ▶ to move the cursor to the point where you want to insert a special character.
 - Press * to cycle through the available choices or *hold* * to see the available special characters.
- Depending on the context, you can select from:



- Press ▲, ▼, ◀ or ▶ to highlight the character that you want to use, then press  (Insert).
- Repeat as required.


Entering text in the 2221 Handset

The 2221 Handset does not have alphanumeric keys, however, you can still enter text into fields within the user interface.

To enter text:

- Navigate to a field in which you can enter text, then press **OK** to see the virtual keypad.




- Press ◀, ▶, ▲ or ▼ to move the highlight to the character that you want to select, then press **OK**.
- Continue entering text in this manner.
- Press  (**Save**) to save the information.

Selecting a value from a list

When you select an entry that has a list of values, either by selecting an icon or using the ▲ and ▼ navigation keys, the field is highlighted to show that it can be edited, and ◀/▶ indicators appear on one or both sides of the field to show that values are available.

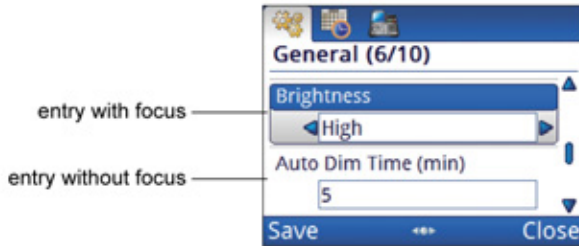
Figure 13: List of entries, with and without focus



To select a value from a list:


- Navigate to an entry in which you can select a value.
- Press ◀ or ▶ to scroll through the list of values available.
- Press ▼ to select the value and move to the next entry.

Selecting/deselecting a check box


There are some entries in the menu structure that require you to enable or disable a particular feature via a check box. When the check box contains a , the feature is enabled. If the check box is clear, the feature is disabled.

For example, when adding an HF network, you must select whether the HF network can be used for all channels programmed into the transceiver (Global), or only those channels allocated via the scan tables for the HF network.

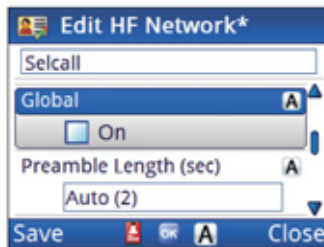Figure 14: Entry with a check box




To select or deselect a check box:

- Highlight the entry.
- Press **OK** to toggle the check box as selected or deselected.
- Press **▲** and **▼** to continue making other changes as required.
- Press  (**Save**).

Moving a slider

Some values in the user interface of the control point are represented by a slider.

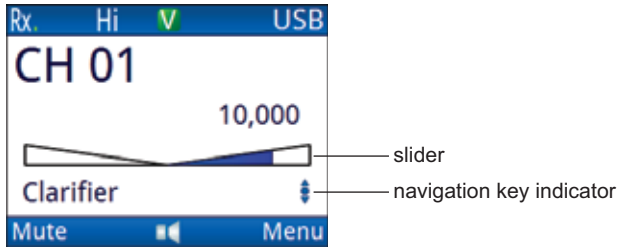Figure 15: A slider value








To move a slider:

- Press any of the navigation keys suggested in the navigation key indicator to adjust the slider.

Changing the order of items in a list

In some areas of the control point, you are able to change the order in which the items appear, which impacts how the item is viewed, or when each item may be used. For example, you may change the order in which the channels, scan tables, HF networks, contacts, phone links, and NETs are listed so that you don't have to scroll to the item to select it. In areas where the order is important, such as NET members, you can move the items into the preferred response order.

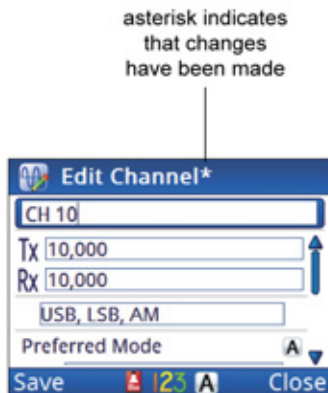
To change the order of items in a list:

- Highlight the item that you want to move.
- Press  (**Options**), scroll to **Move**, then press  (**Select**).
- Press  or  to move the item to the new position in the list, then press  (**Place**).





Saving your changes

When information in an entry has been changed, either by editing existing text or selecting a different value from a list, an asterisk is added to the title of the screen.

Figure 16: Screen that has changes to be saved



To save changes:

- Do *one* of the following:
 - Press  (**Save**).
 - Press  (**Options**), scroll to **Save**, then press  (**Select**).
 - Press  (**Close**) to discard the changes.

4

Operating the transceiver

This section contains the following topics:

- *Switching the transceiver on and off* on page 48
- *The channel screen* on page 49
- *Scanning channels* on page 52
- *Muting the transceiver* on page 54
- *Using the microphone* on page 56
- *Setting the date and time* on page 57
- *Calling* on page 59
- *Upgrading the transceiver via a USB stick* on page 67

Switching the transceiver on and off

Switching on the transceiver

To switch on the transceiver:

- Press .

The template screen, then the welcome screen (if set) is shown briefly, followed by the channel screen.

Switching off the transceiver

To switch off the transceiver:

- *Hold down*  for 2 sec, then release.


The transceiver is switched off.

The channel screen

The channel screen shows the following information:


- the name of the currently selected channel
- the transmit and receive frequencies, if applicable
- a bar graph that indicates the signal strength on receive (green) and the output power on transmit (red)
- the transmit power level setting
- the call type icon (when calling)
- the mute type indicator
- the mode

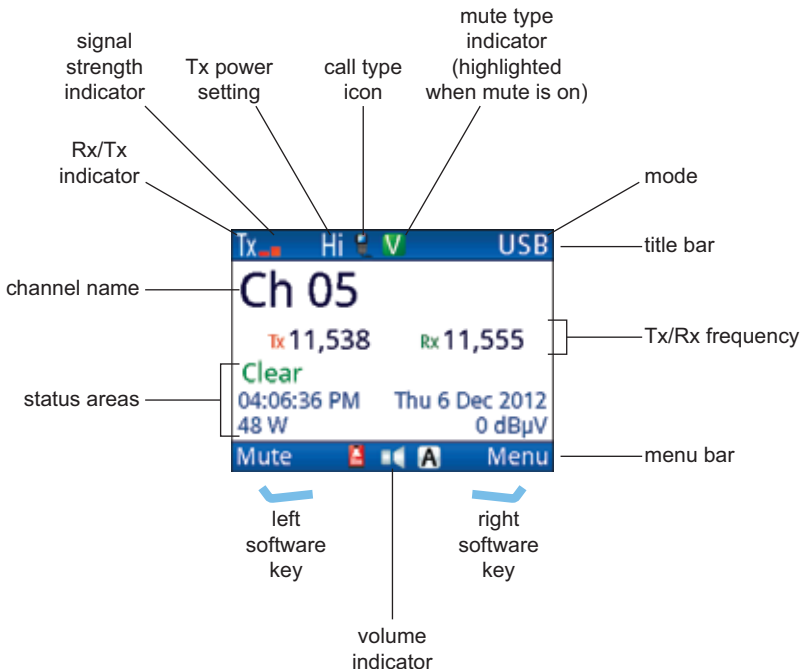Figure 17: Channel screen




If the transmit and receive frequencies are the same, the frequency is only shown on the right side of the screen. The Rx/Tx indicator shows whether the transceiver is receiving (green) or transmitting (red). The more bars that are shown, the higher the signal strength.

Your transceiver may have the option of selecting high, medium, or low power. **Hi**, **Med**, or **Lo** is shown respectively to the right of the signal strength indicator.

While a call is being established, the transceiver shows that calling activity is in progress by flashing  in place of the scan indicator. Once a call is established, these indicators are replaced with an icon that represents the type of call being sent or received.

When the transceiver is scanning, the channel screen is replaced by the scanning screen.

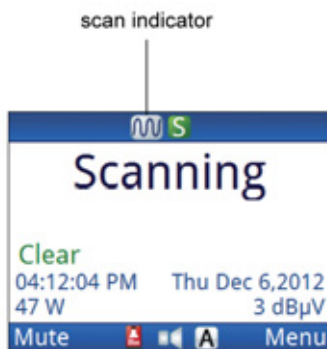
Figure 18: Scanning screen



Selecting a channel

To select a channel:

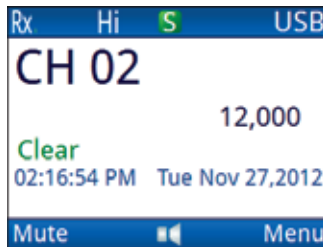- Press PTT to exit to the channel or scanning screen.
- If the transceiver is scanning, press **SCAN** to switch off scanning.



- Press ▲ or ▼ to scroll through the channels.
- Stop scrolling when the channel that you want is shown on the screen.

The channel is selected.

NOTE: If you want to change the sideband, press **MODE**. If the mode does not change there is only one mode for the channel.

NOTE: If you have an automatic antenna tuner fitted, press PTT to tune the antenna to the currently selected channel.

- Do any of the following:
 - Hold **OK** to edit the channel, if permitted.
 - Press **OK** to search for a channel.
 - Press **CALL** to start a call.
 - Hold **CALL** to go to Contacts.

Scanning channels

If you intend to receive calls on several channel/modes, switch on scanning. When scanning is switched on, the transceiver sequentially selects each channel/mode in your HF network to detect incoming calls. The channel/modes are scanned in a continuous cycle. Mute is switched on automatically.

When the transceiver detects a call addressed to your station, it stops scanning and notifies you according to the type of call received. When you press **SCAN** to end the call, scanning resumes. If you do not press this key to end the call, or any other key within a pre-determined timeout, the transceiver automatically ends the call and resumes scanning.

When the transceiver detects voice, it notifies you according to the mute setting selected. If your transceiver is set to notify you when voice is detected, you can pause scanning, select the channel/mode on which the voice was heard, then resume scanning when required.

It is recommended that scanning is switched on when you are not using the transceiver to communicate.

Switching scanning on or off

To switch scanning on or off:

- Press **SCAN**.

If a call is not in progress, scanning is toggled on or off.

If a call is in progress, the call is ended and the transceiver begins scanning.

NOTE: When scanning is switched on, mute is also switched on.

NOTE: If you press PTT while the transceiver is scanning, the scan is stopped.

Pausing scanning

To pause scanning:

- Do *one* of the following:
 - To pause scanning on the last-selected channel, press **OK**.
 - To pause scanning and scroll to another channel, press **▲** or **▼**.

The channel/modes through which you can scroll are those in the scan tables that are being scanned. They are not listed alphabetically but in the order in which they are being scanned.

If you do not press a key within 30 sec, the transceiver automatically resumes scanning.

- While scanning is paused, do *one* of the following:
 - To speak on the selected channel, *hold down* PTT.
 - To resume scanning immediately, press **OK**.

Muting the transceiver


When the transceiver is set to a channel or is scanning channels, and mute is switched off, you hear on-air signals on each channel. If you do not want to listen to this, you can silence the transceiver by switching mute on.

Mute automatically comes on when the transceiver starts scanning. The transceiver listens for signals according to what is set in **Settings > Scan Mute**.

If the scan is paused due to voice being detected, the length of time that the transceiver holds the pause is set in **Settings > Scan Voice Max Pause** and **Scan Voice Extend**. Scanning only resumes automatically if the transceiver is set to start scanning after a timeout period.

Switching mute on or off

To switch mute on or off:

- Press  (**Mute**) on the channel, scanning or free-tune screens.

On the 2221, press  (**Options**), scroll to **Mute On|Off**, then press  (**Select**).

The **V** or **S** in the title bar of the channel screen is highlighted when mute is on.

Selecting the mute type

To select the mute type:

- Press **V/S** to toggle the mute type between Selcall mute (**S**) and Voice mute (**V**).

NOTE: If you have the AES-256 digital voice encryptor fitted, an additional mute type of Digital Voice Only mute (**D**) is available.

Using the microphone

The microphone is located at the top centre of your handset. When you talk into the microphone:

- hold the microphone side-on and close to your mouth
- *hold down* PTT
- speak clearly at your normal volume and rate
- use the word ‘over’ to indicate that you have finished speaking, then release PTT (the transceiver may be set up to transmit a short beep when you release PTT)

CAUTION: Your conversation can be monitored by anyone tuned to your transmit frequency. Your signal can potentially travel very large distances.




























If PTT is held continuously for a certain length of time, the system stops transmission, switches to receive and shows an error message on the control point. This ensures that, even if the PTT button is being held down accidentally, the battery will not be flattened, and your transceiver is ready to receive calls.


You can set the length of time the system waits before it cuts transmission (default is 10 min), or switch this feature off.

Setting the date and time

The transceiver is set to UTC time in the factory. You set the local time and time zone offset for the location of the control point. This feature is useful if you have a network that spreads over several time zones, or you need to time stamp your transmissions according to the current time at longitude zero.

To set the time and date:


- From the main menu, select  (**General**), then  (**Time and Date**).
- Press  (**Set**).
- Press  to move to the **Time Zone** entry.
- Press  or  to select the time zone that you want to use.
- Press  to move to the **Daylight Saving** entry.
- Press  or  to select the time that you want to use.
- Press  to move to the **Local Time** entry.
- Press  to enter edit mode for the local time.
- Press  or  to scroll to the value that you want to set, then press  to move to the next item.
- Repeat this for minutes, seconds and AM/PM values.
- Press  (**Save**) to save the local time.
- Press  to move to the **Local Date** entry.
- Press  to enter edit mode for the local date.
- Press  or  to scroll to the value that you want to set, then press  to move to the next item.
- Repeat this for the day/month and year, as required.
- Press  (**Save**) to save the local date.
- Press  to move to the **Clock** entry.
- Press  or  to select the type of clock that you want to use.
- Press  to move to the **Time Format** entry.
- Press  or  to select the format that you want to use.

- Press ▼ to move to the **Date Format** entry.
- Press ◀ or ▶ to select the format that you want to use.
- If you want to review the information that you have entered, press ▲ or ▼ to move through the entries.
- Press  (**Save**) to save the information.

Calling

This section describes how to make the various types of calls from the transceiver.

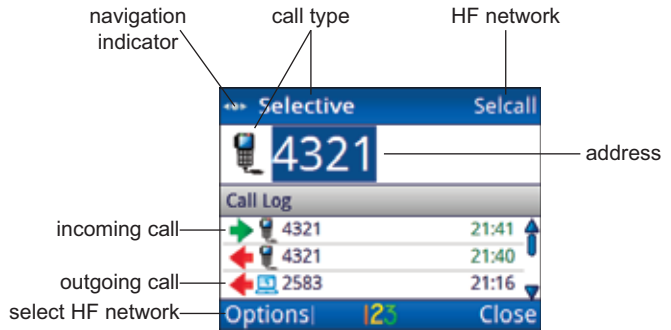Figure 19: Call screen





NOTE: Additional call types are discussed in the Reference Manual.

Making a Selective call

If you want to speak with the operator at a particular station, make a Selective call to the address of that station. When the station receives the call, the transceiver sounds an alert tone to notify the operator.

To make a selective call:

- Press **CALL**.
- Do *one* of the following:
 - Press ▲ or ▼ to scroll to the HF network that you want to use, then press **CALL**.
 - Press  (**Options**), scroll to **HF Networks**, press  (**Select**), scroll to the HF network that you want to use, then press **CALL**.


The call type and address of the last call is shown at the top of the call screen.



- Press ◀ or ▶ to scroll to the Selective call type if it is not selected.

-
- Do *one* of the following:
 - To repeat the call to the last address used, press **CALL**.
 - To call a different station, enter the address, then press **CALL**.
 - To repeat or return a call from the call log, press ▼ to scroll to the call, then press **CALL**.

 - If prompted, press ▲ or ▼ to scroll to the channel that you want to use.

A  is shown next to the currently selected channel/mode.

 - Press **CALL**.

To abort the call before it is answered, press PTT or **SCAN**.
There will be audible beeps or a pop-up message to indicate that the call has been successful.



Making a Message call

If you want to send a text message to another station, make a Message call.

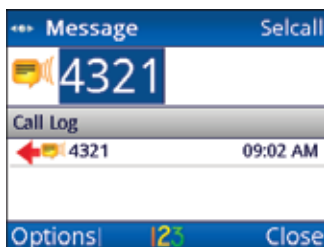
You can:

- enter a message at the time that you make a call
- store up to 10 messages in **User Data > Messages** for later use
- store messages in a contact as part of a pre-programmed Message call


To make a Message call:

- Press **CALL**.
- Do *one* of the following:
 - Press ▲ or ▼ to scroll to the HF network that you want to use, then press **CALL**.
 - Press  (**Options**), scroll to **HF Networks**, press  (**Select**), scroll to the HF network that you want to use, then press **CALL**.



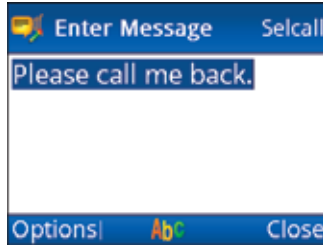The call type and address of the last call is shown at the top of the call screen.











- Press ◀ or ▶ to scroll to the Message call type if it is not selected.
- Do *one* of the following:
 - To repeat the call to the last address used, press **CALL**.
 - To call a different station, enter the address, then press **CALL**.
 - To repeat or return a call from the call log, press ▼ to scroll to the call, then press **CALL**.
- Press **CALL**.






- If you want to enter a message:
 - Start typing the message.

NOTE: Press **OK** to start a new line, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**) to add the message to the call.

- If you want to select a message from a list of stored messages:
 - Press  (**Options**), scroll to **Stored**, then press  (**Select**).
 - Press  or  to scroll to the message that you want to use.

NOTE: If you want to view the message, press  (**Details**), then press  (**Close**).
 - Press **OK** to select the message.
 - Edit the message, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**).

- If prompted, press  or  to scroll to the channel that you want to use.

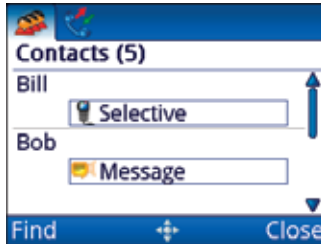
A  is shown next to the currently selected channel/mode.

- Press **CALL**.
To abort the call before it is answered, press PTT or **SCAN**.
There will be audible beeps or a pop-up message to indicate that the call has been successful.

Making a call to a contact

To make a call to a contact:

- *Hold* **CALL**.



- Press ▲ or ▼ to scroll to the contact who you want to call.
- If required, press ◀ or ▶ to scroll to the call that you want to make.
The call types that are available for the contact are set up in **User Data > Contacts**.
- Press **CALL**.
- If prompted, press ▲ or ▼ to scroll to the channel that you want to use.
A is shown next to the currently selected channel/mode.
- Press **CALL**.
To abort the call before it is answered, press PTT or **SCAN**.
There will be audible beeps or a pop-up message to indicate that the call has been successful.

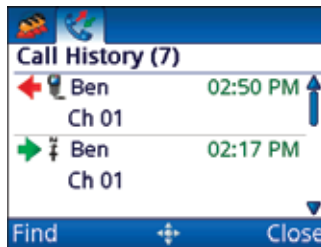
Making a call from the Call History



The Envoy™ Transceiver stores information on the calls that you send and receive. The detailed call history is accessed by *holding CALL*, then pressing ► to scroll to the **Call History** tab.

NOTE: A filtered call log is available in the call screen. This log contains only the latest instance of a call to a specific station.


To make a call from the Call History:

- *Hold CALL*.
- Press ► to scroll to the **Call History** tab.








- Press ▲ or ▼ to scroll to the call that you want to return or repeat, then press **CALL**.
- If you want to view the details of the call, press  (**Options**), scroll to **Details**, then press  (**Select**). Press **OK** to exit viewing the details.
- Press **CALL**.
- Press ◀ or ▶ to change the call type, if required.
- Continue from making your chosen call type.

Making a call from the Emergency key

You can set up emergency contacts with calls that are chained together when you *hold* the  key.

CAUTION: If you have more than one emergency contact, you will be prompted to select the emergency contact that you want to call at the time of the call.





To make a call from the  key:


- *Hold*  for 2 sec.
- If you have more than one emergency contact, scroll to the contact that you want to call, then press **CALL**.
- If prompted, press  or  to scroll to the channel that you want to use.
A  is shown next to the currently selected channel/mode.
- Press **CALL**.

Upgrading the transceiver via a USB stick

Firmware packages, profiles from TPS, and secure keys may be loaded onto a USB stick, providing a portable method of upgrading transceivers in the field. You can also read a profile from a transceiver in the field. When the USB stick is connected to the control point, a selection menu is shown for various activities, depending on the values set in **Settings > General > USB User Access**.

To manage profiles, firmware, and secure keys:

- Connect your USB stick to the control point using a standard USB A (female) to micro USB cable.
The USB stick is automatically detected.
- Press ▲ or ▼ to scroll to the one of the following activities:
 - If you want to program a profile from the USB stick to the transceiver, select **Program Profile**.
 - If you want to read the profile from the transceiver to the USB stick, select **Read Profile**.
 - If you want to upgrade the transceiver with a firmware package from the USB stick, select **Upgrade Firmware**.
 - If you want to program secure keys to a transceiver that has an encryptor module enabled, select **Program Secure Keys**.
- Do *one* of the following:
 - Press ▲ or ▼ to navigate to the firmware package, profile, or key set file, press  (**Options**), scroll to **Open**, then press  (**Select**).
 - Press ▲ or ▼ to navigate to the folder in which you want to save the profile from the transceiver, then press  (**Save**).
- Press  (**Yes**) to confirm that you want to complete the selected action.

- Perform more tasks with the USB stick as required.
- Press  (**Eject**) when you have finished working with the USB stick.

5

Contacts

This section contains the following topics:







- *Adding a contact on page 70*
- *Adding a contact from an entry in the Call Log or Call History on page 75*

Adding a contact

Contacts are used to pre-define the typical calls that you want to make to another person. For each contact you can define a number of calls. Each call contains information about:

- the call system that you want to use
- the type of call that you want to make to the contact
- the address or telephone number of the station at which this contact may be located

To add a contact:

- From the main menu, select  (**User Data**), then  (**Contacts**).
- Select  (**Contacts**) or  (**Emergency Contacts**), as required.
- Press  (**Add**).
- Enter the name that you want to use for the contact, then press  (**Add Call**).
The **HF Network** entry is highlighted.
- Press ◀ or ▶ to scroll through the available HF networks until the one you want to use is shown.
- Press ▼ to move to the **Call Type** entry.
- Press ◀ or ▶ to scroll through the available call types until the one you want to use is shown.

NOTE: The call type that you select affects information that you can enter for the remainder of this call.

- If you are adding:
 - a Selective, Channel Test, Emergency, Get Position or Send Position call, continue from [Adding a simple call on page 71](#)
 - a Message call, continue from [Adding a Message call on page 71](#)
 - a Phone call, continue from [Adding a Phone call on page 72](#)
 - a Get Status call, continue from [Adding a Get Status call on page 73](#)
- If you are adding an RFDS Emergency call, continue from [Adding an RFDS Emergency call on page 73](#).

Adding a simple call



To continue with adding a Selective, Channel Test, Emergency, Get Position or Send Position call:









- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Continue from [Completing the contact on page 74](#).

Adding a Message call

To continue with adding a Message call:

- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Press ▼ to move to the **Message** entry, then press ►.


- If you want to enter a message:
 - Start typing the message.
NOTE: Press **OK** to start a new line, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**) to add the message to the call.

- If you want to select a message from a list of stored messages:
 - Press  (**Options**), scroll to **Stored**, then press  (**Select**).
 - Press  or  to scroll to the message that you want to use.
NOTE: If you want to view the message, press  (**Details**), then press  (**Close**).
 - Press **OK** to select the message.
 - Edit the message, if required.
 - Press  (**Options**), scroll to **Save**, then press  (**Select**).

- Continue from *Completing the contact on page 74*.



Adding a Phone call

To continue with adding a Phone call:

- Press  to move to the **Phone Number** entry.
- Enter the phone number.
- Continue from *Completing the contact on page 74*.

Adding a Get Status call

To continue with adding a Get Status call:

- Press ▼ to move to the **Selcall | ALE Address** entry.
- Enter the address of the station that you want to call.
- Press ▼ to move to the **Status Type** entry, then press ►.
- Press ▲ or ▼ to scroll to the status type that you want to use, then press **OK**.
- If you selected **? Other** as the status type, enter the text/command that you want to send, press  (**Options**), scroll to **Save**, then press  (**Select**).
- Continue from [Completing the contact on page 74](#).

Adding an RFDS Emergency call






NOTE: RFDS Emergency calls are only available when an RFDS HF network is selected or you set the HF Network entry to **<Prompt>**.

To continue with adding an RFDS Emergency call:

- Continue from [Completing the contact on page 74](#).

Completing the contact


To finish entering the information required for the contact:

- Press ▼ to move to the **Call Description** entry.
By default, the call type is entered as the call description.
- Enter the description that you want to use for this call.
- Press  (**Save**) to save the information.
- If you want to add another call press  (**Options**), scroll to **Add Call**, press  (**Select**), then repeat the steps for adding a call.
- Press  (**Options**), scroll to **Save**, then press  (**Select**).

Adding a contact from an entry in the Call Log or Call History

You can save information from the Call Log or Call History to Contacts. This can either be a new call type for an existing contact, or you can add a new contact to hold this call information. The Call Log and Call History are separate entities, however, the process for saving the call information to a contact is the same.

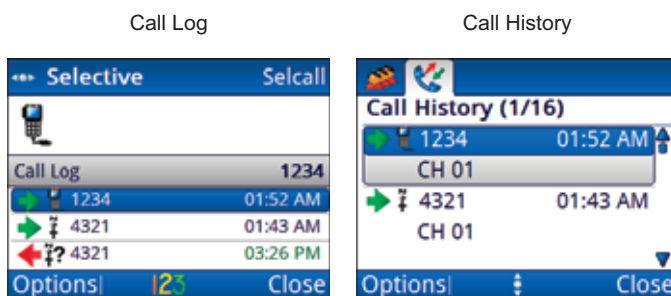Figure 20: Call Log and Call History



To add a contact from the Call Log or Call History:


- Do *one* of the following:
 - Press **CALL**, then scroll to the entry in the Call Log.
 - *Hold* **CALL**, press **▶**, then scroll to the entry in the Call History.
- Press **⏏** (**Options**), scroll to **Save**, then press **⏏** (**Select**).


You are informed if there is a matching contact for the address in the call. If there are no matching contacts, you can edit the details of the call, then create a new contact.

CONTACTS

ADDING A CONTACT FROM AN ENTRY IN THE CALL LOG OR CALL HISTORY

- Do *one* of the following:
 - If there is an existing contact, select the contact, press **OK**, then edit the call as required.
 - If there is no matching contact, edit the call as required.

- Press  (**Save**) to save the information.
You are informed if the call already exists for the contact. If the contact does not exist, add the contact.

- Press  (**Save**) to save the information.

6

Specifications

Table 3: Specifications

Item	Specification
Frequency range	Transmit: 1.6 to 30 MHz Receive: 0.25 to 30 MHz
Channel capacity (single or two-frequency simplex channels)	X1: 100 X2: 1000
Operating modes	Single sideband (J3E) USB and LSB or switched USB/LSB, AM (A3E Rx, H3E Tx), CW (J1A, A1A)
Environment	Ambient temperature: -30 to +60°C (-22 to 140°F) Relative humidity: 95% Derate upper ambient temperature by 1°C (33.8°F) per 330 m (360 yd) above sea level
Cooling	Convection or fan (Option F)

Table 3: Specifications (cont.)

Item	Specification	
Size	2210 RF Unit:	210 mm W × 270 mm D × 65 mm H (8.4 in W × 10.8 in D × 2.6 in H)
	2220/2221 Handset:	74 mm W × 32 mm D × 150 mm H (2.9 in W × 1.3 in D × 5.9 in H)
	2230 Desk Console:	190 mm W × 233 mm D × 81 mm H (7.5 in W × 9.2 in D × 3.2 in H)
	Handset and speaker connector:	42 mm W × 55 mm D × 22 mm H (1.7 in W × 2.2 in D × 0.9 in H)
Weight	2210 RF Unit:	2.8 kg (6.2 lb)
	2220/2221 Handset:	0.3 kg (0.7 lb)
	2230 Desk Console:	1 kg (2.2 lb)
	Handset and speaker connector:	0.4 kg (0.9 lb)
Sealing	All units:	IP41

A

Installing the transceiver

This section contains the following topics:


- [*Overview of mobile stations on page 80*](#)
- [*Overview of fixed stations on page 86*](#)

Overview of mobile stations

A mobile station typically consists of a transceiver, a 12 V DC power supply (battery), an antenna, control and accessory devices, ancillary equipment, and appropriate connecting cables. The antenna is connected to the transceiver by coaxial cable. An automatic tuning antenna also requires a control cable connected to the transceiver.

When space is limited in a mobile situation, the transceiver may be located in the boot or behind/under a seat.

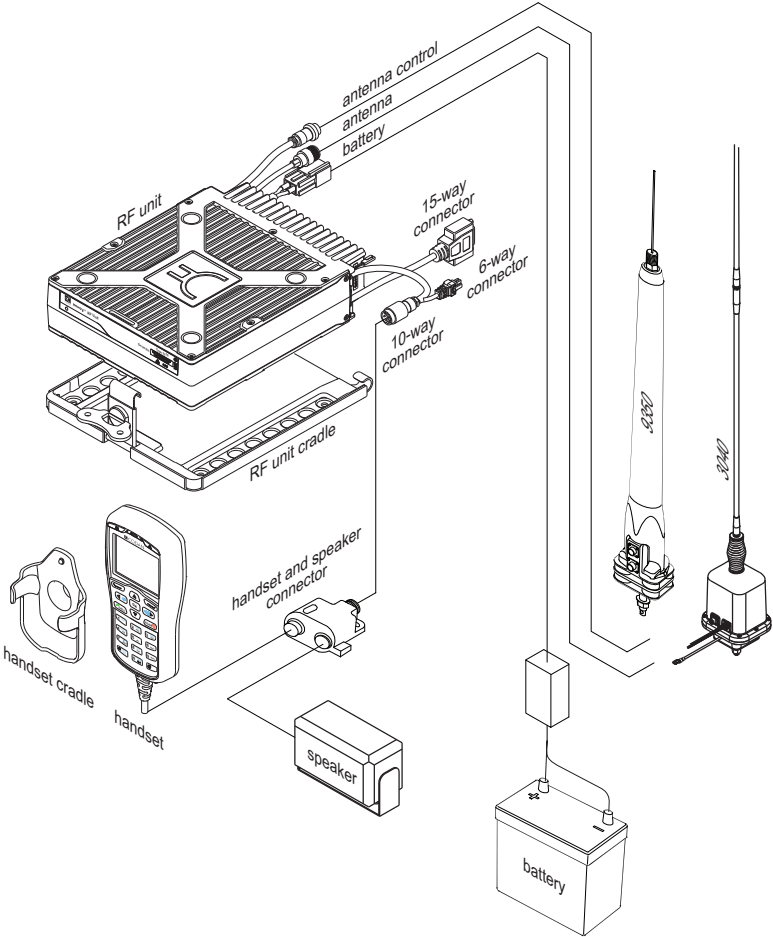Figure 21: Typical mobile station



NOTE: A range of ancillary equipment may be connected to the Envoy™ Transceiver using the 6-way and 15-way connectors at the rear of the RF unit.

Cables in a mobile station

Table 4: Cables for a typical mobile Envoy™ station

Cable	Symbol	Part number
Handset and speaker connector ¹		08-06022-001
Coaxial cable between RF unit and antenna ²	Y	08-01503-006
Control cable between RF unit and antenna ^b	Y	08-05627-006
DC power supply cable ^a		08-03255

1. The part number for the cable corresponds to a standard 6 m cable.
2. The part number for the cable corresponds to a standard 6 m cable. The cable is also available in a number of shorter and longer lengths.

Mounting a mobile Envoy™ station

Most components of a mobile Envoy™ station are provided with their own mounting cradles. For general guidance on suitable locations for equipment and installing these stations see the reference material on the enclosed CD.

Mounting the handset cradle

To mount the handset cradle:

- Mount the handset according to the fitting instructions (Codan part number 15-00149-001) provided with the handset cradle.

Mounting the speaker

To mount the speaker:

- Secure the mounting cradle to the surface with at least two screws.
Ensure there is sufficient space at the rear for the cable.
- Attach the speaker to the cradle with the two screws and rubber washers.

Mounting the handset and speaker connector

To mount the handset and speaker connector:

- Use cable ties or screws to secure the handset and speaker connector in a suitable location.

Mounting the RF unit

CAUTION: If you are transferring a fixed station to a mobile station and you have installed rubber feet to the bottom of the RF unit, you must remove the rubber feet before installing it into the mounting cradle.






To mount the RF unit:

- Secure the mounting cradle to the surface with at least four screws, one in each corner of the cradle.
NOTE: Ensure there is sufficient space at the rear of the cradle to clear the RF unit heatsink.
- If the key is locked to the base of the cradle, flip the key away from the base until it can be rotated (see [Figure 21](#)), then rotate the key in a counterclockwise direction.

- Place the RF unit into the cradle and push it under the tabs at the rear of the cradle, then hold the clamp against the front of the RF unit.
- Rotate the key clockwise, then push the key toward the base of the cradle to lock the RF unit into position.

Connecting a mobile Envoy™ station

To connect a mobile station:

- Connect the lead from the handset and speaker connector to the 10-way plug on the cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug of the handset cable to the  socket on the handset and speaker connector, then secure the locking ring tightly into position.
- Connect the plug at the end of the speaker cable to the  socket on the handset and speaker connector, then secure the cable by pushing it into the slot on the side of the connector.
- Connect the plug at the end of the  cable to the socket at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the opposite end of the  cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting the control cable to an automatic tuning antenna

To connect the control cable to an antenna:

- Connect the socket at the end of the X cable into the plug at the base of the antenna, then secure the locking ring tightly into position.
- Fit the plug at the opposite end of the X cable into the socket at the end of the X lead from the RF unit.

Connecting the power supply


To connect the transceiver to the battery power supply:

- If you are using a 24 V battery supply, connect the battery to a 24 V to 12 V voltage regulator (Codan part number 15-00508).
- Connect the power supply cable (Codan part number 08-03255) to the plug at the end of the **12 V** cable lead from the RF unit.
- Route the power supply cable according to the instructions supplied with the Vehicle Installation Kit (Codan part number 15-00112).
- Insert the 32 A fuse and holder in the power supply cable at a convenient location, as close as possible to the battery terminals.
- Connect the power supply cable to the battery terminals, black to negative, red to positive.

Overview of fixed stations

A fixed station typically consists of a transceiver, an AC transceiver supply connected directly to the mains, an antenna, control and accessory devices, ancillary equipment, and appropriate connecting cables. The transceiver is connected to the DC output lead of the transceiver supply. The antenna is connected to the transceiver by coaxial cable.

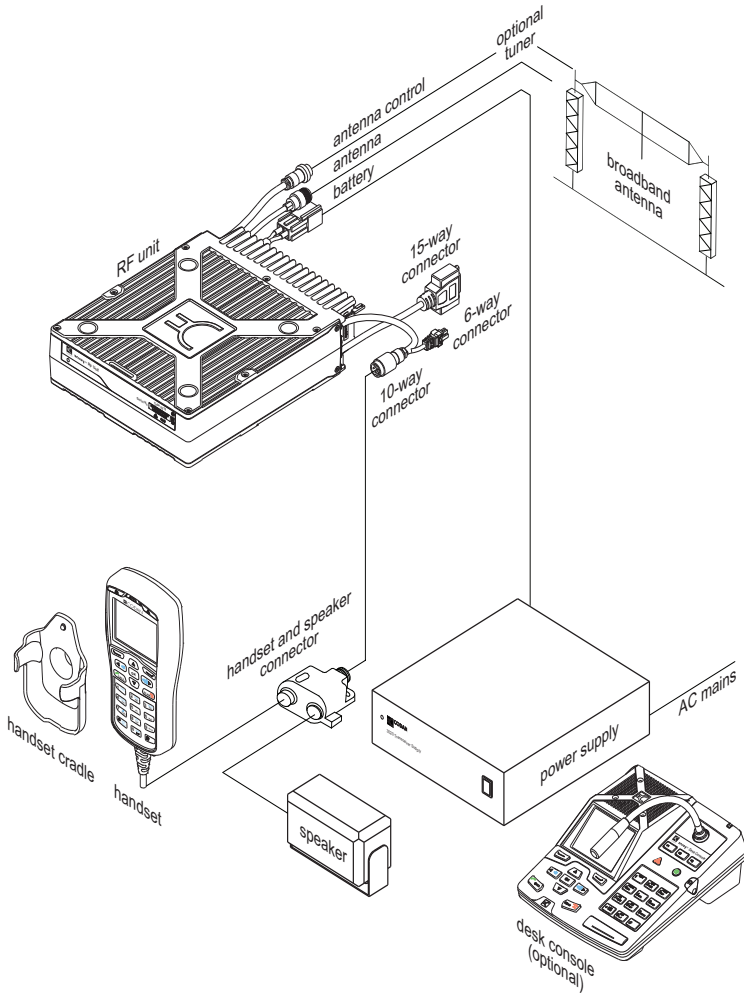Figure 22: Typical fixed station



NOTE: A range of ancillary equipment may be connected to the Envoy™ Transceiver using the 6-way and 15-way connectors at the rear of the RF unit.

Cables in a fixed station

Table 5: Cables for a typical Envoy™ station

Cable	Symbol	Part number
Handset and speaker connector ¹		08-06022-001
Cable between RF unit and optional 2230 Desk Console		08-07205-xxx
Coaxial cable between RF unit and antenna ²	Y	08-01503-006

1. The part number for the cable corresponds to a standard 6 m cable.
2. The part number for the cable corresponds to a 30 m coaxial cable. The cable is also available in a number of shorter lengths.

Mounting a fixed Envoy™ station

A fixed Envoy™ station may be mounted using a 2230 Desk Console. For general guidance on suitable locations for equipment and installing the fixed station see the reference material on the enclosed CD.

RF unit and transceiver supply

The RF unit and the transceiver supply are self-contained and are usually stacked loosely. If you want to mount the RF unit and/or the transceiver supply, contact your Codan representative to obtain a rack-mounting unit or the appropriate mounting cradles.

CAUTION: If you are mounting an RF unit in a cradle, do not fit rubber feet to the bottom of the RF unit.






NOTE: If you are transferring a mobile station to a fixed station, and you are not mounting the RF unit in a cradle, rubber feet can be fitted to the bottom of the RF unit. The rubber feet are available from Codan (Codan part number 30-11208-000).

Rack-mounting unit

A rack-mounting unit consists of a 19 inch rack tray. It can be used to mount your fixed station with either a desk console or the handset and cradle.

Connecting a fixed Envoy™ station

To connect a fixed station:

- Do *one* of the following:
 - Connect the lead from the handset and speaker connector to the 10-way plug on the flying lead from the RF unit, then secure the locking ring tightly into position.
 - Connect the 6 m flying lead from the optional 2230 Desk Console to the 10-way plug on the flying lead from the RF unit, then secure the locking ring tightly into position.
- Do *one* of the following:
 - Connect the plug of the handset cable to the  socket on the handset and speaker connector, then secure the locking ring tightly into position.
 - Connect the optional 2230 Desk Console and the RFU directly using cable 08-07205-xxx, then secure the locking ring tightly into position.
- If you are using the handset and speaker connector and cable, connect the plug at the end of the speaker cable to the  socket on the handset and speaker connector, then secure the cable by pushing it into the slot on the side of the connector.
- Connect the plug at the end of the  cable to the socket at the end of the  cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the opposite end of the  cable to the socket located at the base of the antenna, then secure the locking ring tightly into position.

Connecting a desk console

The desk console may be attached directly to the RFU using cable 08-07205-xxx, or remotely via Ethernet.

Connecting an automatic tuner to the RF unit and antenna (optional)

NOTE: You may need to install a tuner to improve the efficiency of the antenna in your fixed station (see the reference material on the enclosed CD).

NOTE: The tuner used in most applications has connectors at the end of the cables attached to the tuner, as described below. However, you may have a tuner that has sockets on the connector panel of the tuner.

To connect the tuner to the RF unit:

- Connect the plug at the end of the coaxial cable from the tuner to the socket at the end of the Υ cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the plug at the end of the control cable from the tuner to the socket at the end of the Υ cable lead from the RF unit, then secure the locking ring tightly into position.
- Connect the antenna to the antenna connector on the tuner, then secure it tightly into position.

Connecting the transceiver supply

To connect the transceiver to the transceiver supply:

- Connect the DC output from the transceiver supply to the plug at the end of the **12 V** cable lead from the RF unit.
- Connect the transceiver supply to the AC mains supply.

B

Compliance

This section contains the following topics:

- *Overview on page 92*
- *European R&TTE Directive on page 93*
- *EMC and safety notices on page 96*
- *RCM approval on page 99*

Overview

This section describes how to ensure the Envoy™ Transceiver complies with the European R&TTE Directive 1999/5/EC.


This section also contains the requirements for RCM.

European R&TTE Directive

The Envoy™ Transceiver has been tested and complies with the following standards and requirements (articles of the R&TTE Directive):

- Article 3.1b: ETSI EN 301 489-1 V1.8.1
- Article 3.1b: ETSI EN 301 489-15 V1.2.1
- Article 3.2: Australian type approval according to AS/NZS 4770:2000 + transmitter RSE tests to the limits specified in Annex 6, section 6.1.2 of CEPT/ERC/Recommendation 74-01E
- Article 3.1a: assessed against ICNIRP and FCC (pending) requirements
- Article 3.1a: (LVD) EN 60950-1:2006/AC:2011
- Article 3.1a: (MPE) EN 62311:2008

Product marking and labelling

Any equipment supplied by Codan that satisfies these requirements is identified by the **CE 0889**  markings displayed on the product.

Radiation safety (EU installations only)

To ensure optimal transceiver performance and to avoid exposure to excessive electromagnetic fields, the antenna system must be installed according to the instructions provided.

WARNING: High voltages exist on the antenna during transmission and tuning. Do not touch the antenna during these activities. RF burns may result.

WARNING: Install the grounding system or counterpoise as directed to prevent RF burns from any metal part of the transceiver.

WARNING: You should not transmit from your transceiver or tune the antenna unless people are beyond the safe working distance for the installation.

The following safe working distances apply:

- anywhere within the vehicle cabin with externally mounted mobile antenna
- 3 m unobstructed, of any part of a mobile antenna
- 2 m of any part of a fixed antenna

Safe working distance is based on continuous exposure to CW-type transmissions, as set out in the Human Exposure Restrictions standard EN 62311:2008.

Declaration of Conformity and Notified Body Letter of Opinion

The CE Declaration of Conformity and Notified Body Letter of Opinion for this product are available upon request to Codan or a Codan-authorized supplier.

Protection of the radio spectrum

CAUTION: Most countries restrict the use of HF radio communications equipment to certain frequencies and bandwidths and/or require such equipment to be licensed. It is the user's responsibility to check the specific requirements with the appropriate communications authorities. Some options may vary the stated compliance. If necessary, contact Codan for more information.

The receive and transmit frequencies may be any frequencies within the HF range. However, the transmit frequencies can only be those allocated to you by the relevant government authority in your country.

Spectral regulations may require the TxD option to be installed in the transceiver. In this case, you cannot add channels with new transmit frequencies. You can, however, add receive-only channels, and channels with the same transmit frequency as an existing channel. If the TxP option is installed in the transceiver, you cannot add channels.

EMC and safety notices

Radiation safety (non-EU installations)

To ensure optimal transceiver performance and to avoid exposure to excessive electromagnetic fields, the antenna system must be installed according to the instructions provided.

WARNING: High voltages exist on the antenna during transmission and tuning. Do not touch the antenna during these activities. RF burns may result.

WARNING: Install the grounding system or counterpoise as directed to prevent RF burns from any metal part of the transceiver.

WARNING: You should not transmit from your transceiver or tune the antenna unless people are beyond the safe working distance for the installation.

The following safe working distances apply:

- anywhere within the vehicle cabin with externally mounted mobile antenna
- 1.5 m (5 ft) unobstructed, of any part of a mobile antenna
- 2 m (7 ft) of any part of a fixed antenna in a data installation of up to 125 W output
- 5 m (17 ft) of any part of a fixed antenna in a data installation of up to 1 kW output

Safe working distance is based on continuous exposure to CW-type transmissions, as set out in the ICNIRP Exposure Guidelines (1998) for occupational exposure. Safe working distance can be reduced with normal voice communication.

EMC

CAUTION: If it is necessary to remove the covers at any stage, they must be refitted correctly before using the equipment.

To ensure that compliance with the EMC Directive is maintained.

- Use standard shielded cables supplied from Codan (where applicable).
- Ensure the covers for the equipment are fitted correctly.
- Cover unused connectors on the RF unit with the protective caps supplied to prevent electrostatic discharge passing through your transceiver.

Electrical safety

To ensure compliance with the European Low Voltage Directive is maintained, you must install and use the Envoy™ Transceiver in accordance with the instructions in the Envoy™ Transceiver Getting Started Guide and the Envoy™ Transceiver Reference Manual.

When using equipment that is connected directly to the AC mains these precautions must be followed and checked before applying an AC main supply to the unit.

To ensure electrical safety:

- Use the standard AC mains cable supplied.
- Ensure the covers for the equipment are fitted correctly.

CAUTION: If it is necessary for a qualified electronics technician to remove the covers during servicing, they must be refitted correctly before using the equipment.



WARNING: A protective earth connection must be included in the mains wiring to the 3020 Transceiver Supply.

WARNING: The protective cover must always be fitted when the 3020 Transceiver Supply is connected to the AC mains.

Earth symbols

Chassis earth connection points are provided on the Envoy™ Transceiver and 3020 Transceiver Supply. A protective earth is provided in the AC mains wiring of the 3020 Transceiver Supply. This protective earth must be connected at the AC mains supply outlet. The symbols shown below are used to identify the earths on the equipment.

Table 6: Earth symbols

Symbol	Meaning
	Chassis earth
	Protective earth

RCM approval

The Envoy™ Transceiver meets the requirements of the Australian Communications and Media Authority: Radiocommunications (MF and HF equipment—Land Mobile Service) Standard 2003 (AS/NZS 4770) and Radiocommunications (HF CB and Handphone Equipment) Standard 2008 (AS/NZ 4355).

This page has been left blank intentionally.

Index

Numerics

- 2221
 - entering text 41

A

- advanced view 29
- antenna
 - manual tune 9
 - selecting 23

B

- basic view 29
- built-in test 8

C

- call
 - adding from the Call Log/Call History 75
 - adding to contact
 - Channel Test 20, 71
 - Emergency 20, 71
 - Get Position 20, 71
 - Get Status 22, 73
 - Message 21, 71
 - Phone 22, 72
 - RFDS Emergency 73
 - Selective 20, 71
 - Send Position 20, 71
 - from Emergency key 8
 - making
 - Message 61
 - Selective 60
 - to a contact 64
- channel
 - adding 17
 - finding 51
 - selecting 51
- channel screen 49
- Channel Test call
 - adding to contact 20, 71
- channels
 - capacity 77
- character-entry mode
 - selecting 10
- check box
 - selecting/deselecting 43
- clarifier 9
- compliance 91
 - EMC and safety notices
 - earth symbols 98
 - electrical safety 97
 - EMC 97
 - radiation safety (non-EU) 96
 - overview 92
 - R&TTE 93
 - declaration of conformity and notified body letter of opinion 94
 - product marking and labelling 93
 - protection of the radio spectrum 94
 - radiation safety (EU only) 93
 - RCM approval 99
- contact
 - adding 20, 70
 - adding Channel Test call 20, 71
 - adding Emergency call 20, 71
 - adding from the Call Log/Call History 75
 - adding Get Position call 20, 71
 - adding Get Status call 22, 73

- adding Message call 21, 71
- adding Phone call 22, 72
- adding RFDS Emergency call 73
- adding Selective call 20, 71
- adding Send Position call 20, 71
- cooling 77
- crosspatch
 - operating mode 9

D

- date
 - setting 15, 57
- deleting 36
- desk console 7
 - location 16
 - size 78
 - weight 78

E

- Easitalk 10
- editing 36
- Emergency call
 - adding to contact 20, 71

F

- firmware upgrade
 - USB stick 67
- fixed station 86
- free-tune receive 9
- frequency
 - range 77

G

- Get Position call
 - adding to contact 20, 71
- Get Status call
 - adding to contact 22, 73

H

- handset
 - size 78
- handset (2220)
 - weight 78

I

- icon
 - selecting 35

K

- keypad 8

L

- language
 - selecting 15

M

- menu bar
 - selecting an option 36
- menu structure
 - navigating 25
- Message call
 - adding to contact 21, 71
 - making 61
- microphone
 - using 56
- mobile station 80
- mode
 - changing 51
 - selecting 9
- moving 36, 45
- mute
 - switching on or off 54
- mute type
 - selecting 55
- muting 54

O

- operating modes 77
- order of items in a list
 - changing 45

P

- peripheral
 - selecting 24
- Phone call
 - adding to contact 22, 72
- program profile
 - USB stick 67
- program secure keys
 - USB stick 67

R

- read profile
 - USB stick 67
- relative humidity 77

RF unit
 size 78
 weight 78

RFDS Emergency call
 adding to contact 73

S

scan table
 adding a channel 18

scanning 52
 pausing 53
 switching on or off 52

screen
 channel 49

secure mode 10

Selective call
 adding to contact 20, 71
 making 60

self address
 entering 19

Send Position call
 adding to contact 20, 71

size
 desk console 78
 handset 78
 RF unit 78

slider
 moving 44

special characters
 entering 10

station
 fixed 86
 cables 88
 desk console
 connecting 90

mobile 80
 cables 82
 connecting control cable to automatic
 tuning antenna 85
 connecting to battery power supply 85
 mounting 82
 mounting handset and speaker connector
 83
 mounting handset cradle 82
 mounting RF unit 83
 mounting speaker 83

T

temperature 77

text
 editing 38

time
 setting 15, 57

transceiver
 installing 79
 operating 47
 switching off 48
 switching on 48

U

USB stick 67

V

value
 finding 32

view
 advanced 29
 basic 29
 overview 29
 switching between 31

W

weight
 desk console 78
 handset (2220) 78
 RF unit 78

wizard
 starting 14

word
 finding 32

This page has been left blank intentionally.



CODAN
RADIO COMMUNICATIONS

www.codanradio.com



ASIA PACIFIC (Head Office)

Codan Limited
81 Graves Street
Newton SA 5074
AUSTRALIA

T: +61 8 8305 0311
F: +61 8 8305 0411

asiasales@codanradio.com

EUROPE, MIDDLE-EAST & AFRICA

Codan (UK) Ltd
Unit C4, Endeavour Place
Coxbridge Business Park
Farnham Surrey GU10 5EH
UNITED KINGDOM

T: +44 1252 717 272
F: +44 1252 717 337

uksales@codanradio.com

AMERICAS

Codan US, Inc.
1 Fishers Road
Pittsford NY 14534
USA

T: +1 585 419 9970
F: +1 585 419 9971

ussales@codanradio.com